



HDWR Global KeyClick-BC110 Wired Keyboard and Mouse Combo Instruction Manual

[Home](#) » [HDWR Global](#) » HDWR Global KeyClick-BC110 Wired Keyboard and Mouse Combo Instruction Manual



Contents

- [1 HDWR Global KeyClick-BC110 Wired Keyboard and Mouse Combo](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



HDWR Global KeyClick-BC110 Wired Keyboard and Mouse Combo



Product Specifications

- **Warranty:** 1 year
- **Housing color:** black
- **Material:** ABS
- **Keyboard Type:** Mechanical
- **Number of Keys:** 104
- **Keyboard layout:** QWERTY

- **Additional functions:** numeric keypad, function keys, Plug & Play
- **Supported languages:** Polish, English, French, etc.
- **Supported operating systems:** Windows, Mac
- **Interface:** USB
- **Cable length:** 1.5 m
- **Computer mouse DPI:** 1200
- **Device dimensions:** 43.5 x 14 x 2 cm
- **Mouse dimensions:** 12 x 8 x 4 cm
- **Package dimensions:** 56 x 16 x 3.5 cm
- **Device weight:** 450 g
- **Weight of the device with packaging:** 680 g

Product Usage Instructions

Set contents:

- Wireless keyboard,
- computer mouse.

Features:

- **Keyboard Type:** Mechanical
- **Keyboard layout:** QWERTY
- **Number of Keys:** 104
- **Interface:** USB
- **Supported operating systems:** Windows, Mac
- **Additional functions:** numeric keypad, function keys, Plug & Play

Function keys

The function keys are located on the top row of the keyboard and are marked with symbols from F1 to F12. Each of these keys has a specific function that can vary depending on the software you use.

- **F1:** Usually opens help or documentation for the current program.
- **F2:** Allows you to quickly rename files and folders in the operating system.
- **F3:** Activates the search function in multiple applications.
- **F4:** Often used in conjunction with the Alt key to close the current window.
- **F5:** Refreshes a web page or folder content.
- **F6:** Moves the cursor to the address bar in the web browser.
- **F7:** Activates spelling and grammar checking in word processors.
- **F8:** Can be used to access advanced system boot options.
- **F9:** In some programs, it is used to refresh documents.
- **F10:** Activates the menu bar in the active window.
- **F11:** Toggles full-screen mode in web browsers.
- **F12:** Opens the "Save As" window in many programs.

Additionally, these keys also have alternate functions available when the “Fn” key is pressed, which are visible as blue symbols on the function keys.

These features include:

- **F1 – F3:** Used to adjust volume or other system settings.
- **F4 – F8:** Used to handle media such as play, pause, rewind

Numeric keypad

The numeric keypad is usually located on the right side of the keyboard and consists of a numeric layout plus a few additional function keys. It is extremely useful for people who often work with numbers, such as entering data into spreadsheets or performing calculations.

- **Digits 0-9:** These are used to enter numbers quickly.
- **Num Lock Key:** Toggles between numeric mode and cursor functions. When Num Lock is enabled, the keys act as numbers. When it is disabled, the keys can act as arrows, Home, End, Page Up, Page Down, etc.
- **Math keys (+, -, *, /):** Facilitate simple arithmetic calculations.
- **Enter key:** Commits entered data or commands, similar to the main Enter key on the keyboard.
- **Del Key:** Deletes the characters to the right of the cursor or selected items.

Connecting the Keyboard

To connect a wired keyboard to your computer, simply insert the USB plug into an available USB port on your computer. The plug&play function will automatically recognize the new device, which means that the operating system will install the necessary drivers without the need to manually download additional software. After a few seconds, the keyboard will be ready for use. You can check this by opening a text editor and pressing a few keys. If the text you are typing appears on the screen, it means that the keyboard is working properly and is ready to go.

To connect the wired keyboard to your computer:

1. Insert the USB plug into an available USB port on your computer.
2. The plug & play function will automatically recognize the new device.
3. The operating system will install necessary drivers without additional software.
4. After a few seconds, the keyboard will be ready for use.

Keyboard Usage Guidelines:

1. Avoid humid environments, water, rain, and extreme temperatures.
2. Avoid prolonged exposure to sunlight and flames.
3. Avoid placing near sharp objects that may damage the keyboard.
4. Keep the keyboard away from humid environments and places with increased humidity (swimming pools, saunas, etc.). Also, do not expose the keyboard to water and rain.
5. Do not expose the keyboard to excessive or too low ambient temperatures.
6. Do not expose the keyboard to sunlight for long periods of time.
7. Do not place the keyboard near a flame (e.g. gas stoves, candles and fireplaces).
8. Avoid objects with sharp edges that may damage the keyboard case.

FAQ

Q: How do I know if the keyboard is working properly after connecting?

A: Open a text editor and type a few keys. If the text appears on the screen, the keyboard is working correctly.


Q: Can the function keys be customized for specific software?

A: The function keys' specific functions can vary depending on the software you are using. Some software may allow customization of these keys.

Q: Is the keyboard compatible with gaming consoles?

A: The keyboard is primarily designed for use with computers but may work with certain gaming consoles that support USB keyboards.

Documents / Resources

<div>Manual</div> <div>Wired keyboard and mouse combo</div> <div>KeyClick-BC110</div> <div></div>	HDWR Global KeyClick-BC110 Wired Keyboard and Mouse Combo [pdf] Instruction Manual KeyClick-BC110, KeyClick-BC110 Wired Keyboard and Mouse Combo, Wired Keyboard and Mouse Combo, Keyboard and Mouse Combo, Mouse Combo
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.