

HDWR HD10C Automatic Barcode Reader with Stand User Manual

Contents

1 User Manual

1.1 Automatic barcode reader with stand HD10C

1.1.1 Specification

1.1.2 The set contains:

1.1.3 Features:

1.1.4 Factory reset

1.1.5 Code Scanning Modes

1.1.6 Beep settings

1.1.7 Setting trailing characters

1.1.8 Case settings

1.1.9 Reading inverted codes (on a black background)

1.1.10 Add a prefix and suffix

1.1.11 Hide barcode characters

1.1.12 Character Table

2 Documents / Resources

2.1 References

User Manual

Automatic barcode reader with stand HD10C

Specification

- **Light source:** 620nm LED
- **Sensor Type:** CMOS
- **Scanning method:** manual (on the button) / automatically (after the code is brought closer)
- **Scan confirmation:** light and sound signal
- **Scanning speed:** 200 times/second
- **Interface:** USB
- **Cord length:** 140 cm
- **Protection level:** IP54
- **Device dimensions:** 16 x 9.5 x 6.5 cm
- **Base dimensions:** 24 x 12 x 12 cm
- **Package dimensions:** 18.5 x 12 x 8.5 cm
- **Weight:** 300 g
- **Package weight:** 370 g

- **Operating temperature:** -20 – 50°C
- **Storage temperature:** -40 – 60°C
- **Read 1D codes:** EAN-8, EAN-13, UPC-A, UPC-E, CODE 128, CODE 39, CODE 93, CODE 11, CHINESE 2 of 5, CODABAR, MSI, Interleaved 2 of 5 (ITF), others one-dimensional

The set contains:

- Barcode Reader
- Reader stand for self-assembly
- Built-in USB communication cable
- Manual

Features:

- Wired reader for scanning standard barcodes
- Scan codes on LCD, LED/OLED and mobile device displays
- Barcode scanning in automatic mode
- Any character can be programmed before or after the code

Factory reset

 Restore default settings	
Code Scanning Modes	
 Manual mode	 Automatic mode
Beep settings	
 Sound On (default)	 Sound off

Setting trailing characters	
 CR	 Unmarked
 TAB	 LF+CR
Case settings	
 Uppercase and lowercase letters	 No case conversion
 Uppercase letters only	 Lowercase only
Reading inverted codes (on a black background)	
 Enabled	 Off (default)

Add a prefix and suffix	
 Add Prefix	 Add a suffix
 Cancel prefix	 Anuluj suffix
 Save settings	
To set a prefix or suffix, first scan the code “Add a prefix” or “Add a suffix”, then scan the appropriate character from the table at the end of this manual, and finally read the code “Save settings”.	

Hide barcode characters	
 Hiding Initial Characters	 Hide trailing characters
In order to hide individual characters in the barcode, first scan the code “Hide Leading Characters” or “Hide Trailing Characters” and then read the code at the end of this manual, corresponding to the number of digits to hide, with the scanner. For example, if you want to hide the first two characters of a barcode, you must first scan the code “Hide Initial Characters”, then scan the code “0” and “2” from the table.	

Character Table

 SOH	 STX	 ETX
 EOT	 ENQ	 ACK

 BEL	 Backspace	 TAB
 LF	 VT	 FF
 CR	 SO	 SI
 DLE	 DC1	 DC2
 DC3	 DC4	 NAK
 SYN	 ETB	 CAN
 EM	 SUB	 ESC
 FS	 GS	 RS
 US	 SPACE	 !
 “	 #	 \$

 %	 &	 '
---	---	---

 (	)	 *
 +	 ,	 -
 .	 /	 0
 1	 2	 3

 4	 5	 6
 7	 8	 9



:



;



<



=



>



?



@



A



B



C



D



I



F



G



H



I



J



K



L



M



N

 O	 P	 Q
 R	 S	 T
 U	 V	 W

 X	 Y	 Z
 [	 \"	]
 ^	 _	 `
 a	 b	 c



d



e



f



g



h



i



j



k



l



m



n



o



p



q



R



s



t



u



v



w



x



y



z



{



|



}



~



Delete



F1



F2



F3



F4



F5



F6



F7



F8



F9



F10



F11



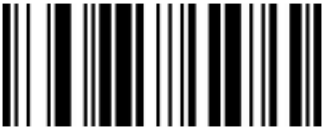
F12



INSERT



HOME

		
Page Up	Delete	END
		
Page Down	Right arrow	Left arrow
		
Bottom arrow	Top arrow	



hdwrglobal.com

Documents / Resources

User Manual Automatic barcode reader with stand HD10C 	HDWR HD10C Automatic Barcode Reader with Stand [pdf] User Manual HD10C Automatic Barcode Reader with Stand, HD10C, Automatic Barcode Reader with Stand, Barcode Reader with Stand, Reader with Stand, Stand
---	--

References

- [User Manual](#)

