

Heath WLTX-313-A Wireless Plug In Chime Instruction Manual

Home » Heath » Heath WLTX-313-A Wireless Plug In Chime Instruction Manual

Contents

- 1 Heath WLTX-313-A Wireless Plug-In Chime
- 2 Operation
- 3 Troubleshooting
- **4 FCC STATEMENT**
- **5 ONE-YEAR LIMITED WARRANTY**
- 6 Documents / Resources
 - **6.1 References**
- **7 Related Posts**



Heath WLTX-313-A Wireless Plug-In Chime



This package includes (The style of the push button and chime may vary from illustration):

| Model | Wireless plug-in chime | | Wireless push button | Hardware pack |
|-------------|------------------------------|--|----------------------|------------------|
| WLTX-313-A* | ✓ | | ✓ | ~ |

1. Plug in wireless chime (see Figure 1).

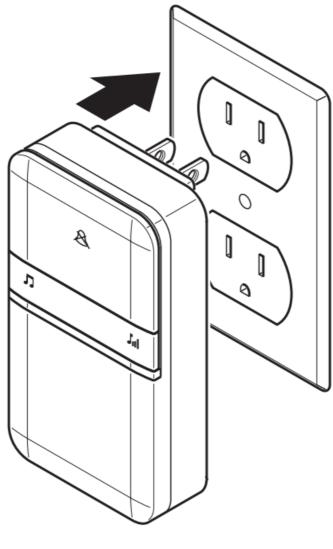


Figure 1

IMPORTANT: This power unit is intended to be correctly orientated in its vertical mount position. This plug will fit into the power outlet only as recommended by the manufacturer. Do not try reversing the plug. This is a safety feature. If you are unable to insert the plug fully into the outlet, contact your electrician to replace your obsolete outlet.

- 2. Test range. Temporarily position the push button where you want it mounted. Press the push button to verify chime and push button work properly. If the chime does not sound, see Troubleshooting.
- 3. Mount the push button. Use either screws or Double-sided tape to mount the push button.
 - Screw Mounting: To mount with screws, remove the back of the case by inserting a small screwdriver into the slot on the top or bottom of the push button and twisting (see Figure 2).

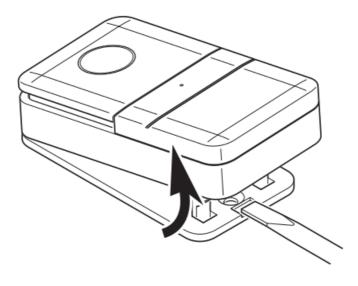


Figure 2

Note: Remove material in screw holes (if needed) before mounting with screws. Attach the back of the case to the door jamb or wall (see Figure 3). Snap the front of the push button on.

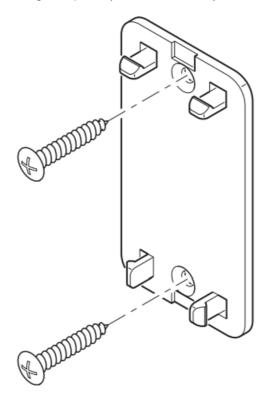



Figure 3

• Tape Mounting: When attaching the push button using double-sided tape, make sure the surface of the door jamb or wall is clean.

Operation

Chime Mute

The chime can be muted as desired. Press and release the mute icon to mute the chime. The chime will flash blue-green each time the push button is pressed while the chime is muted. Press and release the mute icon again to unmute the chime. The chime will flash green each time the push button is pressed when the chime is unmuted.

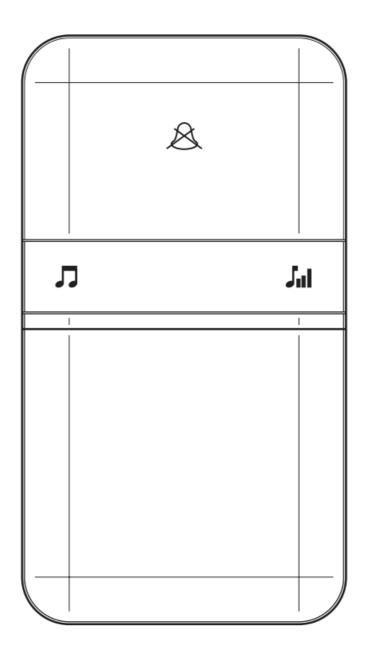

Volume Control

The chime has four adjustable volume levels. Press and release the volume control icon to select the desired volume level.

Tune Selection

The chime has six different selectable tunes. Press and release the tune icon until the desired tune is heard. This tune will now play each time the push button is pressed.

Available Tunes

- Ding-Dong
- Westminster
- Whittington
- · Auld Lang Syne
- Relax
- Beethoven's 5th

Troubleshooting

- 1. PROBLEM: The Chime does not sound or ring one time and quits.
 - A. POSSIBLE CAUSE: The push button and chime are not synced.
 - A. CORRECTIVE ACTION: Sync the push button and chime.
 - Press and hold the "Mute" icon on the chime for approximately 3 seconds. The chime will sound a "Beep-Beep" and flash green twice.
 - Press the push button within 10 seconds. The chime will sound a "Beep-Beep" tone to indicate the
 push button is synced.
 - Press the push button to ensure operation.
 - B. POSSIBLE CAUSE: Chime is not receiving power.
 - B. CORRECTIVE ACTION: Make sure the plug-in chime has power.
- 2. PROBLEM: Chime does not work after installation.
 - A. POSSIBLE CAUSE: Chime or push button is mounted on metal or near metal studs.

Note: Metal reduces transmission range.

- A. CORRECTIVE ACTION: Use 1/4 in. to 1/2 in. (6 to 13 mm) wood shims to move the push button away from the metal surface. Move the chime to a different wall outlet.
- B. POSSIBLE CAUSE: Chime is mounted near concrete floor or wall.

Note: Concrete may reduce range.

- B. CORRECTIVE ACTION: Move the chime away from the concrete surface.
- C. POSSIBLE CAUSE: The chime and push buttons are installed too far apart.
- C. CORRECTIVE ACTION: Locate the chime closer to the push button.

Note: The push button and chime come synced from the factory. The range of the wireless chime can vary with location, temperature, and battery condition.

Technical Service

Please contact us for assistance before returning the product to the store or HeathCo LLC. If you experience a problem, follow this guide. You may also contact us between 8:00 AM to 5:00 PM CST (M-F). When contacting Technical Service, please include the following information: Name, Street Address, Daytime Phone Number, Email Address, Model Number, Date of Purchase, Place of Purchase, Product Issue, and DATED SALES RECEIPT FOR WARRANTY.

REQUESTS.

No Service Parts Available for this Product HeathCo LLC P.O. Box 90045 2445 Nashville Road Bowling Green, KY 42101, USA

ATTN: Technical Service Internet: www.hzsupport.com

Phone: 1-800-858-8501 (English Only)

Fax: 1-270-846-8500

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-003 (B)/NMB-003 (B)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The distance between the user and the products should be no less than 20cm. This device contains license-exempt transmitters)/receivers) that comply with Innovation, Science and Economic Development (ISED) Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The device has been evaluated to meet general RF exposure requirements. This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

ONE-YEAR LIMITED WARRANTY

This is a "Limited Warranty" which gives you specific legal rights. You may also have other rights which vary from state to state or province to province. For one year from the date of purchase, any malfunction caused by factory defective parts or workmanship will be corrected at no charge to you. Not Covered – Repair service, adjustment, and calibration due to misuse, abuse,e or negligence, light bulbs, batteries, and other expendable items are not covered by this warranty.

Any damage to the light fixture resulting from the use of chemicals or a pressure washer machine is not covered by this warranty. Unauthorized service or modification of the product or only furnished component will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, setup time, loss of use, unauthorized service, or return shipping charges. This warranty covers only HeathCo LLC assembled products and is not extended to other equipment and components that a customer uses in conjunction with our products.

THIS WARRANTY IS EXPRESSLY INSTEAD OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY, REPRESENTATION, OR CONDITION OF MERCHANTABILITY OR THAT THE PRODUCTS ARE FIT FOR ANY PARTICULAR PURPOSE OR USE, AND SPECIFICALLY INSTEAD OF ALL SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

REPAIR OR REPLACEMENT SHALL BE THE SOLE REMEDY OF THE CUSTOMER AND THERE SHALL BE NO LIABILITY ON THE PART OF HEATHCO LLC FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORESEEABLE. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Please keep your dated sales receipt, it is required for all warranty requests.

HeathCo LLC reserves the right to discontinue and change specifications at any time without notice and without incurring any obligation to incorporate new features in previously sold products.

Chime Purchase Information

PLEASE KEEP YOUR DATED SALES RECEIPT, IT IS REQUIRED FOR ALL WARRANTY REQUESTS.

Documents / Resources



<u>Heath WLTX-313-A Wireless Plug In Chime</u> [pdf] Instruction Manual WLTX-313-A Wireless Plug In Chime, WLTX-313-A, Wireless Plug In Chime, Chi

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.