



# HECO BellaDonna Two-Way Bookshelf Speaker Owner's Manual

[Home](#) » [HECO](#) » HECO BellaDonna Two-Way Bookshelf Speaker Owner's Manual 

## Contents

- [1 HECO BellaDonna Two-Way Bookshelf Speaker](#)
- [2 INCLUDED IN DELIVERY](#)
- [3 ASSEMBLY](#)
- [4 MAINTENANCE](#)
- [5 SPECIFICATIONS](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

 
# HECO<sup>®</sup>

**HECO BellaDonna Two-Way Bookshelf Speaker**





At the end of the product's useful life, please dispose of it at appropriate collection points provided in your country

1

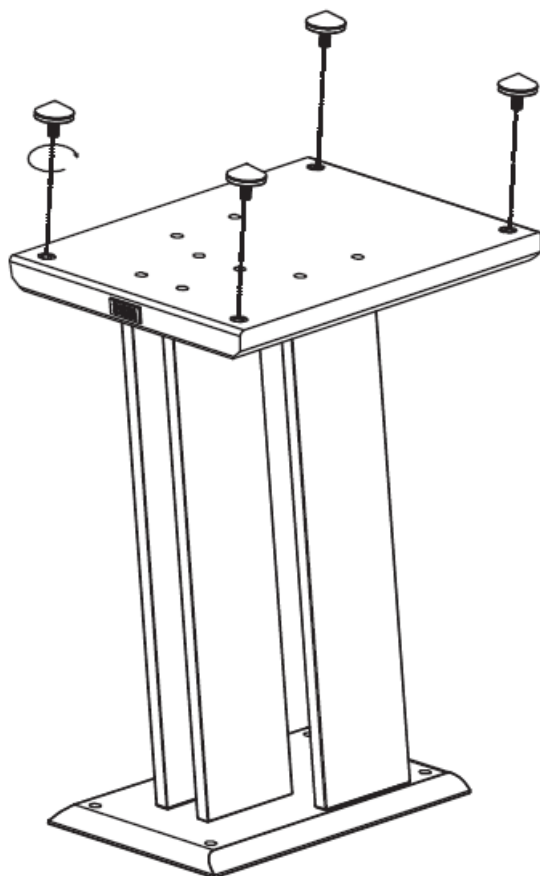


2

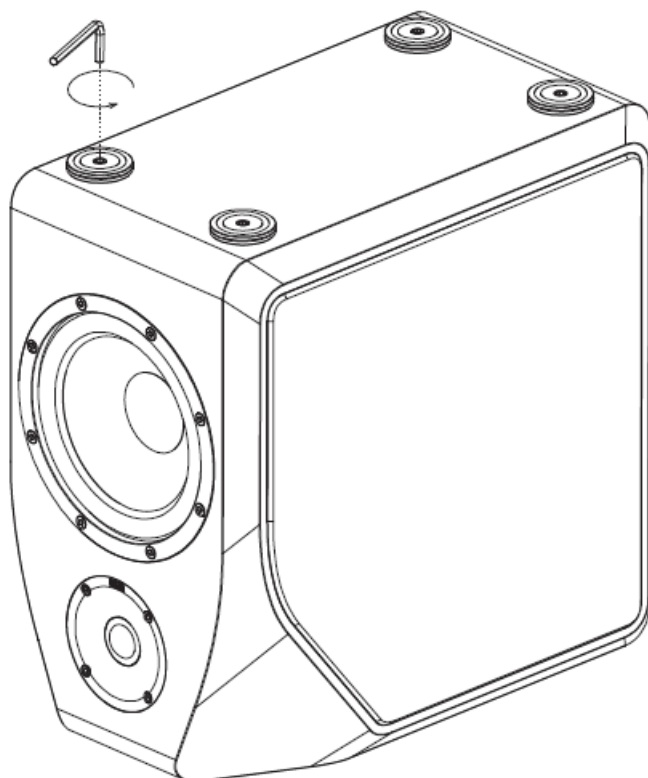 

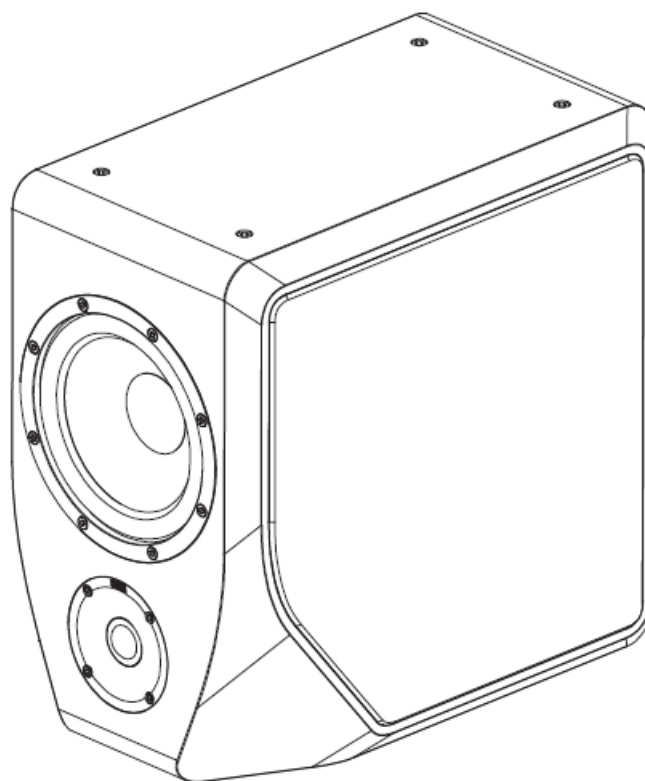 

**3**

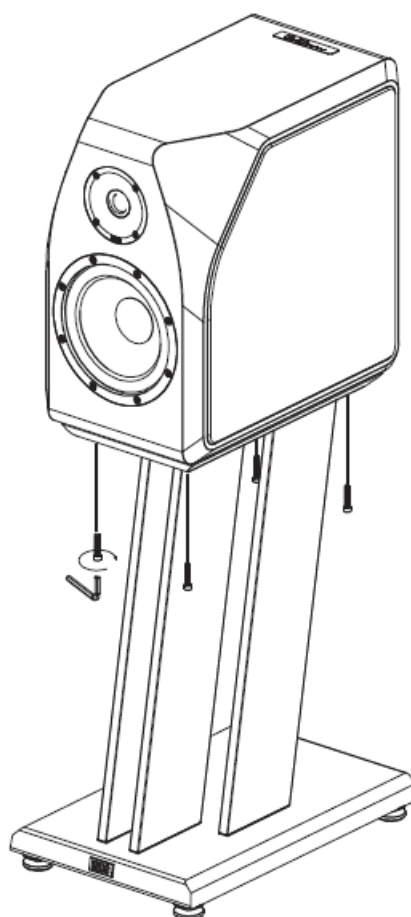 

**Dear HECO Customer,**

Congratulations on your fine new loudspeakers and thank you very much for choosing HECO! You have made an excellent choice. The high-quality speakers produced by HECO are renowned all over the world. Please study the instructions and information below carefully before using your new loudspeakers.

**INCLUDED IN DELIVERY**

- 2 speaker stands, pre-assembled
- 8 metal spikes with lock nut
- 8 washers with rubber insert
- 8 fixing screws M6 x 30 mm
- Allen key

The BellaDonna Stand speaker stand has been specially developed for the HECO BellaDonna loudspeakers. The sturdy stand provides a secure base and optimal setup height for the speakers.

## **ASSEMBLY**

### **SPIKE MOUNTING**

Carefully remove the stands from the packaging and first place them on the floor with the large plate facing up. First mount the four metal spikes by screwing them into the four threaded inserts in the base plate. (Fig. 1) Now place the stand with the base plate facing down in the desired position. Please note the installation instructions set out in the operating instructions for the speakers.

To protect the floor, the washers can be placed under the metal spikes with the rubber insert pointing downwards.

### **ADJUSTING THE SPIKES**

The metal spikes are height adjustable. This allows any unevenness in the floor to be leveled out, guaranteeing a firm and secure base for the speaker. To do this, loosen the lock nut and adjust the spike by turning it. Once the right setting has been found, tighten the lock nut again.

### **REMOVING THE BELLADONNA LOUDSPEAKER FEET**

Before the speaker can be mounted on the stand, the speaker's flat aluminum feet must first be removed. To do this, please loosen the screws on the feet with the Allen key and remove them. (Fig. 2)

### **MOUNTING THE SPEAKER ON THE STAND**

Now place the BellaDonna speaker in the center of the upper plate of the stand so that the speaker protrudes equally over the plate on all sides. In this position, the holes in the plate are aligned with the threaded inserts in the bottom of the speaker.

Now screw the upper plate to the speaker from below using the M6 x 30 mm screws (provided). Use the Allen key provided to do this. (Fig. 3)

## **MAINTENANCE**

It is best to clean the surfaces with a mild household cleaner. Under no circumstances use furniture polish or similar.

## **SPECIFICATIONS**

### **BellaDonna Stand**

- Dimensions (WxHxD): 310 x 640 x 475 mm
- Maximum load capacity: 40 kg
- Weight: 17.5 kg

SUBJECT TO TECHNICAL CHANGE.


Congratulations! You have made a wise selection in becoming the owner of a HECO HiFi equipment. Due to high quality HECO HiFi products have earned an excellent reputation through the western world. And this high quality

standard enables us to grant a 5-years warranty for HECO HiFi products.

The equipments are checked and tested continuously during the entire production process. In case you have problems with your HECO HiFi equipment, kindly observe the following:

1. The guarantee period commences with the purchase of the component and is applicable only to the original owner.
2. During the guarantee period we will rectify any defects due to faulty material or workmanship by replacing or repairing the defective part at our discretion. Further claims, and in particular those for price reduction, cancellation of sale, compensation for damages or subsequential damages, are excluded.
3. Unauthorized tampering with the equipment will invalidate this guarantee.
4. Consult your authorized dealer first, if guarantee service is needed. Should it prove necessary to return the component to the factory, please insure that
  - the component is packed in original factory packing in good condition
  - you enclose your receipt as proof of purchase.
5. Excluded from the guarantee are:
  - Illuminates
  - Wear parts
  - Shipping damages, either readily apparent or concealed (claims for such damages must be lodged immediately with forwarding agent, the railway express office or post office).
  - Scratches in cases, metal components, front panels, etc. (You must notify your dealer directly of such defects within three days of purchase.)
  - Defects caused by incorrect installation or connection, by operation errors (see operating instructions), by overloading or by external force.
  - Equipments which have been repaired incorrectly or modified or where the case has been opened by persons other than us. • Consoquential damages to other equipments.
  - Reimbursement of cools, without our prior consent, when repairing damages by third parties.

## Documents / Resources

	<p><a href="#">HECO BellaDonna Two-Way Bookshelf Speaker</a> [pdf] Owner's Manual BellaDonna, Two-Way Bookshelf Speaker</p>
-------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------