

HEINNER

HEINNER HAC-
CR09WHN Remote
Controller



HEINNER HAC-CR09WHN Remote Controller User Manual

[Home](#) » [HEINNER](#) » HEINNER HAC-CR09WHN Remote Controller User Manual 

Contents

- 1 HEINNER HAC-CR09WHN Remote Controller
- 2 Product Information
- 3 Product Usage Instructions
- 4 INTRODUCTION
- 5 SPECIFICATIONS
- 6 INDICATORS ON LCD
- 7 BUTTONS FUNCTIONS
- 8 SILENCE FP BUTTON
- 9 HOW TO USE THE BUTTONS
- 10 EXAMPLE OF TIMER SETTING
- 11 HANDLING THE REMOTE CONTROLLER
- 12 Environment-friendly disposal
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts

HEINNER

HEINNER HAC-CR09WHN Remote Controller



Specifications

- Rated voltage: [Specify the rated voltage]
- Transmission distance: [Specify the transmission distance]
- Environment: [Specify the recommended environment for usage]

Product Information

Buttons Functions

- **ON/OFF Button:** Turns the air conditioner ON and OFF.
- **MODE Button:** Modifies the air conditioner mode.
- **FAN Button:** Selects fan speed in four steps.
- **SLEEP Button:** Activates/Disables sleep function.

Product Usage Instructions

How to Use the Buttons

COMBINED TIMER: Setting both ON and OFF timers simultaneously.

HANDLING THE REMOTE CONTROLLER: Use within 8 meters from the appliance, pointing towards the receiver.

Replacing Batteries

- Do not mix old and new batteries or different types.
- Do not leave batteries in the remote controller if not used for 2-3 months.
- Dispose of batteries properly, not as unsorted municipal waste.

Frequently Asked Questions (FAQ):

Q: How do I know if the batteries are exhausted?

A: The remote controller will show signs of exhausted batteries. Replace them with new ones.

INTRODUCTION

Before using the appliance, please read carefully this instruction manual and keep it for future reference.

 
 
This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.

In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and usage.

SPECIFICATIONS





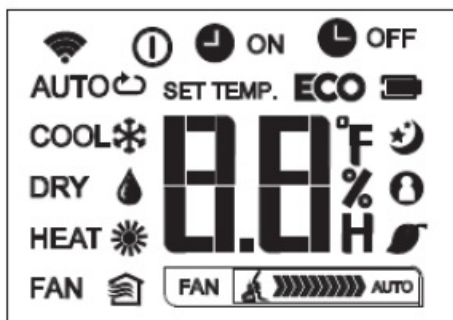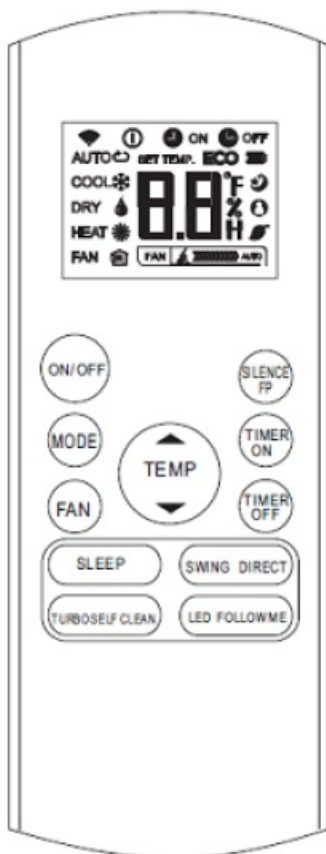


- Rated voltage 3.0V(Dry batteries R03/LR03×2)
- Transmission distance 8m
- Environment -5 °C ~ 60 °C

INDICATORS ON LCD






Mode display

AUTO 	COOL 	DRY 
HEAT 	FAN 	

-  Displayed when remote controller is ON.
-  Battery display (low battery detection)
-  ON Displayed when TIMER ON time is set.
-  OF Displayed when TIMER OFF time is set.
-  Show set temperature or room temperature, or time under TIMER setting
-  Displayed in Sleep Mode operation.
-  Indicated that the air conditioner is operating in Follow me mode

Fan speed indication

FAN		Low speed
FAN		Medium speed
FAN		High speed
FAN	AUTO	Auto fan speed

Note

All indicators shown in the figure are for the purpose of clear presentation. But during the actual operation only the relative functional signs are shown on the display window.

 
BUTTONS FUNCTIONS

• ON/OFF Button

This button turns the air conditioner ON and OFF.

• MODE Button


Press this button to modify the air conditioner mode in a sequence of following:



NOTE Please do not select HEAT mode if the machine you purchased is cooling-only type. Heat mode is not supported by the cooling-only appliance.

FAN Button

 Used to select the fan speed in four steps:



NOTE: You can not switch the fan speed in AUTO or DRY mode.

SLEEP Button

- Active/Disable sleep function. It can maintain the most comfortable temperature and save energy. This function is available on COOL, HEAT or AUTO mode only.
- For the detail, see sleep operation in USER S MANUAL.

NOTE: While the unit is running under SLEEP mode, it would be cancelled if MODE, FAN SPEED or ON/OFF button is pressed.

TURBO Button

Active/Disable Turbo function. Turbo function enables the unit to reach the preset temperature at cooling or heating operation in the shortest time(if the indoor unit does not support this function, there is no corresponding operation happened when pressing this button.)

SELF CLEAN Button

Active/Disable Self Clean function

UP Button

Push this button to increase the indoor temperature setting in 1°C increments to 30°C.

DOWN Button

Push this button to decrease the indoor temperature setting in 1°C increments to 17°C.

NOTE Temperature control is not available in Fan mode.

SILENCE FP BUTTON

Active/Disable SILENCE function. If pushing more than 2 seconds, the FP function will be activated, pushing more than 2 seconds again to disable.

When the Silence function is activated, the compressor will operate at low frequency and the indoor unit will bring faint breeze, which will reduce the noise to the lowest level and create a quiet and comfortable room for you. Due to the low-frequency operation of compressor, it may result in insufficient cooling and heating capacity.

The FP function can only be activated during the heating operation (only when the setting mode is HEAT). The unit will operate at a setting temperature of 8°C. The display window of indoor unit will display FP. Press the buttons of ON/OFF, SLEEP, FP, MODE, FAN SPEED UP or DOWN while operating will cancel the FP function.

- **TIMER ON Button**

Press this button to initiate the auto-on-time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10.0, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-on time to 0.0.

- **TIMER OFF Button**

Press this button to initiate the auto-off time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10.0, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-off time to 0.0/

- **SWING Button**

Used to stop or start horizontal louver auto swing feature.

- **DIRECTION Button**

Used to change the louver movement and set the desired up/down airflow direction. The louver changes 60° in angle for each press.

- **FOLLOW ME Button**

Push this button to initiate the Follow Me feature, the remote display is actual temperature at its location. The remote control will send this signal to the air conditioner every 3 minutes interval until press the Follow Me button again. The air conditioner will cancel the Follow Me feature automatically if it does not receive the signal during any 7-minute interval.

- **LED Button**

Disable/Active indoor screen Display. When pushing the button, the indoor screen display is cleared, press it again to light the display.

HOW TO USE THE BUTTONS

AUTO OPERATION

Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.

1. Press the MODE button to select Auto.
2. Press the UP/DOWN button to set the desired temperature. The temperature can be set within a range of 17°C~ 30°C in 1°C increments.
3. Press the ON/OFF button to start the air conditioner.

NOTE

1. In the Auto mode, the air conditioner can logically choose the mode of Cooling, Fan, and Heating by sensing the difference between the actual ambient room temperature and the setting temperature on the remote controller.
2. In the Auto mode, you can not switch the fan speed. It has already been automatically controlled.
3. If the Auto mode is not comfortable for you, the desired mode can be selected manually.

Cooling /Heating/Fan operation

Ensure the unit is plugged in and power is available.

1. Press the MODE button to select COOL, HEAT (cooling & heating models only), or FAN mode.
2. Press the UP/DOWN buttons to set the desired temperature. The temperature can be set within a range of 17°C~ 30°C in 1°C increments.
3. Press the FAN button to select the fan speed in four steps- Auto, Low, Med, or High.
4. Press the ON/OFF button to start the air conditioner.

NOTE

In the FAN mode, the setting temperature is not displayed in the remote controller and you are not able to control the room temperature either. In this case, only step 1, 3 and 4 may be performed.

Dehumidifying operation

Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.

1. Press the MODE button to select DRY mode.

2. Press the UP/DOWN buttons to set the desired temperature. The temperature can be set within a range of 17°C~ 30°C in 1°C increments.
3. Press the ON/OFF button to start the air conditioner.

NOTE

In the Dehumidifying mode, you can not switch the fan speed. It has already been automatically controlled.

Timer operation

Press the TIMER ON button can set the auto-on time of the unit. Press the TIMER OFF button can set the auto-off time of the unit.

To set the Auto-on time.

1. Press the TIMER ON button. The remote controller shows TIMER ON, the last Auto-on setting time and the signal "H" will be shown on the LCD display area. Now it is ready to reset the Auto-on time to START the operation.
2. Push the TIMER ON button again to set the desired Auto-on time. Each time you press the button, the time increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours.
3. After setting the TIMER ON, there will be a one-second delay before the remote controller transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal "h" will disappear and the set temperature will re-appear on the LCD display window.

To set the Auto-off time.



1. Press the TIMER OFF button. The remote controller shows TIMER OFF, the last Auto-off setting time and the signal "H" will be shown on the LCD display area. Now it is ready to reset the Auto-off time to stop the operation.
2. Push the TIMER OFF button again to set the desired Auto-off time. Each time you press the button, the time increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours.
3. After setting the TIMER OFF, there will be a one-second delay before the remote controller transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal "H " will disappear and the set temperature will re-appear on the LCD display window.

CAUTION

When you select the timer operation, the remote controller automatically transmits the timer signal to the indoor unit for the specified time. Therefore, keep the remote controller in a location where it can transmit the signal to the indoor unit properly.

The effective operation time set by the remote controller for the timer function is limited to the following settings: 0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 5.5, 6.0, 6.5, 7.0, 7.5, 8.0, 8.5, 9.0, 9.5, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23 and 24.

Adjusting airflow direction

Use the   SWING and button to adjust the desired airflow direction.



1. Up/Down direction can be adjusted with the button on the remote controller. Each time when you press the button, the louver moves an angle of 6 degree. If pressing more than 2 seconds, the louver will swing up and down automatically.

2. Left/Right direction can be adjusted with the button on the remote controller.

Each time when you press the button, the louver moves an angle of 6 degree. If pressing more than 2 seconds



,the louver will swing left and right automatically.

NOTE: When the louver swing or move to a position which would affect the cooling or heating effect of the air conditioner, it would automatically change the swing/moving direction.

 
EXAMPLE OF TIMER SETTING

TIMER ON (Auto-on Operation)

The TIMER ON feature is useful when you want the unit to turn on automatically before you return home. The air conditioner will automatically start operating at the set time. Example:

To start the air conditioner in 6 hours.

1. Press the TIMER ON button, the last setting of starting operation time and the signal "H" will show on the display area.
2. Press the TIMER ON button to display "6.0H" on the TIMER ON display of the remote controller.
3. Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER ON" indicator remains on and this function is activated.

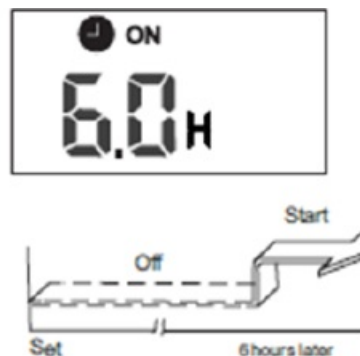


TIMER OFF (Auto-off Operation)

The TIMER OFF feature is useful when you want the unit to turn off automatically after you go to bed. The air conditioner will stop automatically at the set time.

Example

To stop the air conditioner in 10 hours.

 1. Press the TIMER OFF button, the last setting of stopping operation time and the signal "H" will show on the display area.
2. Press the TIMER OFF button to display "10H" on the TIMER OFF display of the remote controller.
3. Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER OFF" indicator remains on and this function is activated.

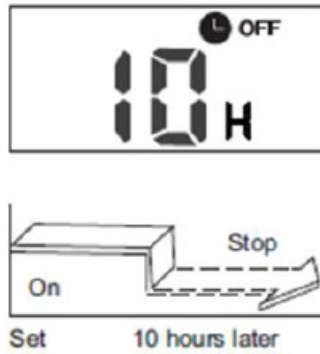

COMBINED TIMER (Setting both ON and OFF timers simultaneously)

TIMER OFF → TIMER ON

 
(On → Stop → Start operation)

This feature is useful when you want to stop the air conditioner after you go to bed, and start it again in the morning when you wake up or when you return home.

Example

To start the air conditioner in 6 hours.

1. Press the TIMER ON button, the last setting of starting operation time and the signal “H” will show on the display area.
2. Press the TIMER ON button to display “6.0H ” on the TIMER ON display of the remote controller.
3. Wait for 3 seconds and the digital display area will show the temperature again. The “TIMER ON” indicator remains on and this function is activated.

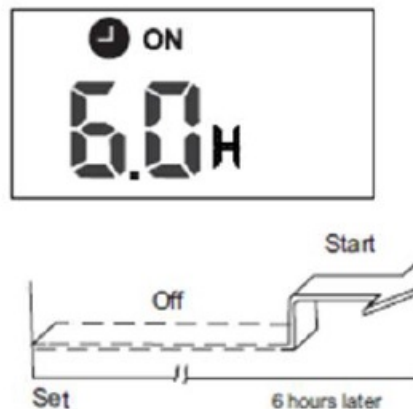

TIMER ON → TIMER OFF

(Off → Start → Stop operation)

 
This feature is useful when you want to start the air conditioner before you wake up and stop it after you leave the house.

Example:

To start the air conditioner 2 hours after setting, and stop it 5 hours after setting.

1. Press the TIMER ON button.
2. Press the TIMER ON button again to display 2.0H on the TIMER ON display.
3. Press the TIMER OFF button.
4. Press the TIMER OFF button again to display 5.0H on the TIMER OFF display.
5. Wait for 3 seconds and the digital display area will show the temperature again. The “TIMER ON & TIMER

OFF” indicator remains on and this function is activated.

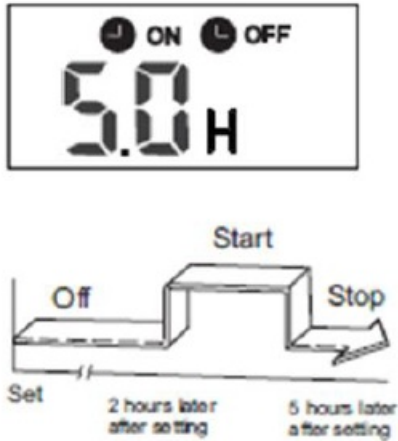


TIMER OFF

(Auto-off Operation)

The TIMER OFF feature is useful when you want the unit to turn off automatically after you go to bed. The air conditioner will stop automatically at the set time.

To stop the air conditioner in 10 hours.

 1. Press the TIMER OFF button, the last setting of stopping operation time and the signal “H” will show on the display area.
2. Press the TIMER OFF button to display “10H ” on the TIMER OFF display of the remote controller.
3. Wait for 3 seconds and the digital display area will show the temperature again. The “TIMER OFF” indicator remains on and this function is activated.

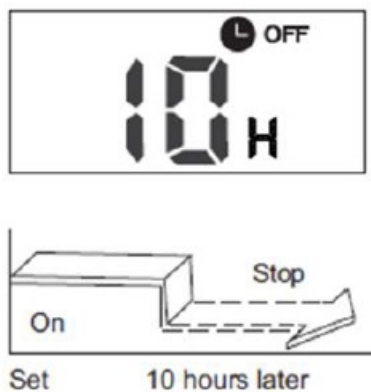

COMBINED TIMER

(Setting both ON and OFF timers simultaneously)

 
TIMER OFF → TIMER ON

(On → Stop → Start operation)

This feature is useful when you want to stop the air conditioner after you go to bed, and start it again in the morning when you wake up or when you return home.

Example:

To stop the air conditioner 2 hours after setting and start it again 10 hours after setting.

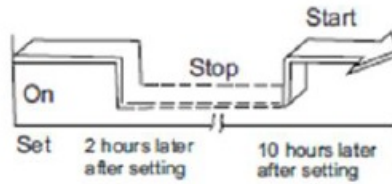

1. Press the TIMER OFF button.
2. Press the TIMER OFF button again to display 2.0H on the TIMER OFF display.
3. Press the TIMER ON button.
4. Press the TIMER ON button again to display 10H on the TIMER ON display.
5. Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER ON OFF" indicator remains on and this function is activated.

HANDLING THE REMOTE CONTROLLER

Location of the remote controller.

 
Use the remote controller within a distance of 8 meters from the appliance, pointing it towards the receiver. Reception is confirmed by a beep.



CAUTIONS

- The air conditioner will not operate if curtains, doors or other materials block the signals from the remote controller to the indoor unit.
- Prevent any liquid from falling into the remote controller. Do not expose the remote controller to direct sunlight or heat.
- If the infrared signal receiver on the indoor unit is exposed to direct sunlight, the air conditioner may not function properly. Use curtains to prevent the sunlight from falling on the receiver.
- If other electrical appliances react to the remote controller, either move these appliances or consult your local dealer.
- Do not drop the remote controller. Handle with care.
- Do not place heavy objects on the remote controller, or step on it.

Using the remote controller holder(optional)

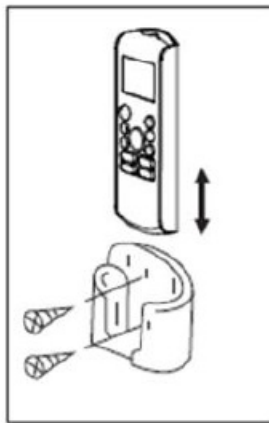

The remote controller can be attached to a wall or pillar by using a remote controller holder(not supplied, purchased separately).

Before installing the remote controller, check that the air conditioner receives the signals properly. Install the remote controller with two screws. For installing or removing the remote controller, move it up or down in the holder.

REPLACING BATTERIES

The following cases signify exhausted batteries. Replace old batteries with new ones.



- Receiving beep is not emitted when a signal is transmitted.
- Indicator fades away.

The remote controller is powered by two dry batteries (R03/LR03X2) housed in the back rear part and protected by a cover.

1. Remove the cover in the rear part of the remote controller.
2. Remove the old batteries and insert the new batteries, placing the(+) and (-) ends correctly.
3. Install the cover back on.

NOTE: When the batteries are removed, the remote controller erases all programming. After inserting new batteries, the remote controller must be reprogrammed.

CAUTIONS

- Do not mix old and new batteries or batteries of different types.
- Do not leave the batteries in the remote controller if they are not going to be used for 2 or 3 months.
- Do not dispose batteries as unsorted municipal waste. Collection of such waste separately for special treatment

is necessary.



Environment-friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal center.



HEINNER is a registered trademark of Network One Distribution SRL. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distribution. All rights reserved.

www.heinner.com, <http://www.nod.ro>




This product is in conformity with norms and standards of European Community.

Importer: Network One Distribution



Marcel Iancu, 3-5, Bucharest, Romania

Tel: +40 21 211 18 56, www.heinner.com , www.nod.ro

Documents / Resources

	<p>HEINNER HAC-CR09WHN Remote Controller [pdf] User Manual HAC-CR09WHN Remote Controller, HAC-CR09WHN, Remote Controller, Controller</p>
---	--

References

- [Heinner – large appliances, small appliances, housekeeping, DIY](#)
- [Heinner – large appliances, small appliances, housekeeping, DIY](#)
-  [NOD - Network One Distribution](#)
-  [NOD - Network One Distribution](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.