



HEISE Override Switch Option Instruction Manual


[Home](#) » [HEISE](#) » HEISE Override Switch Option Instruction Manual 

Contents

- [1 HEISE Override Switch Option](#)
- [2 Installation Instructions](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)



HEISE Override Switch Option

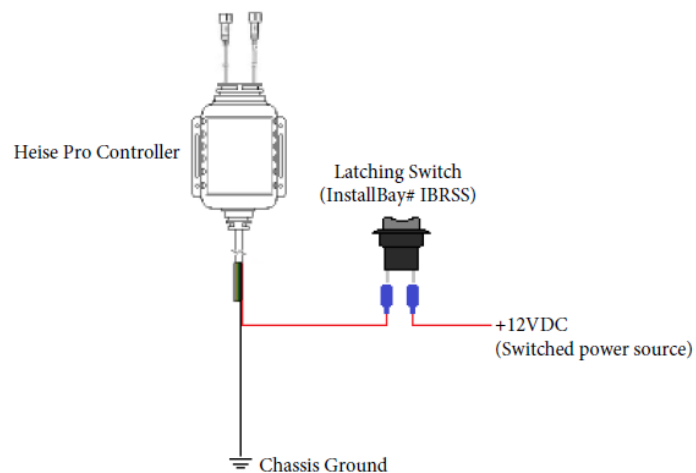

Installation Instructions


An optional override switch (not included) can be installed, to allow the user to deactivate the controller as

needed.

1. Locate a suitable mounting location for a latched switch, and install the switch. (recommended part# IBRSS)
2. Connect 16ga primary wire (recommended part# PWRD16500) to the red wire of the controller, and route the primary wire to the switch. Install a female quick disconnect connector (recommended part# BNFD110F) to the loose end of the primary wire. Push the quick disconnect connector onto either terminal of the switch.
3. Install a female quick disconnect on to a second 16ga primary wire, then push the connector onto the other terminal of the switch.
4. Run the second primary wire to the switched +12VDC power source. It is recommended to install a fuse holder and 10A fuse (recommended part# ATFH16C-10 and ATC10-25) between the second primary wire and the power source. The in-line fuse holder should be no more that 6 inches from the power source.

Tech Support: 386-257-1187
460 Walker Street, Holly Hill, FL 32117
www.HeiseLED.com

Documents / Resources

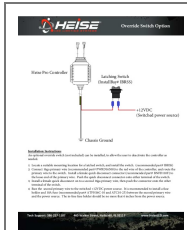

[HEISE Override Switch Option](#) [pdf] Instruction Manual
Override Switch Option

References

- [Heise LED Lighting Systems | Torture Tested Lightbars and More](#)