



HELLO KITTY ET-0904 Remote Control Gure With Pop Confetti Function Instruction Manual

[Home](#) » [HELLO KITTY](#) » HELLO KITTY ET-0904 Remote Control Gure With Pop Confetti Function Instruction Manual 

HELLO KITTY ET-0904 Remote Control Gure With Pop Confetti Function



Contents

- 1 Thank you
- 2 Product Overview
- 3 Package Contents
- 4 Specifications
- 5 Remote Controller
- 6 Standard Control
- 7 Refill The Confetti
- 8 Launch The Confetti
- 9 Decorate With The Number Cardboard
- 10 Power On/Off
- 11 Batteries Installation For Hello Kitty Remote Control Figure
- 12 Batteries Installation For Remote Controller
- 13 Performance Tips
- 14 Care and Maintenance
- 15 IMPORTANT: BATTERY INFORMATION
- 16 Warning
- 17 FCC Statement
- 18 CUSTOMER SUPPORT
- 19 Documents / Resources
 - 19.1 References
- 20 Related Posts

Thank you

 
Thank you for purchasing the Hello Kitty Remote Control Figure With Pop Confetti Function. This manual provides more information about this product, please read the instructions before using.

Product Overview


- Hello Kitty Remote Control Figure




- Remote Control

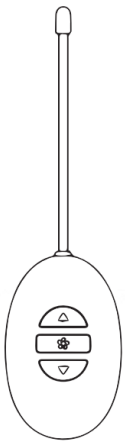

 
- Cardboard Interchangeable Number Sheet

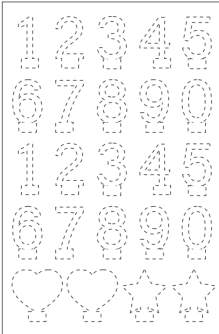

- Confetti Packet

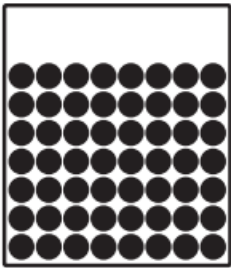 

- Instruction Manual

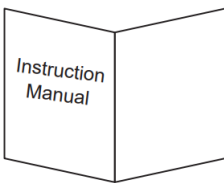 

Package Contents

- **1(One) Remote Control Figure**
8.3in. x 9.2in. x 15in. (21cm x 23.3cm x 28.2cm)
- **1(One) Remote Control**
2in. x 1.42in. x 7.4in. (5.1cm x 3.6cm x 18.8cm)
- **1(One) Cardboard Interchangeable Number Sheet**
13.39in. x 9.06in. (34cm x 23cm)
- **1(One) Confetti Packet**
0.35oz. (10gm)
- **1(One) Instruction Manual**


Specifications

FCC ID: 2ADM5-ET-0904

Remote Control Figure: 4(Four) x AA 1.5V Alkaline Batteries (Not Included)


Remote Control: 2(Two) x AAA 1.5V Alkaline Batteries (Not Included)

 Remote Controller


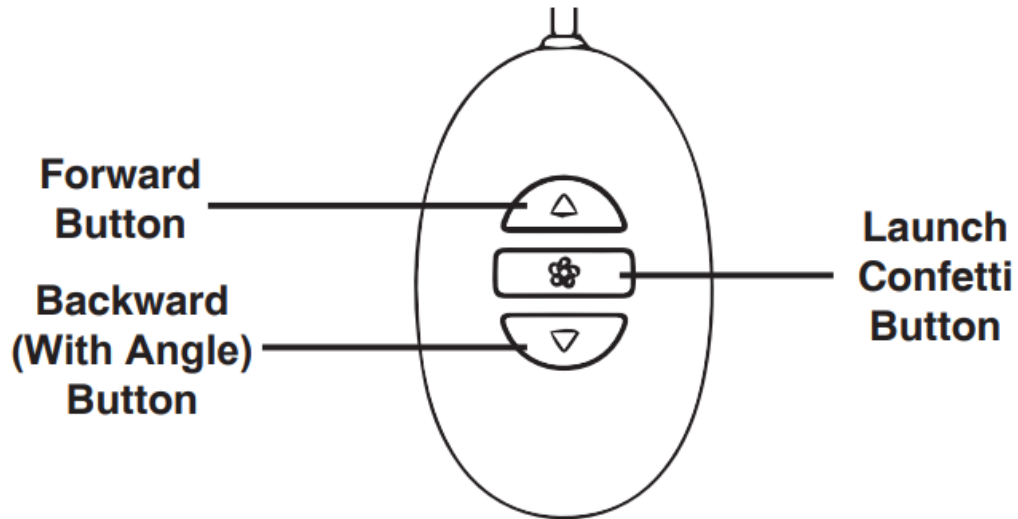


Standard Control

 Note: To avoid losing control, always pay attention when controlling the Hello Kitty Remote Control Figure.

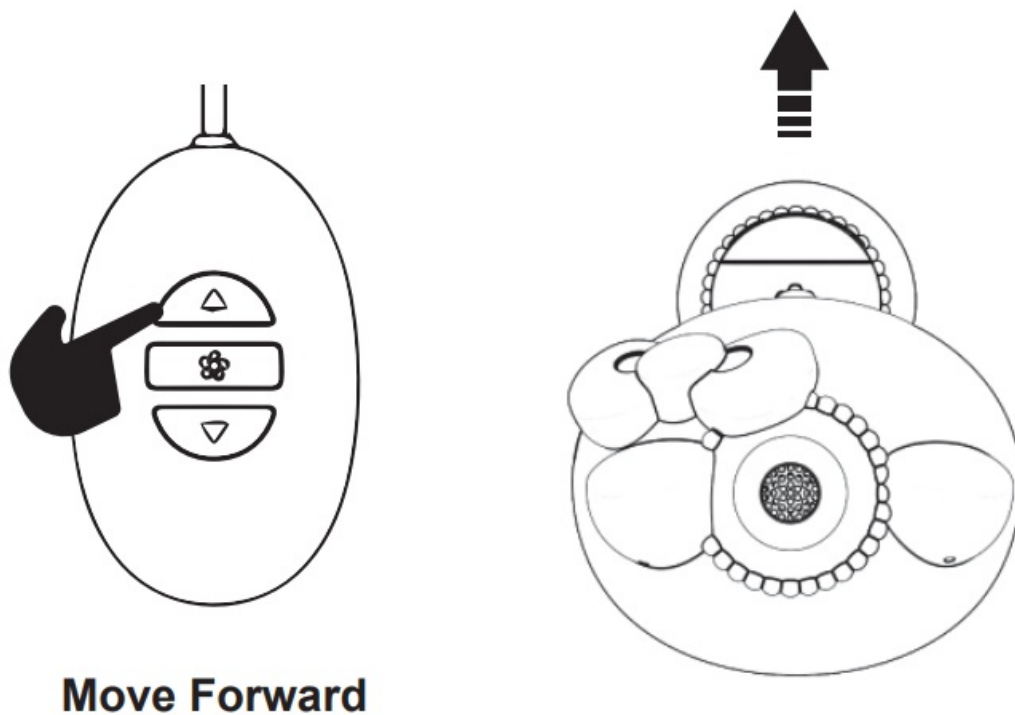

  
Control Hello Kitty Remote Control Figure to move forward

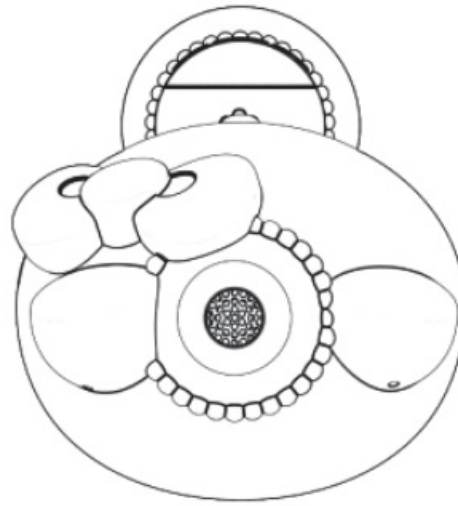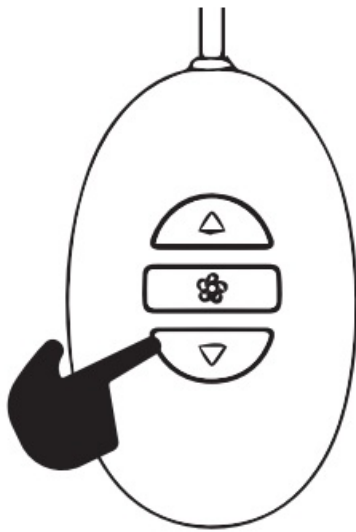

Move Backward (With Angle)


Control Hello Kitty Remote Control Figure to move move backward (with angle)

 Refill The Confetti

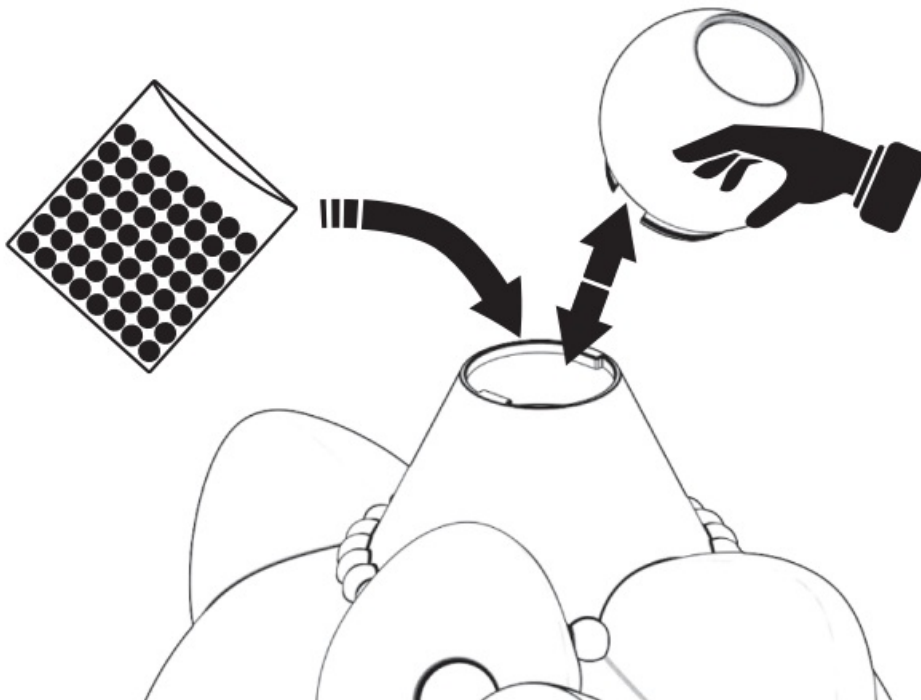

Pull out the top of the hat and fill the confetti in the chamber.
Install the top of the hat back in place after refill.

 Launch The Confetti

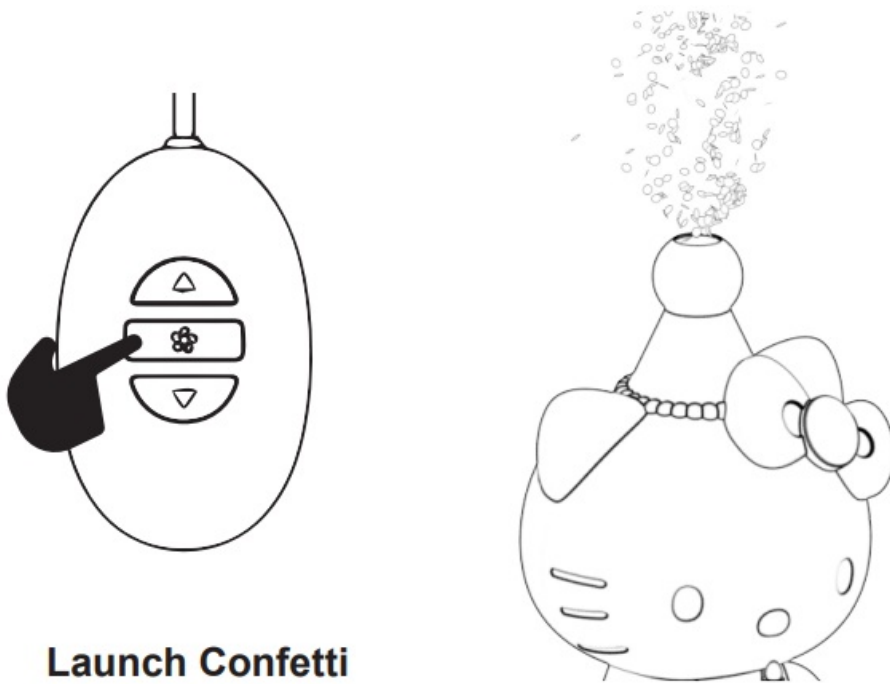


Launch Confetti

Control Hello Kitty Remote Control Figure to launch the confetti.


Product Overview Package Contents Standard Control Decorate With The Number Cardboard

Decorate With The Number Cardboard

 Detach each number/shape from the Cardboard Number Sheet.

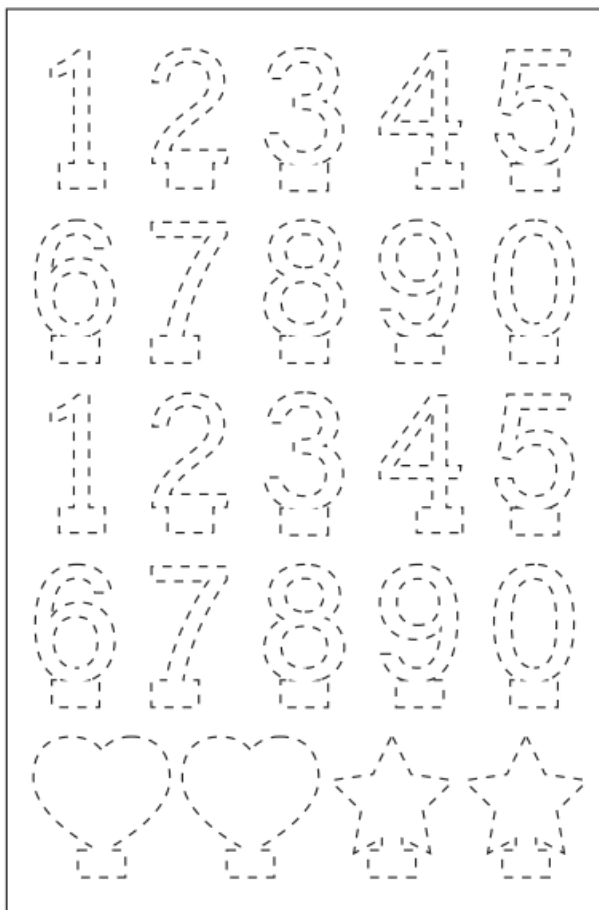

 
Insert the number/shape into the rail of the cake.

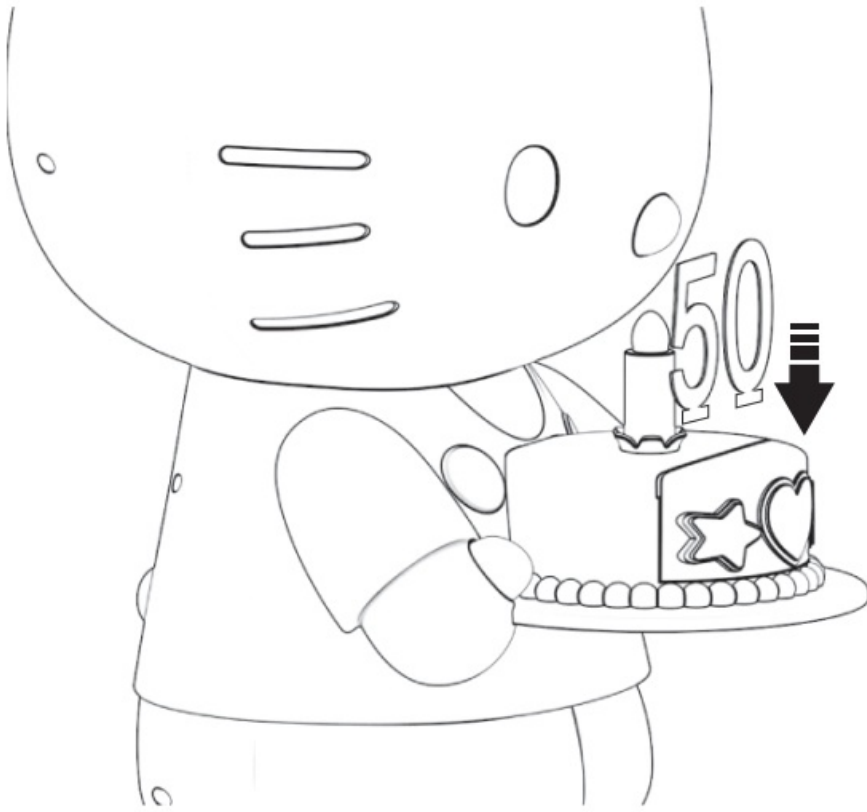





Power On/Off

Power On/Off

 Slide the ON/OFF Switch to ON to turn on the Hello Kitty Remote Control Figure.
Slide the ON/OFF Switch to OFF to turn off the Hello Kitty Remote Control Figure.

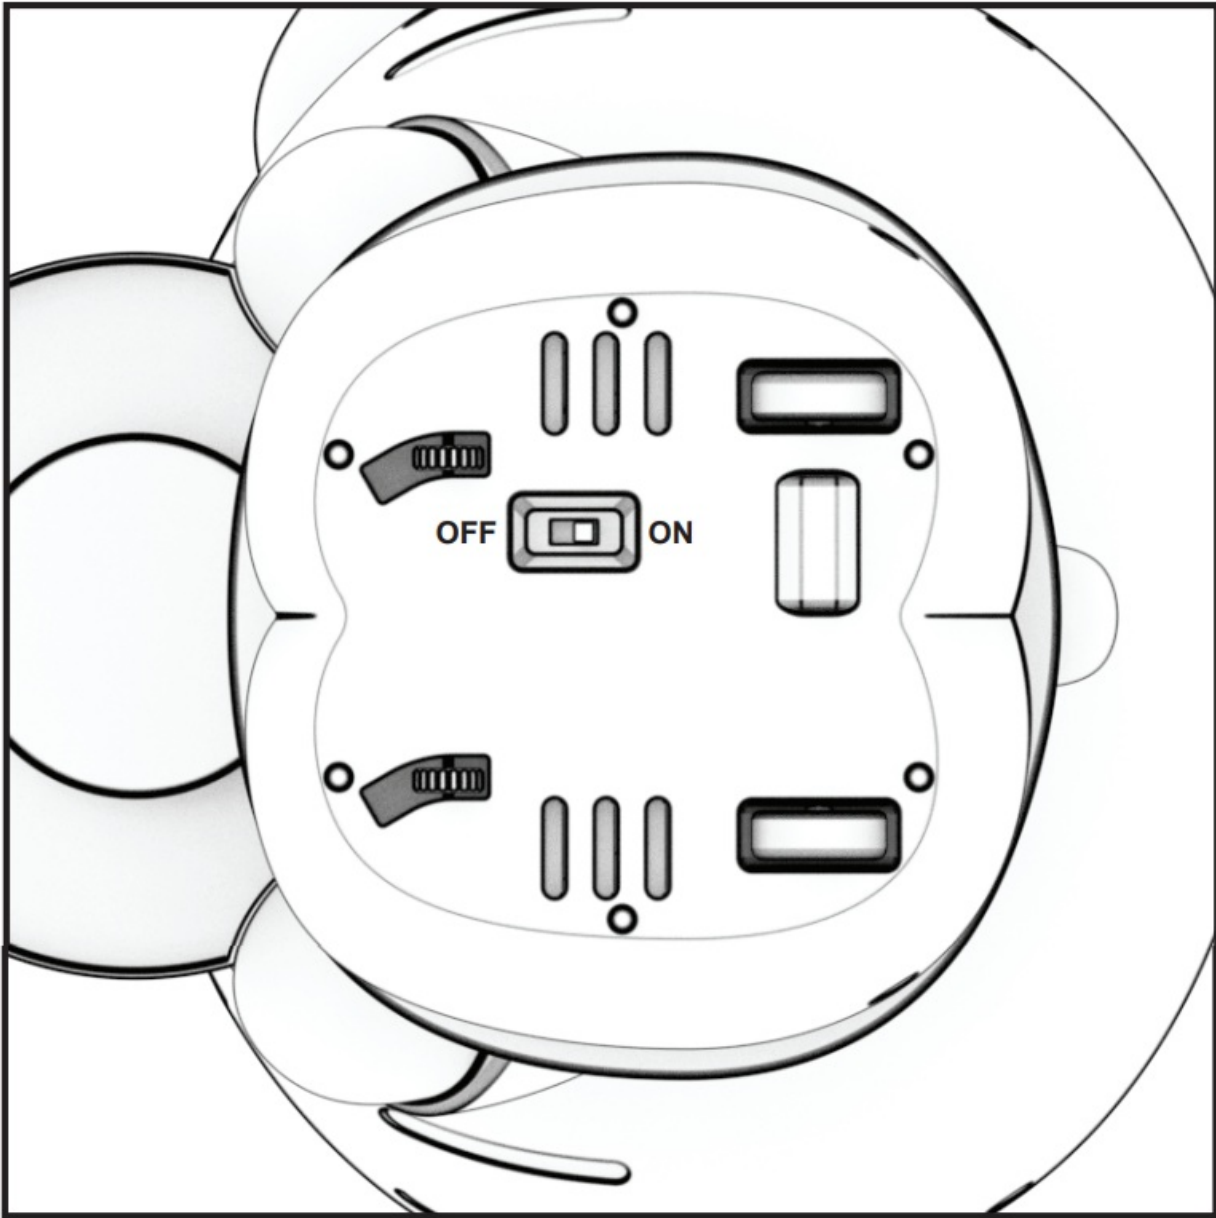

 
 
 
 
Batteries Installation For Hello Kitty Remote Control Figure

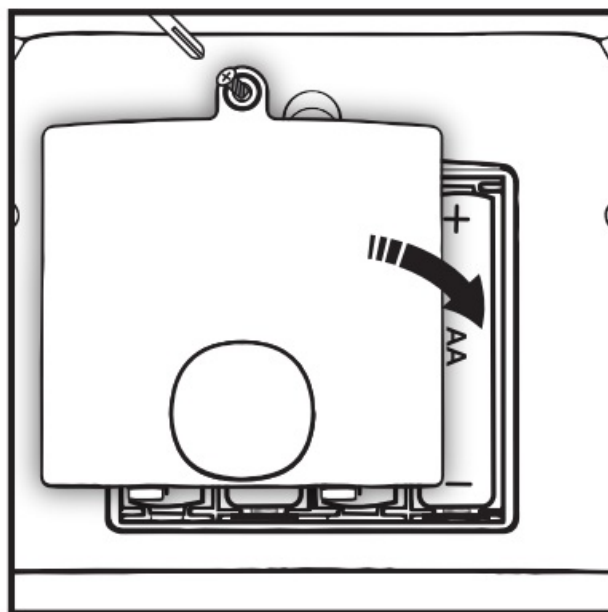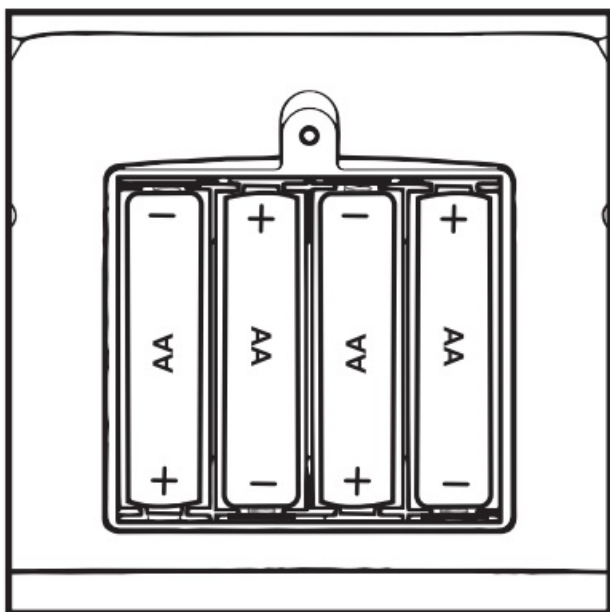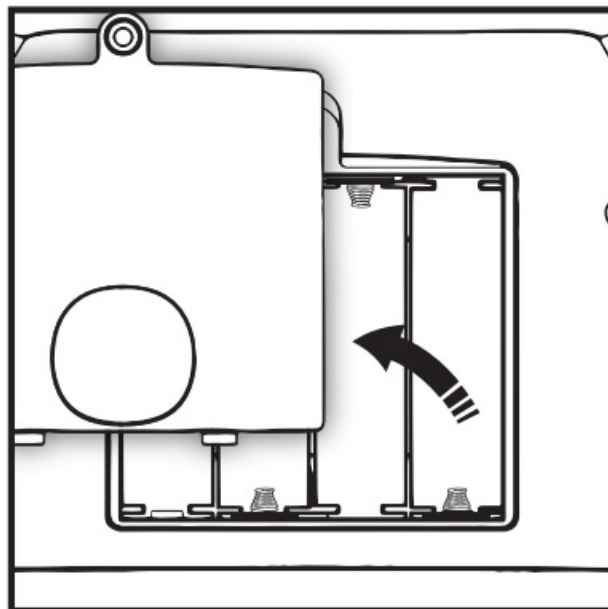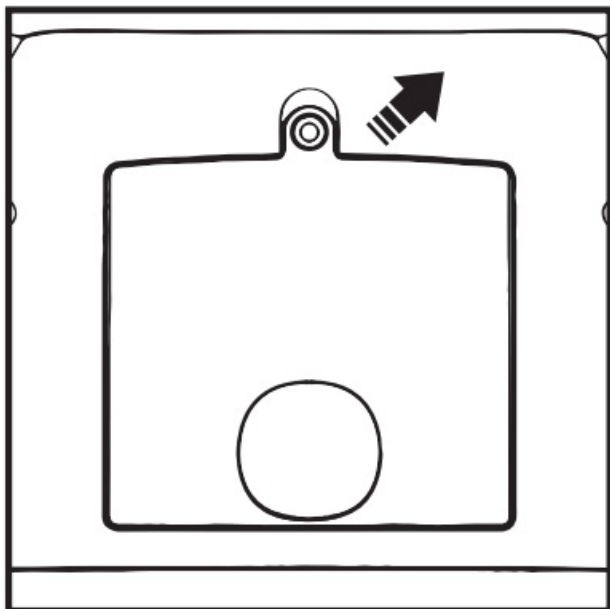

To install batteries into the Hello Kitty Remote Control Figure, unscrew the screw on the battery box cover to open the cover. Insert 4(Four) X AA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw.

Notice: When inserting the batteries, you must insert according to the correct polarity, the Hello Kitty Remote Control Figure won't function if batteries are reversed.

    Batteries Installation For Remote Controller

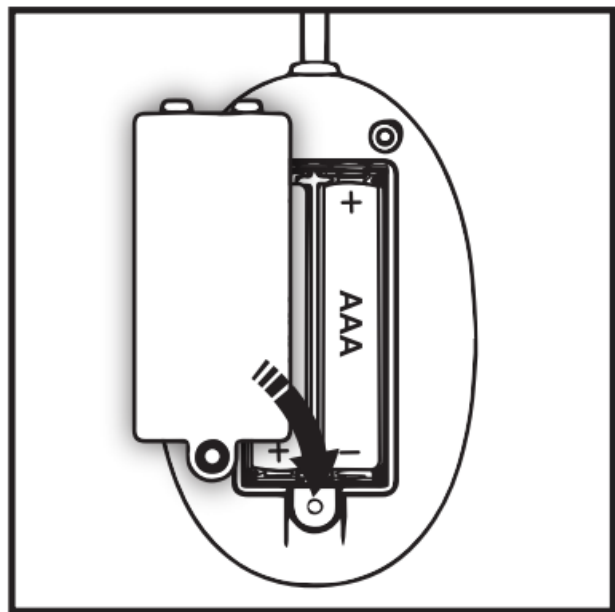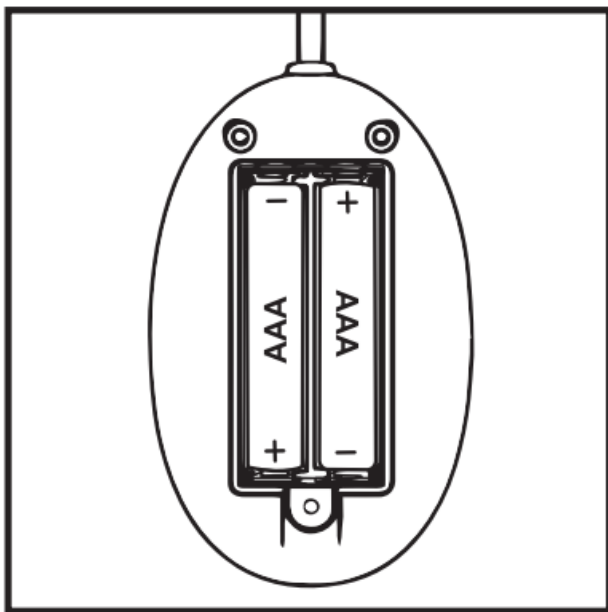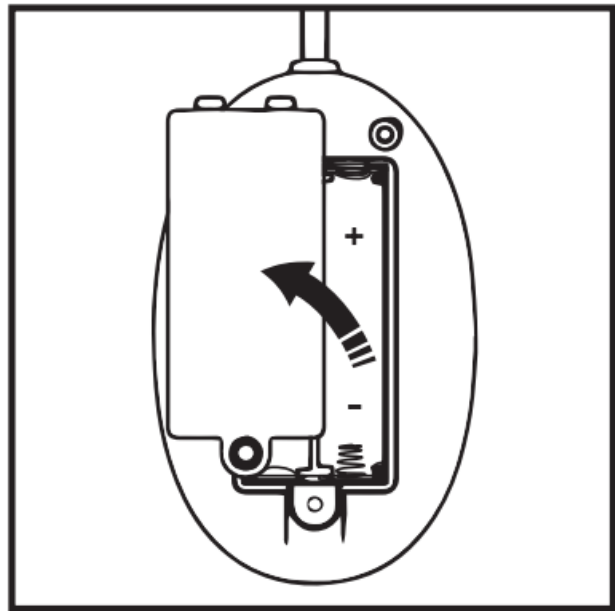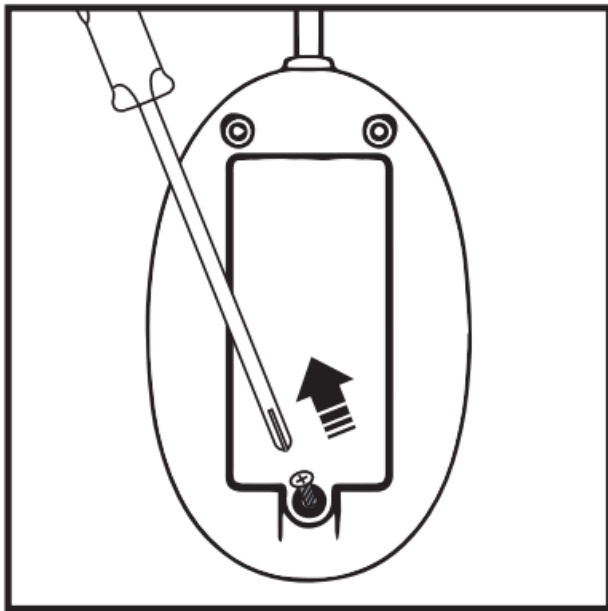

To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the cover. Insert 2(Two) X AAA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw.

Notice: When inserting the batteries, you must insert according to the correct polarity, the Remote Controller won't function if batteries are reversed.

Performance Tips

1. Do not drive the Hello Kitty Remote Control Figure on grass, sand or go through water.
2. Do not drive the Hello Kitty Remote Control Figure in windy or rainy weather.
3. Do not drive the Hello Kitty Remote Control Figure into any sharp object.
4. Keep fingers, hair and loose clothing away from Hello Kitty Remote Control Figure.

Care and Maintenance

Always use dry and soft cloth to clean this product.
Avoid this product from being exposed to sunlight or heat.

Avoid immersing these toys in water, otherwise, the electronic parts may be damaged.

Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.

IMPORTANT: BATTERY INFORMATION

For AAA Batteries

WARNING: TO AVOID BATTERY LEAKAGE

1. The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-[800-222-1222](tel:800-222-1222)).
2. Always purchase the correct size and grade of battery most suitable for intended use.
3. Do not mix old and new batteries, alkaline, standard (Carbon – Zinc) or rechargeable (Nickel-cadmium) batteries.
4. Clean the battery contacts and those of the device prior to battery installation.
5. Ensure the batteries are installed correctly with the regard to polarity (+ and -).
6. Always remove batteries if consumed or if product is to be left unused for a long time.

For AA Batteries

WARNING: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.
4. Remove the battery if the product is left unused for a long period of time.

Warning

This product is suitable for individuals with operating experience in remote toys or those aged 8 years old and above.

Please do not put the product in your mouth to prevent choking hazards from small parts.

Avoid inserting your fingers into available interspaces.

Do not engage in rough play with the product, such as throwing, crashing, or twisting it.

Store smaller-sized product accessories in places that are out of reach of children to prevent accidents.

Avoid placing batteries in areas with high temperatures or exposing them to heat.

When young children are operating the product, it is essential to ensure that adults are guiding them and maintaining visual control of the toy for convenient control.

When the product is not in use, please switch off the power supply and remove the batteries.

Please note that we cannot be held responsible for any injuries, property damage, or loss resulting from incorrect operation during the assembly or use of this product.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.



WARNING: CHOKING HAZARD Small parts. Not for children under 3 years

FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



FCC ID: 2ADM5-ET-0904

CUSTOMER SUPPORT



SIL-35018

Distributed by 1616 Holdings, Inc.
701 Market Street, Suite 200
Philadelphia, PA 19106
Made In Shantou, China

Keep All Relevant Information for Future Reference

© 2024 SANRIO CO., LTD.

 
™ and ® denote U.S. Trademarks

Used Under License.

www.sanrio.com

HELLO KITTY®

Documents / Resources

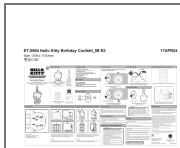

[HELLO KITTY ET-0904 Remote Control Gure With Pop Confetti Function](#) [pdf] Instruction M
anual

ET-0904, ET-0904 Remote Control Gure With Pop Confetti Function, Remote Control Gure With
Pop Confetti Function, Control Gure With Pop Confetti Function, Pop Confetti Function, Confetti
Function, Function

References

- [🐱 The Official Home of Hello Kitty & Friends](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.