 


HELLOMOON FM0167W Sound Machine

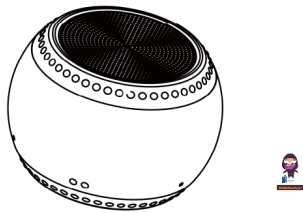

HELLOMOON FM0167W Sound Machine User Guide

 
[Home](#) » [HELLOMOON](#) » HELLOMOON FM0167W Sound Machine User Guide 

Contents

- 1 –
- 2 HELLOMOON FM0167W Sound Machine
- 3 PRODUCT FUNCTION
- 4 Recharging the battery
- 5 Package Contents
- 6 Important Safeguards
- 7 Documents / Resources
 - 7.1 References
- 8 Related Posts

HELLOMOON

HELLOMOON FM0167W Sound Machine

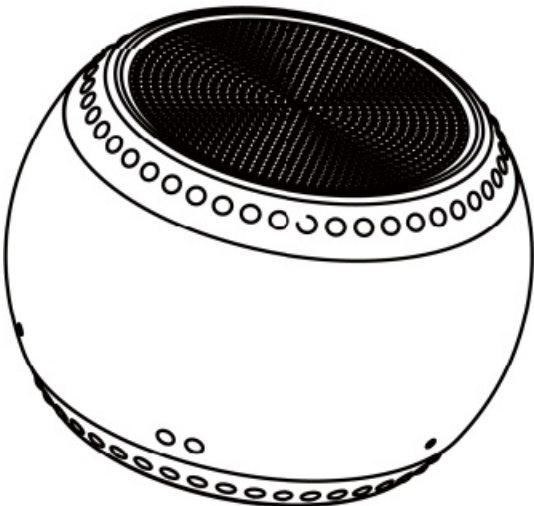

PRODUCT FUNCTION

White Noise&Child:

 
including 30 sounds. Long press+ or- to switch sound, sound sources are: Thunder, Rain1, Rain2, Brook1, Brook2, Fire, Summer Night, Forrest, Wave, Laundry Machine, White noise, Pink noise, Grey noise, Fan, Hair dryer, Heartbeat, Shusha, Little star, Kevin's lullaby, Brahms lullaby, Hush baby, Nighty night, Bottle typing{ASMR} Train, Clock, Guitar, Native American Flute, Meditative Bell Singing bowl, Short Meditation Music .

Timer: short press to choose continuous play all night or use 30, 60, 90 minutes Sleeping Setting
The default mode is continuous playback, and the indicator will be off, after activating the timer, it will be:

1. On 30 minutes mode, countdown for 30 minutes playing, and the indicator will be in solid white
2. On 60 minutes mode, countdown for 60 minutes playing, and the indicator will be in solid blue
3. On 90 minutes mode, countdown for 90 minutes playing, and the indicator will be in solid green

Wireless Speaker: wireless connection with mobile phone for music play

Memory Card Play: Insert a Micro SD(TF) card into the card slot to enjoy music play

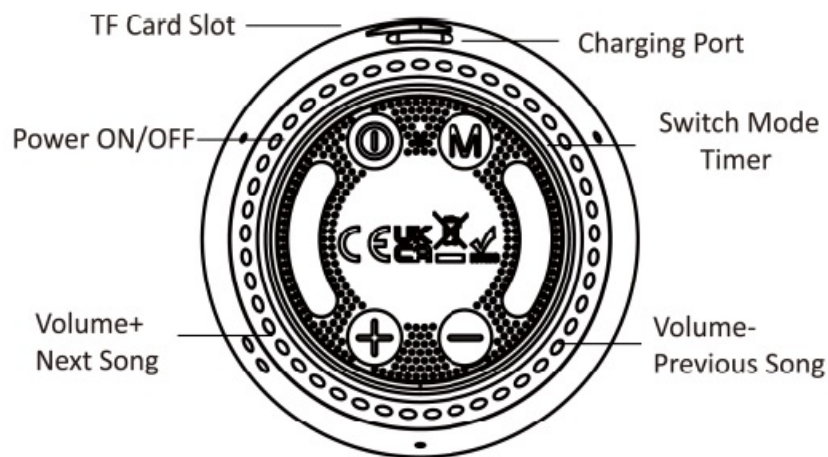

Listening to Nature Sounds

1. Long press ON/OFF for 2 seconds to turn on the machine and listen to the sounds
2. Long Press+ or- to select the sound you want to hear
3. Short press+ or- to adjust the volume of the sound
4. When finish listening, long press ON/OFF for 2 seconds to turn off the sound machine

Wireless speaker

1. Long press ON/OFF for 2 seconds to turn on the sound machine, then short press “M” to switch to the wireless speaker, it will give a notification
2. Go to the mobile's settings page and pair “Hellomoon” after connection, it will have a connected notification
3. Enjoy the music from your mobile phone .

TF Card Play

1. Long press ON/OFF for 2 seconds to turn on the sound machine, then insert the TF card into the card slot, and

the machine will play the TF card music automatically

2. If you finish listening to the TF memory card music, push the TF card and take it out of the card slot

Recharging the battery

1. Plug the Type-C USB cable to the USB port
2. The power indicator will light up in red when charging
3. When charging is finished, the charging light will be green
4. When low battery, the red indicator will flash as warning

Package Contents





- 1 X Sound Machine (Built-in rechargeable battery)
- 1 x Type-C charging cable
- 1 X Owner's Manual

Note: Use SV charging cable in the package to connect the machine for charging the battery. Please don't use 9V/12V/24V charger for this unit

Important Safeguards

- To protect from electrical shock, do not immerse the cord, plug or unit in water or other liquid, care should be taken so that the liquids are not spilled through openings into the unit.
- Do not operate with a damaged cord or plug, or the unit will be malfunctioned.
- The unit should keep away from heat sources such as direct sunlight, radiators, heat registers, stoves or other heat-producing appliances.
- To clean, gently wipe with a soft cloth moistened with warm water or mild detergents only, and then remove all moisture with a soft, dry cloth. Do not use harsh solvents or chemicals for cleaning.

Documents / Resources

<p>SOUND MACHINE HELLOMOON USER GUIDE MODEL NO. FM0167W</p>  <p>RoHS   </p>	<p>HELLOMOON FM0167W Sound Machine [pdf] User Guide 2AAL7-FM0167W, 2AAL7FM0167W, fm0167w, FM0167W Sound Machine, FM0167W, Sound Machine, Machine</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.