



HENDI 582046 Double Timer Instruction Manual

May 7,
2025

Contents [[hide](#)]

- 1 [HENDI 582046 Double Timer Instruction Manual](#)
- 2 [Operating instructions](#)
- 3 [Setting alarm mode](#)
- 4 [Button](#)
- 5 [Count down](#)
- 6 [Count up](#)
- 7 [Memory function](#)
- 8 [Replacing the battery](#)
- 9 [Battery safety instructions](#)
- 10 [Warranty](#)
- 11 [Discarding & Environment](#)
- 12 [Documents / Resources](#)
 - 12.1 [References](#)

HENDI 582046 Double Timer Instruction Manual

Double timer

Hendi no. 582046

Technical specifications

Powered by: 2 X 1.5V AAA battery (not included)

Time settings: 0 – 99 hours 59 mins 59 secs

Operating instructions

- Open the stand and then slide to open the cover at the back. Insert the battery into the compartment with the +/- at the appropriate place as shown.
- Slide to close the cover at the back.
- After inserting the battery a short beep sounds and the screen displays 0:0000.
- The timer is ready for use now and has an add and countdown function.
- Magnet is fixed to the back of the timer allowing it to be attached to a metal surface.
- With a stand at the back to use on tabletop.
- With hole at the back for wall hanging.

Setting alarm mode

- Set your desired alarm modes at the side of the timer.
- High volume.
- Low volume.
- Silent and red light flashing.

Button

T1: Timer 1

T2: Timer 2

M: Memory button


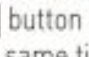 


HOUR: setting hour

MIN: setting minute

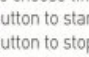 
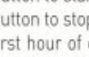 
SEC: setting second

  : start or stop the timer

Count down

- Press **T1/T2** to choose timer
- Press **HOUR/MIN/SEC** buttons to your desired timing. Hold the buttons to increase the time quickly.
- If reset is necessary, press **HOUR** and **MIN** buttons at the same time.
- When target time is set, press   button to start count down. Press it again to stop counting. When timer is stopped, press **HOUR** and **MIN** at the same time to reset timer.
- When timer reaches to 0:0000, it will switch to count up immediately. Press   button to stop counting. Alarm or red light flashing will last for one minute when no operation.

Count up

- Press **T1/T2** to choose timer
 - Press   button to start count up.
 - Press   button to stop count up when necessary. Press **HOUR** and **MIN** at the same time to reset timer.
- Noted: In the first hour of count up, display can show 1/100 sec. For more than one hour, display will only show 2/100 sec.

Memory function

- Press **T1/T2** to choose timer. Hold **M** button for 3 seconds, display will flash. Press **HOUR/MIN/SEC** to your desired

timing. Hold the button to increase the time quickly.

- Press M to save the data.
- If necessary, press HOUR and MIN at the same time to clear memory.
- Once user sets the memory time, he can return to the memory time quickly by only pressing M button when timer is stopped.

Note: Two timers (T1/T2) can work at the same time without any influence to each other.

Replacing the battery

- If the digits are difficult to read, this is a sign that the battery is getting low. Then the battery must be replaced by opening the cover at the back.
- Always open the stand first and slide to open and close the battery compartment cover at the back.

Battery safety instructions

- DANGER OF EXPLOSION! Dry batteries must not be re-chargeable or throw in the fire or short-circuited.
- Do not expose batteries or appliance to extreme temperature such as from direct sunlight or fire. Do not place the product on a heating source.
- If batteries are already leaked, remove them from the battery compartment with a clean cloth. Dispose the batteries in accordance with the provisions. Avoid to contact the leaked battery acid.
- The batteries must be removed from the appliance before it is scrapped. Do not remove the build-in battery yourself! Bring the appliance to a qualified professional.
- The batteries is to be disposed of safely.
- CAUTION! There is a danger of explosion if the batteries are inserted incorrectly. Use

only the same battery types.

Do not use old and new batteries together and of different type from different manufacturer.

- Always insert batteries in accordance (+) and (-) polarity as illustrated in the battery compartment.
- Batteries are life-threatening if swallowed. Store all batteries out of the reach of the children. Seek medical help immediately if batteries are swallowed.
- Do not allow children to change batteries.
- Remove the batteries when you are not going to be using the product for a long period of time.

Warranty

Any defect affecting the functionality of the appliance which becomes apparent within one year after purchase will be repaired by free repair or re-placement provided the appliance has been used and maintained in accordance with the instructions and has not been abused or misused in any way. Your statutory rights are not affected. If the appliance is claimed under warranty, state where and when it was purchased and include proof of purchase (e.g. receipt). In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

Discarding & Environment



When decommissioning the appliance, the product must not be disposed of with

other household

waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a

designated collection point. Failure to follow this rule may be penalized in accordance with applicable

regulations on waste disposal. The separate collection and recycling of your waste equipment

at the time of disposal will help conserve natural resources and ensure that it is recycled in

a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local waste collection

company. The manufacturers and importers do not take responsibility for recycling, treatment and ecological

disposal, either directly or through a public system.

For more information about where you can drop off your waste for recycling, please contact your local waste collection

company. The manufacturers and importers do not take responsibility for recycling, treatment and ecological

disposal, either directly or through a public system.



Please non-destructively separate spent batteries and accumulators that are not enclosed in the

used equipment, as well as lamps that can be removed from the used equipment without destroying

it, from the used equipment before returning it at a collection point. Unless the used equipment

is separated in order to prepare it for re-use.



INDOOR



READ MANUAL



HENDI B.V.

For technical information and Declarations of Conformity see www.hendi.com.

NOTE: This manual is translated from original English manual using AI and machine translations.

Changes, printing and typesetting errors reserved.

© 2024 HENDI B.V. De Klomp – The Netherlands

Read More About This Manual & Download PDF:

Documents / Resources



[HENDI 582046 Double Timer \[pdf\]](#) Instruction Manual

582046, 582046 Double Timer, 582046, Double Timer, Timer

References

- hendi.com
- hendi.com
- [User Manual](#)

582046, 582046 Double Timer, Double Timer, HENDI,

HENDI Timer

—Previous Post

HENDI 281376 Programmable Microwave Oven With USB Port User Manual

Next Post—

HENDI 212172,212196 Bubble Waffle Maker User Manual

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Manuals+, Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.