



HENRAC TECH F2 Smart WiFi Door Lock User Manual

[Home](#) » [HENRAC TECH](#) » HENRAC TECH F2 Smart WiFi Door Lock User Manual 



TECH F2 Smart WiFi Door Lock User Manual



Contents

- [1 PRODUCT NOTICE AND PRODUCT MAP](#)
- [2 INSTALLATION INSTRUCTIONS](#)
- [3 OPENING DIRECTION](#)
- [4 FUNCTION AND OPERATION](#)
- [5 Other descriptions](#)
- [6 TECHNICAL PARAMETERS](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

PRODUCT NOTICE AND PRODUCT MAP

Dear users, Hello! Thank you for using this smart lock Please check the product list carefully before you install and use this product, read the installation instructions, and install the product according to these installation instructions. If it is not installed according to this installation instruction, a direct or indirect product problem will be caused. , and other hazards and losses, our company does not assume any responsibility.

Inner panel/ Outer panel

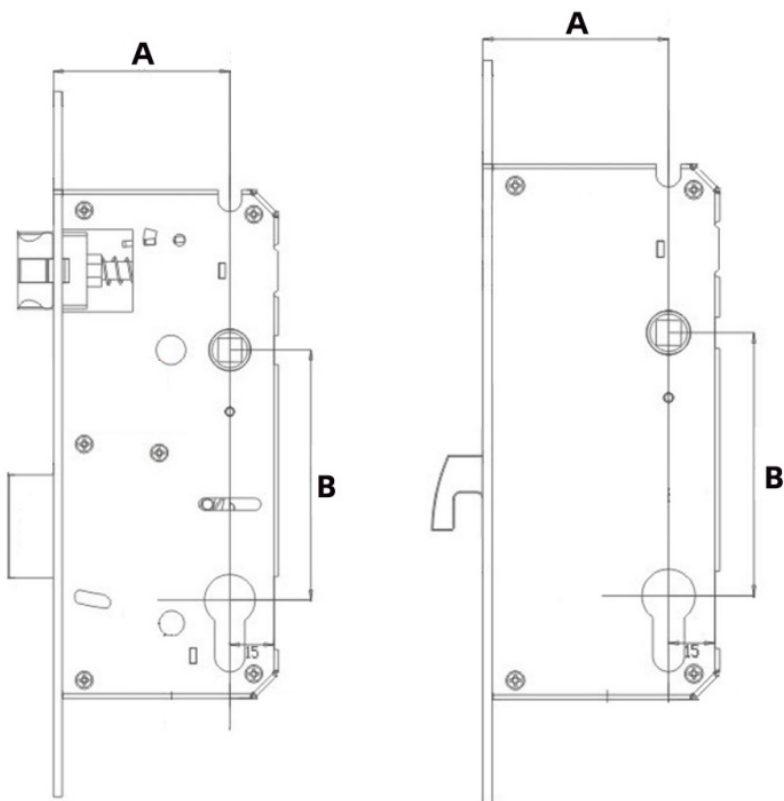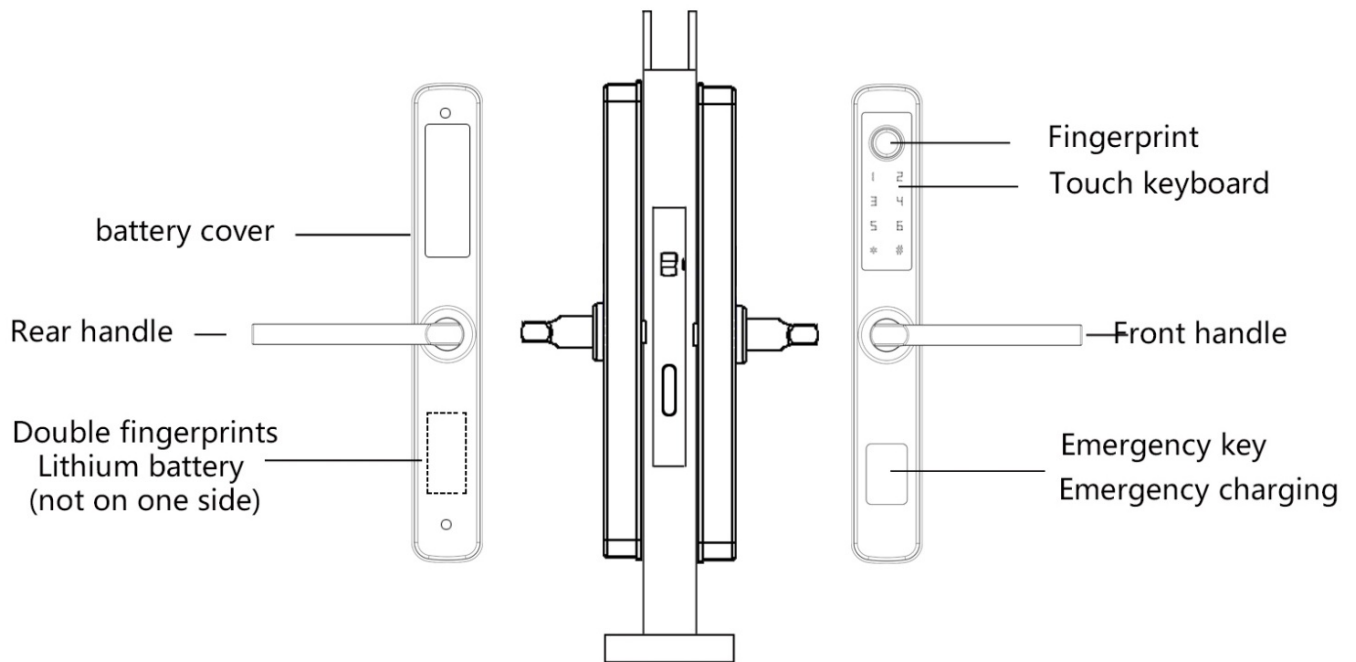

UNIT: mm

A	28	30	35	40	45	60
B	85	85	85	85	85	85

Support above 6 sizes
And multi-point lock body size


INSTALLATION INSTRUCTIONS




HEED

The door lock, lock body and handle can be used for different opening doors, which can be reversed left and right. Please select different lengths of mounting accessories according to the thickness of the door.


OPENING DIRECTION

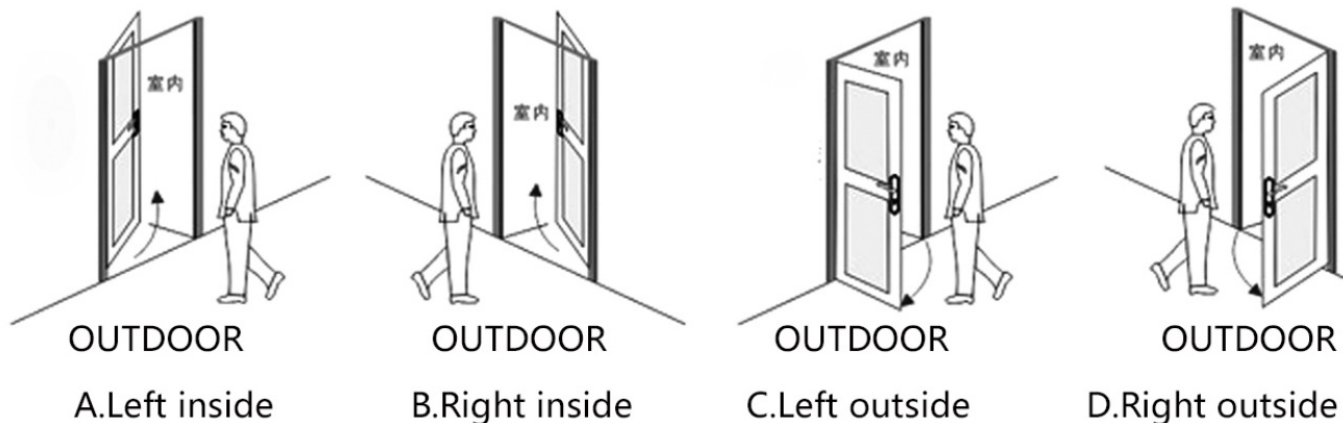

MEASURING THE LENGTH AND WIDTH OF THE GUIDE PIECE

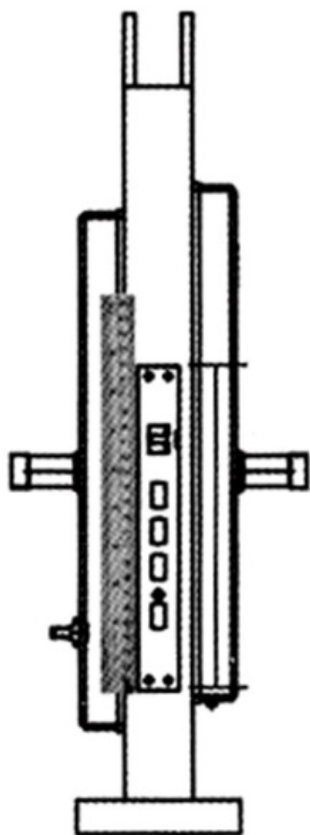

Measuring the length
of the guide piece

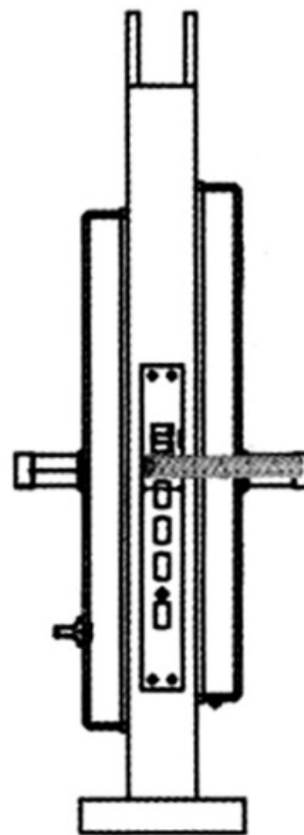

Measuring the thickness
of the guide piece

FUNCTION AND OPERATION

Initialize

One-sided initialization:


Long press the button "Set" (on the rear panel) for 5s, and sound the voice prompt "successfully initialized".

Double-sided initialization:


In the front panel (back panel), press *# to enter the Settings menu after verification by the administrator, and select "2 Delete user" type "666#" system initialization (front and back panels each initialization need to operate separately)

Note: the password under initialized state is 123456, or input any fingerprint to open the door.


Add administrator's information (it's allowed to add 9 administrators at maximum).

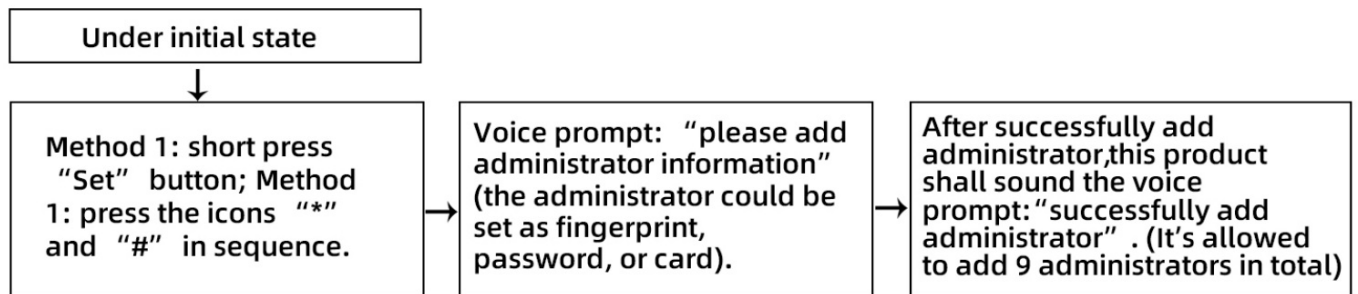


Add unlocking information

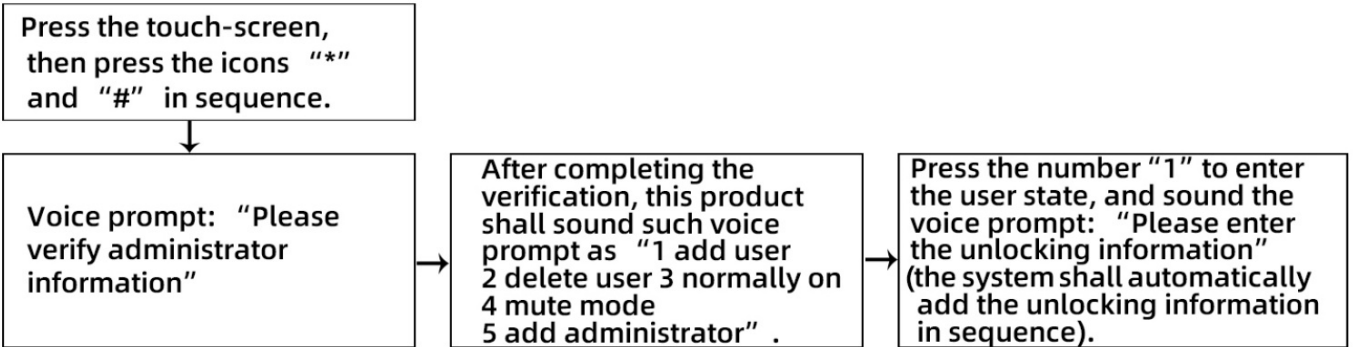

Note: the first 9 unlocking information are referred to the administrators, and if s allowed to add 300 pieces of unlocking information at maximum). Remote control (optional). **Delete unlocking information**

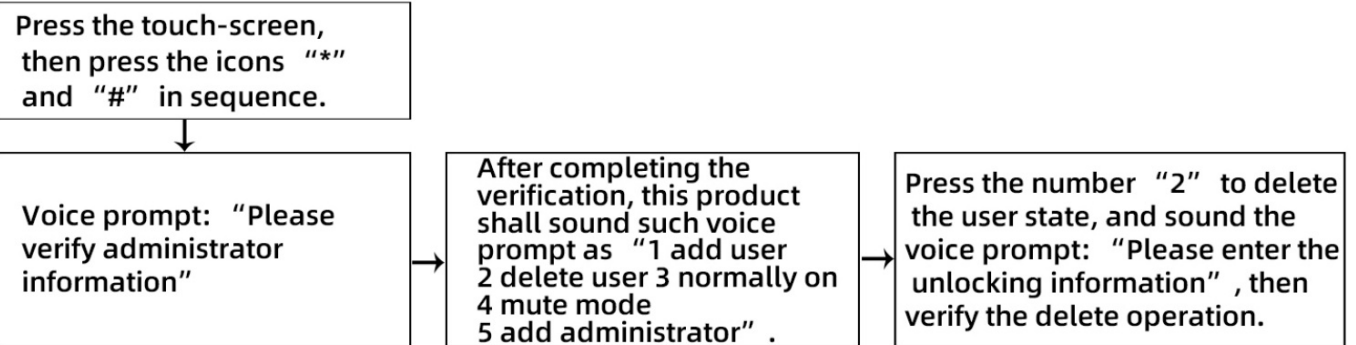


Normally on

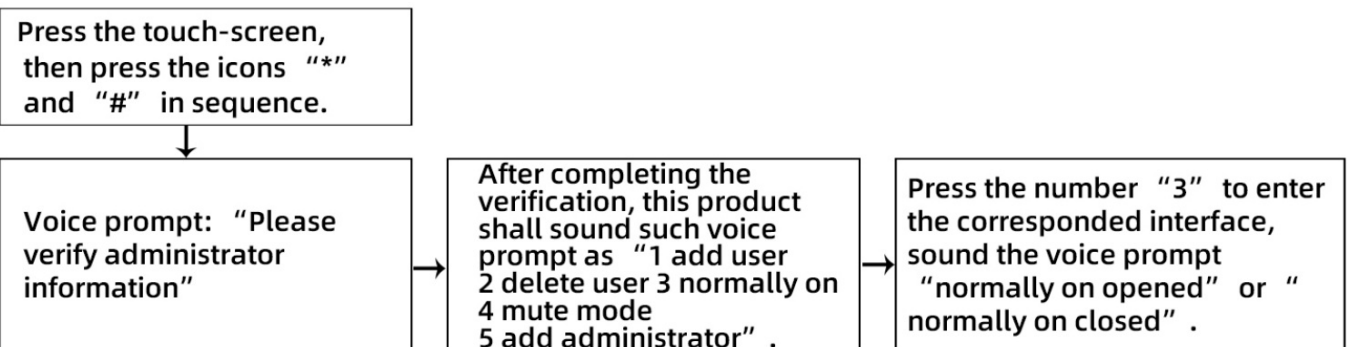

Note: in case the product is working under "normally on" mode, the lock will not close automatically after each unlocking, and needs to be closed manually once

Mute mode

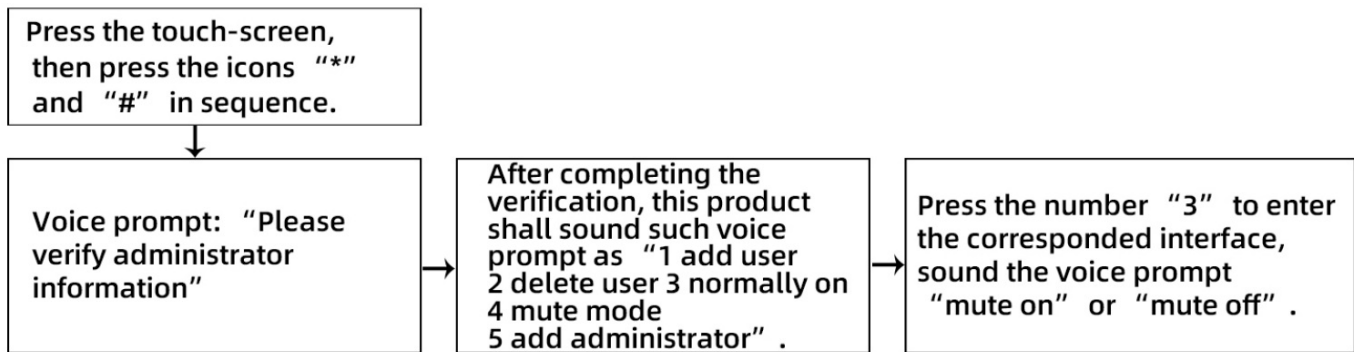

Note: in case the product is set to such mode as "mute on", each unlocking shall be subject to mute mode.

WeChat Mini Program



WeChat Mini Program

Scan WeChat to open the applet Please follow the instructions

Other descriptions

1. If the operator continuously fails to enter the right password 6 times, the keyboard shall be locked for 1min., and the system shall not respond to any operation during this time.
2. Peep prevention password: the password shall be entered by such method as XXX password XXX, that is, add some unrelated code before and after the password, then press "#" for confirmation. The input contents shall contain the password.
3. During each operation, the system shall exit automatically if the operator fails to input any command for more than 12s.
4. If the voltage is lower than 4.8V, the automatic alarm shall be activated during each unlocking operation, and the unlocking operation can be conducted 200 times after activating this automatic alarm; please replace the battery before reaching the ruled unlocking times, otherwise, there will be unlocking delay.
5. Under the initial state, input "555666333#" to realize the language switch, and it supports such two languages

as Chinese and English.

TECHNICAL PARAMETERS

INSTALLATION INSTRUCTIONS USE PICTURES FOR REFERENCE ONLY PRODUCT DRAWINGS ARE SUBJECT TO THE REAL THING.

Key type	number	Serial number	remark
9	10	1-9	
The average user	280	10-300	

PARAMETER	
POWER SUPPLY	5AA BATTERY <50 uA
QUIESCENT CURRENT	
WORKING CURRENT	<250 mA
FINGERPRINTS	< =100
CARDS	< =300
PASSWORDS REMOTE CONTROL	< = 300 < =100
WORKING TEMPERATURE	-10°C – 60°C
WORKING HUMIDITY	20% – 93%

AFTER-SALES SERVICE WARRANTY CARD

USER NAME (UNIT).....
UNIT.....
PURCHASE DATE.....
TEL.....
MODEL.....
NUMBER.....
NUMBER.....
MODEL.....
PROBLEMS AND SOLUTIONS SIGNATURE.....
DATE.....
01.....
02.....

Documents / Resources

	<p>HENRAC TECH F2 Smart WiFi Door Lock [pdf] User Manual F2, Smart WiFi Door Lock</p>
--	-----------------------------------------------------------------------------------------------------------