



Hernpark HSBB01 CD Cassette Player Combo User Manual

[Home](#) » [Hernpark](#) » Hernpark HSBB01 CD Cassette Player Combo User Manual 

Hernpark HSBB01 CD Cassette Player Combo User Manual



Contents

- [1 IMPORTANT SAFETY INSTRUCTIONS](#)
- [2 PACKAGING & PRODUCT](#)
- [3 TROUBLESHOOTING](#)
- [4 CHARGING](#)
- [5 USER GUIDE](#)
- [6 'WORKING MODE](#)
- [7 SPECIFICATIONS](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using this player and keep it for later reference.

Warning:

The player:

To reduce the risk of fire or avoid the damage to the human body, please follow the instructions below:

1. If the player fails to work, please contact our after-sales staff in time, professional technical support staff will provide you with detailed answers.
2. The player can not be used or stored in moist environment, please keep the player away from any liquid. steam or vapor, such as rain drop, mist etc.
3. Please do not plan liquid or metal gadgets onto the player, such as pin or a cup of coffee.
4. Please do not expose the player to the sunlight and keep it away from fire heater. The player can not be placed under high temperature environment
5. All professionals with extensive electronic knowledge and maintenance experience are allowed to disassemble the player for maintenance. The replacement of spare parts must be done in strict accordance with the parameters of the circuit design
6. Please do not stick or hit the player with sharp objects.
7. There are light emitting diodes in this player, staring directly with eyes should be avoided to prevent visual impairment from being caused.
8. Children under years is not allowed to use the player individually.

Battery:

If the player you purchased contains batteries, please do not disassemble the player or charge the player with other adapters that do not meet the electrical parameters of this product to avoid circuit failure. For your safety, please treat the built-in high-capacity polymer lithium battery by following the instructions below:

1. Please do not remove the battery pack.
2. Please do not beat or impact this player.
3. Please do not make the battery short circuit or pierce it.
4. Please do not place the player under high temperature which is above 140°F (60 °C).
5. Please do not put the battery in a fire.
6. If the battery has been damaged, please ask a professional to replace the battery with same specification, or contact our after-sales support for help.

Hearing protection:

Listen at medium volume:

Please adjust the volume to an appropriate level. If the volume is too high, it may damage your hearing or even cause a permanent damage.

Listen to the audio within a reasonable time frame:

Long time listening, even at a reasonable volume may cause damage to your hearing. Please use the product properly and get a rest when necessary.

 
Environmental protection:

To protect the environment and human health, please follow local laws and regulations on the abandon of the package, electronic product or battery. Please do not put the product together with household waste.

PACKAGING & PRODUCT

What's in the box

1* player

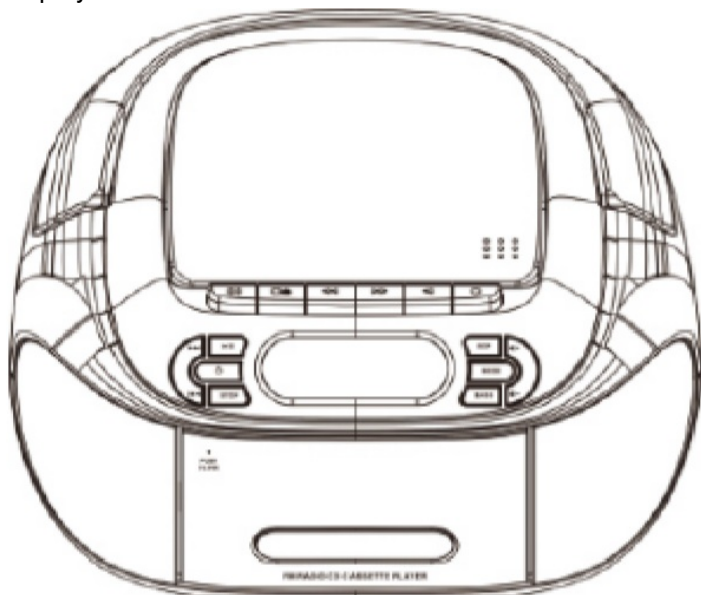

1* AC power cord




TROUBLESHOOTING

Problem	Reason	Solution
Cannot read disc	The disc is inserted incorrectly.	1. Make sure the label side of the disc is facing up; 2. Ensure the disc is fully inserted into the face.
	The disc is dirty or damaged.	1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center to the edge with a clear, soft cloth; 3. Try another new disc to check if the disc is faulty.
	The lens is dirty.	Wipe the lens gently with a degreasing cotton swab.
Cannot charge battery.	There is no current AC power outlet.	Make sure the power outlet is working.
	The plug is not plugged correctly.	Make sure the two prongs of the power cord are connected properly.
	The charger is damaged .	Replace the charger with another one matching the specification.
	The player is damaged.	Please contact us or ask a professional to repair.
The player cannot be turned on.	The switch is not turned on.	Please turn the OFF/ON button on the side to ON.
	The built-in battery is exhausted.	Charge the battery.
	The player is damaged.	Please contact us or ask a professional to repair.


CHARGING

 Plug the AC power cord(included) into the AC-IN jack at the back of the unit and into a wall AC power outlet.
Note: The power indicator light tunes red during charging, and the power indicator light turns blue after the battery

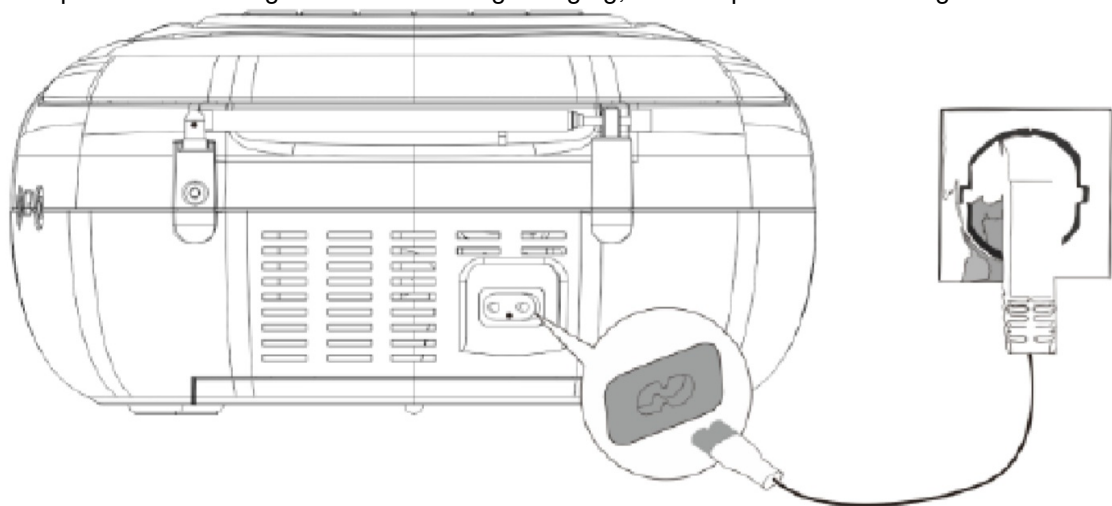

is full.

 USER GUIDE

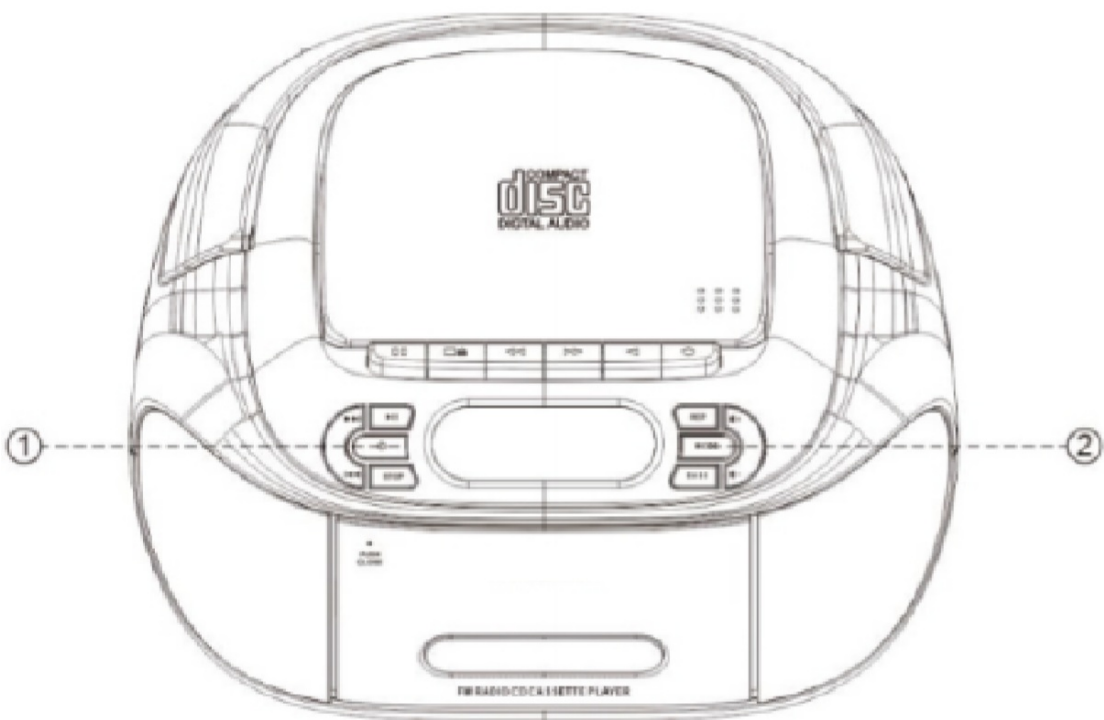







Item	Function	Item	Function
	Power on/off	I	Mode

Power ON/OFF

Power ON: Long press button (1) for three seconds to turn on the Player. **Power OFF:** Long press button (1) for three seconds to turn off the player.
Note: After the player stops working for more than 15 minutes,it will automatically shut down.Long press button (7) to reboot and start working

Mode

Short press button (@ to switch working modes The player supports & working modes: CD mode, Cassette mode,FM radio mode,USB mode and AUX mode.

 A rectangular LCD screen within a rounded rectangular frame, displaying the text "CD" in a stylized, pixelated font.	CD Mode
 A rectangular LCD screen within a rounded rectangular frame, displaying the text "tP" in a stylized, pixelated font.	Cassette Mode
 A rectangular LCD screen within a rounded rectangular frame, displaying the text "r d" in a stylized, pixelated font.	FM radio Mode
 A rectangular LCD screen within a rounded rectangular frame, displaying the text "bt" in a stylized, pixelated font.	Bluetooth Mode
 A rectangular LCD screen within a rounded rectangular frame, displaying the text "usb" in a stylized, pixelated font.	USB Mode
 A rectangular LCD screen within a rounded rectangular frame, displaying the text "AU" in a stylized, pixelated font.	AUX Mode

 
‘WORKING MODE

CD Mode



Short press "MODE" to switch mode When the screen displays "Cd", the current mode is CD mode, it supports play CDs and MP3 CD;

Note: The CD player supports playing CD, CD-R, CD-RW and MP3 CD, but not DVD and BD.

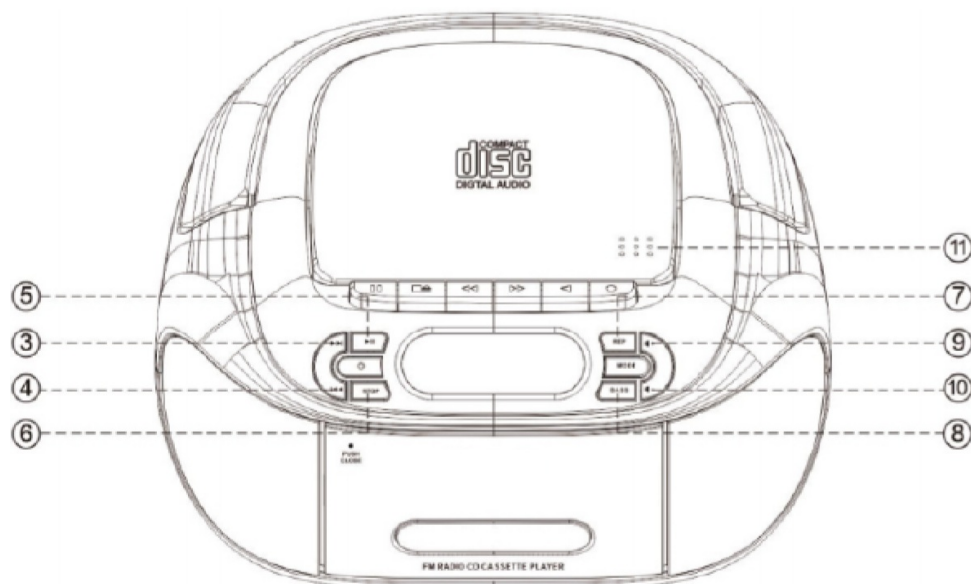

Item	Function	Item	Function
3	Next	8	Bass boost
4	Previous	9	Volume+
5	Play/Pause	10	Volume-
6	Stop	11	OPEN
7	Repeat		

Play

Step 1: Press () to open the lid and put into the CD.

 
Step 2: Close the lid, and wait for reading. After reading, it will start playing automatically.

 
Step 3: Short press (5) to play or pause. Short press (3) and (@) to select the next or previous song. Long press (3 and (@) to fast forward or rewind.

Step 4: Play mode setting: The player defaults to play in sequence, short press (3) to select the playing mode: Repeat 1, Repeat All, and random play(RAN).

Step 5: Bass boost setting: Press button (8) to turn on or turn off the bass boost function. When the screen displays "ON", it is turned on, and when it displays "OFF", it is turned off.

Cassette Mode.

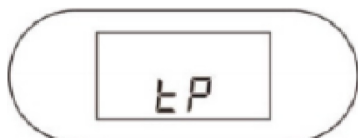

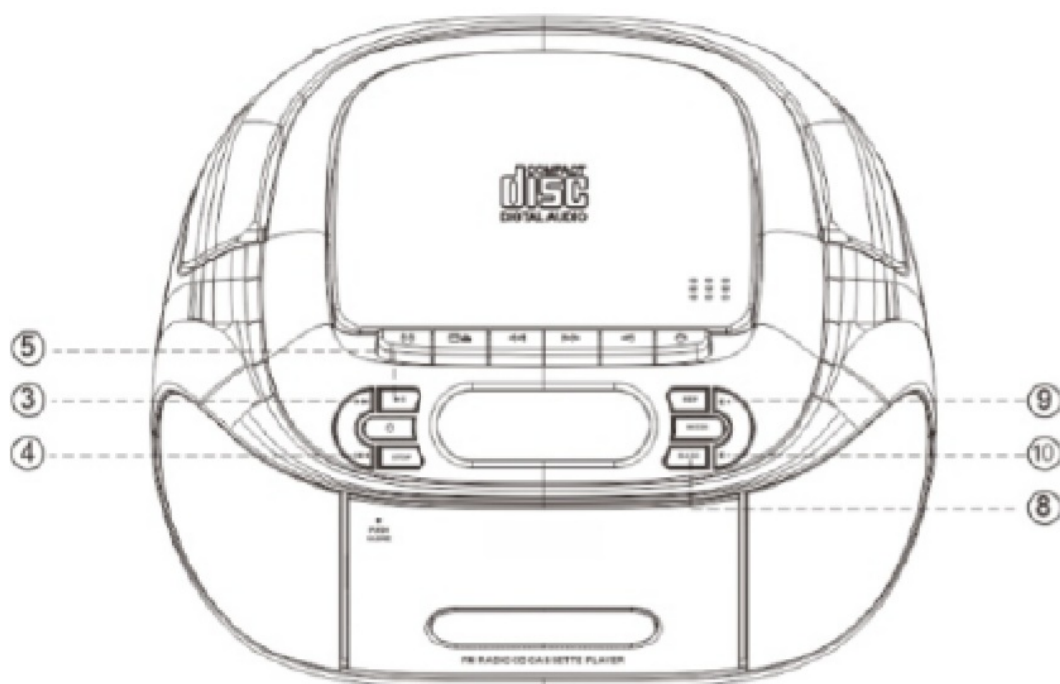

Item	Function	Item	Function
9	Bass boost	14	Fast Forward
10	Volume+	15	Rewind
11	Volume-	16	Play
12	Pause	17	Recording
13	Stop / Eject		

Play

Step 1: Press (3 to open the Cassette door and insert the tape. Step2: Close the Cassette door.

Step 3: Press (8 to start playing tape.Press @ when you want to pause the tape,and press again to resume tape playback.

Step4: Press (@@ when finished, press again to open the Cassette door.

Recording

Step1: Press (@ to open the Cassette door and insert the blank tape.

Step 2: Select the function mode you want to record (Except for tape mode] by short pressing the button 2 and make it play normally.

Step 3: press ([@ and (D at the same time, the recording starts, when the recording process is complete, short press @ to stop.

FM Radio Mode



Short press "MODE" to switch mode: When the screen displays "rd", the current mode is FM radio mode, which supports listening to FM radio;

Item	Function	[mcm	Funct1on
3	Tune +	8	Bass boost
4	Tune –	9	Volume+
5	Preset/MEM+	10	Volume-

 
Play

Step 1: Adjust the antenna.


Step 2: Long press (3) or (@) to automatically search for the next or previous station. And short press (3) or @ to manually search for the next or previous radio stations. Preset Setting

Long press (8) to enter the automatic channel search, each saved station will display P01, 02, 03... The maximum limit is P20. Short press (8) to select the stations in the search list. And P01,02,03...corresponds to different FM station.

Bluetooth Mode

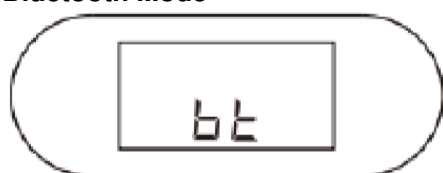

 Short press “MODE” to switch mode. When the screen displays “5L”, the current mode is bluetooth mode, which supports pairing with bluetooth device to play music.

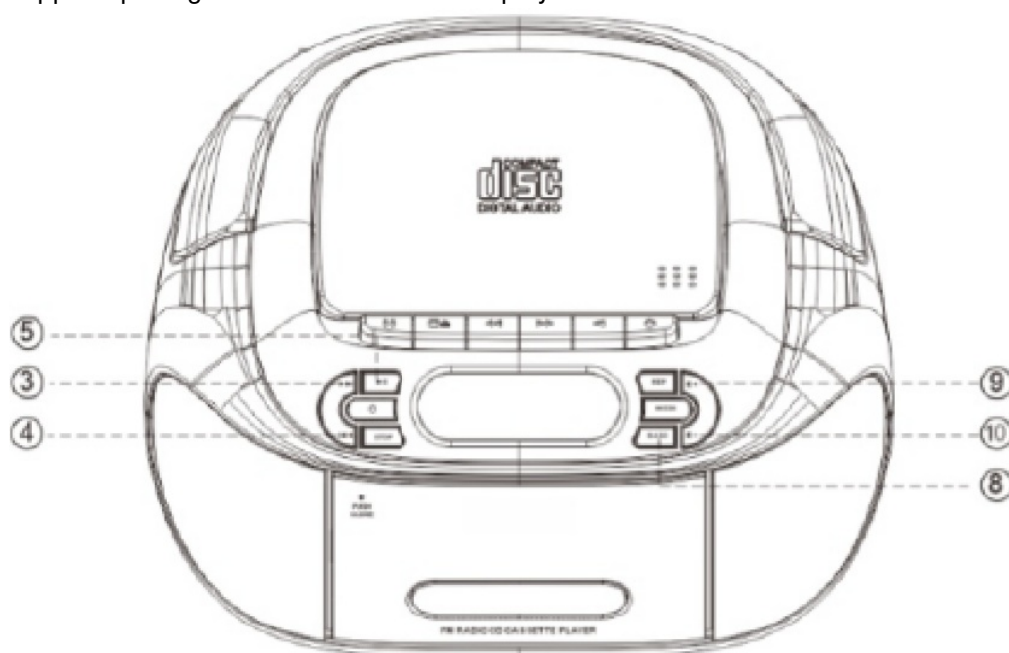

Item	Function	Item	Function
3	Next	8	Bass boost
4	Previous	9	Volumes
5	Play/Pa use	10	Volume-

Play Step : 1. Activate your Bluetooth on your phone or tablet

 
Step 2: Find ” CB201B” in the available devices list and select it to pair with the boombox Step 3: Press button (\$) to Play or pause the current track. press and hold to disconnect the paired device

Step 4: Bass boost setting : press button (8) to turn on or turn off the bass boost function. when the screen displays “ON”, itis turned on, and when it displays “OFF”,itis turned off.

USB Mode



Short press “MODE” to switch mode. When the screen displays “ US b ”, the current mode is USB mode, which supports inserting U disk to play music.

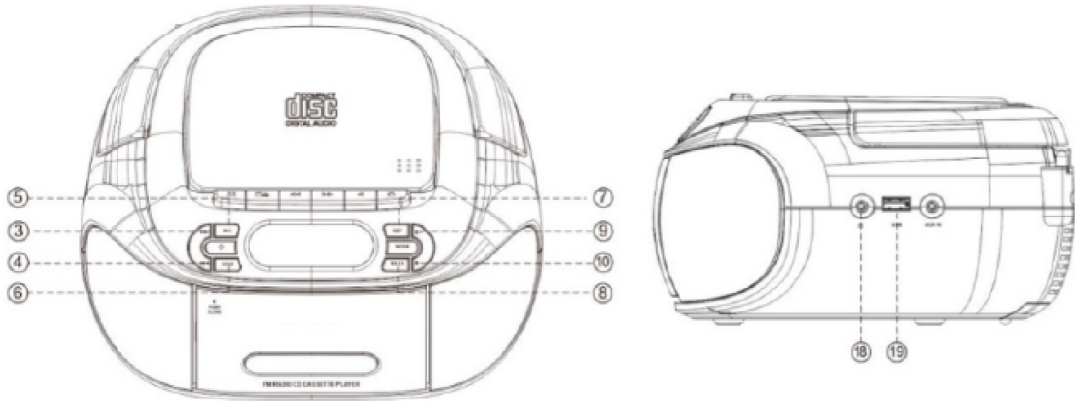

Item	Function	Item	Function
3	Next	8	Bass boost
4	Previous	9	Volumes
5	Play/Pause	10	Volume—
6	Stop	18	Earphone
7	Repeat	19	USB

 
Play

Step 1: Plug U disk into (19) and wait for reading. After reading, it will start playing automatically.
Step 2 : Short press (8) to play or pause.Short press (3) and (19) to select the next or previous song.Short press (3) and (19) to increase and decrease the volume.
Step 3: Play mode setting: The player defaults to play in sequence,short press (7) to select the playing mode: Repeat 1, Repeat All, and random play(RAN). **Step 4 :**
Bass boost setting: Press button 8 to turn on or turn off the bass boost function. When the screen displays “ON”, it is turned on, and when it displays “OFF”, it is turned off.

AUX Mode



Short press “MODE” to switch mode. When the screen displays “AU”, the current mode is AUX mode, which supports connecting to AUX to play music;

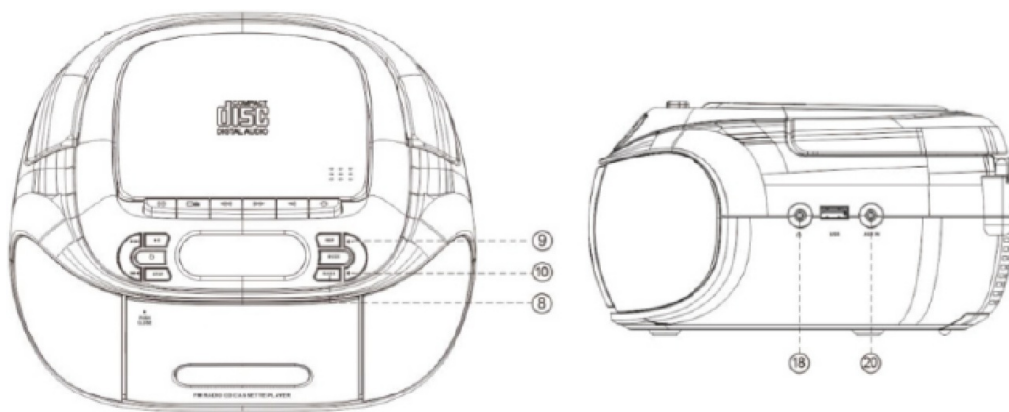

Item	Function	Item	Function
8	Bass boost	18	Earphone
9	Volume+	20	AUX IN
10	Volume—		

Play

Step 1 : Use the AUX cable (included) to plug one end into the @) .

Step 2: Plug the other end of the AUX cable into the 3.5mm headphone jack of external devices(mobile phones or tablets).

Step 3:

Bass boost setting: Press button (8 to tur on or turn off the bass boost function. When the screen displays “ON”, it is turned on, and when it displays “OFF”, it is turned off.

Note: Music control (play, pause, etc) must be done from your external device.

SPECIFICATIONS

Size	237(W) x 219(D) x 18(H)mm	Tuning Range :	FM : 87.5-108.0 MHz
Weight	1.32 kg	Sampling frequency	44.1KHZ
Power Requirement	AC 100-240V-50/60Hz	Frequency response	20-20KHZ
voltage	7.4V	Operation temperature	0°C~40°C
Banner		Supported disc formats	CD,CD-R,CD-RW,MP3 CD
Power		Supported USB formats	MP3,WMA
Charging time	about 4-5Hours	USB Flash Drive Plug Max Capacity	32G

Documents / Resources

FM Radio CD Cassette Player



User Manual

HSBB01

[Hernpark HSBB01 CD Cassette Player Combo](#) [pdf] User Manual

HSBB01 CD Cassette Player Combo, HSBB01, CD Cassette Player Combo, Cassette Player Combo, Player Combo, Combo