



 
[Home](#) » [Hi Rancher](#) » **Hi Rancher AB5T Load Bars User Manual** 

Contents [[hide](#)]

- [1 Hi Rancher AB5T Load Bars](#)
- [2 Specifications](#)
- [3 Unboxing](#)
- [4 Weighing system](#)
- [5 Use Assembly](#)
- [6 E.G Connect Fox Indicator](#)
- [7 Testing](#)
- [8 Troubleshooting](#)
- [9 Further Information](#)
 - [9.1 FAQs](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

Hi Rancher


Hi Rancher AB5T Load Bars

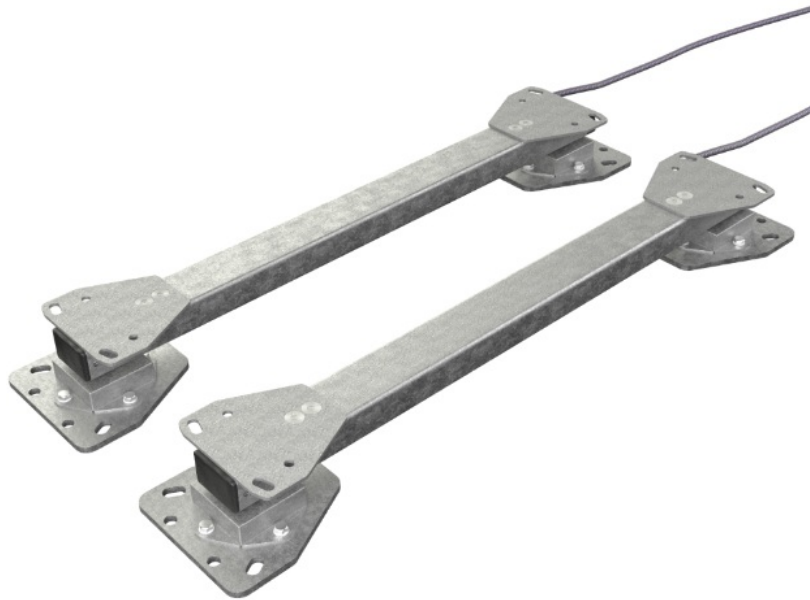

Specifications

- **Product Name:** AB5T Load Bars
- **Weighing System:** Load Bar x 2, Indicator, Cattle Crush
- **Components:** Black Nylon Bag, M10 Hexagon Bolt Set x 16, M10 Anchor Bolt x 16, Hex key

 Unboxing

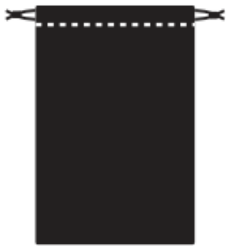

Black Nylon Bag



M10 Hexagon Bolt Set *16



M10 Anchor Bolt *16

 


Hex key



Load Bar*1

Weighing system

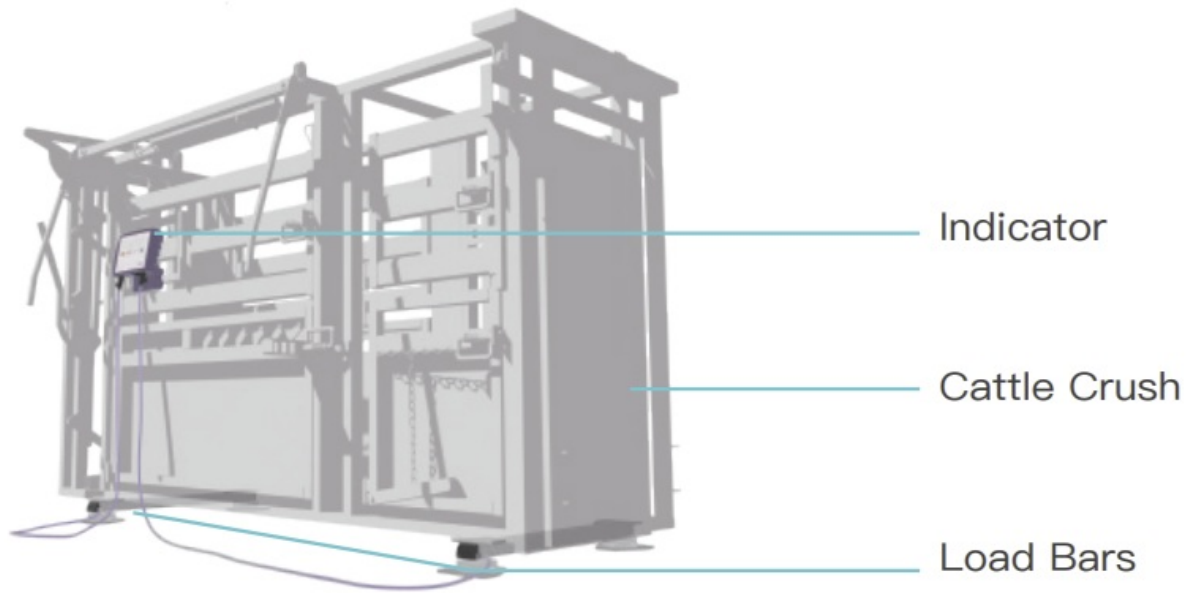

The weighing system consists of a weight indicator and two load bars, which are installed under the platform or chute.

(**Tips:** you may also need adaptor plates for your chute.)

Use Assembly

Step 1.

Select a horizontal and firm ground for the load bars

(**Tips:** Must be installed on a horizontal ground to weigh accurately)

Step 2.

Lift the cattle chute from the center through using a forklift (Avoid contact with the installation area) and maintaining minimal clearance to slide the load bar into place.

Step3

 
Slide the load bar into one side, align the load bar's mounting holes with the cattle chute hole, lower the cattle chute slowly, let it almost touch the load bars, take out the M10 bolts*16pcs, use a wrench to fix the load bar at both ends with M10 bolts and nuts. Repeat step three for another one.

Step 4.

Carefully lower the cattle chute, then depart away. Secure the foot plate to the ground with anchor bolts*16pcs


Step 5.

Connect the load bar to an indicator, power on, and zero the indicator (e.g, fox)

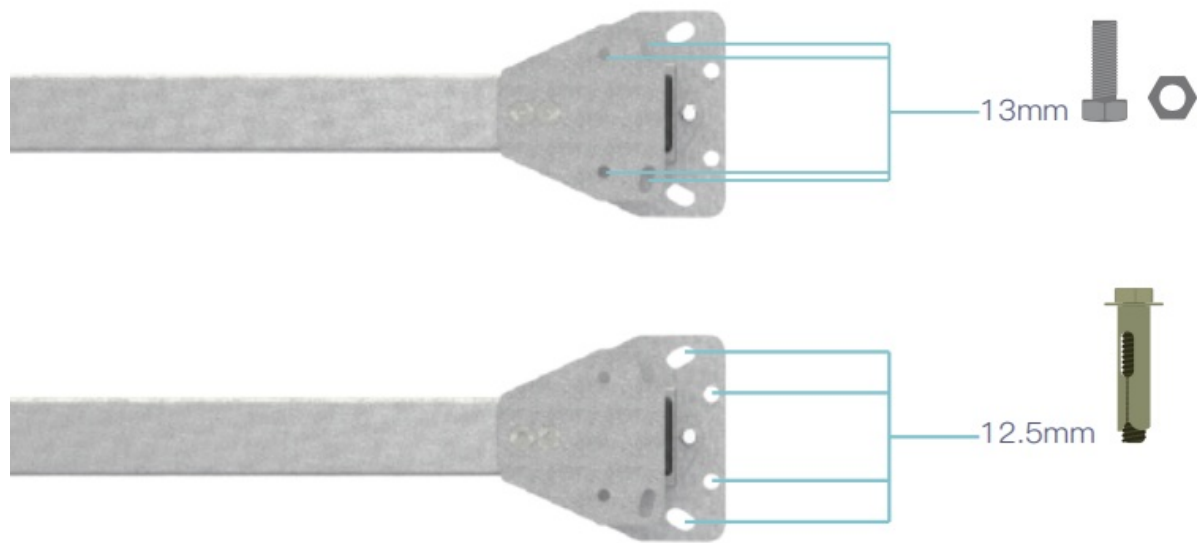


E.G Connect Fox Indicator

 Step1

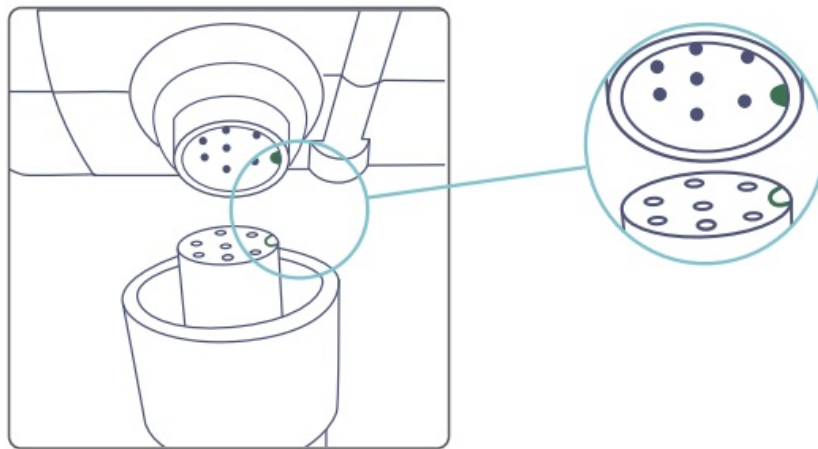


Hold the black plug and insert it into the hole. We have set up corresponding raised parts and recesses for proper alignment.

 Step2.

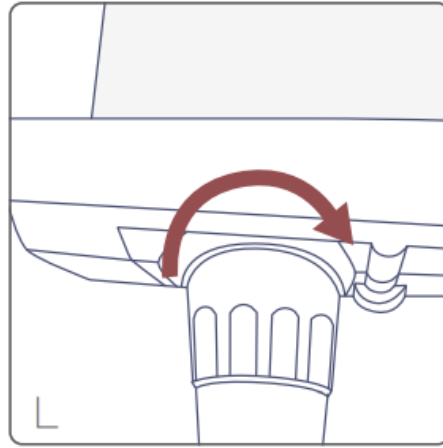

- Turn clockwise to tighten.

 Step3.

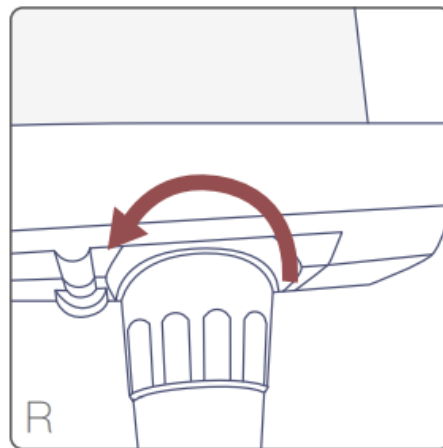

Tighten the other end in the same manner by turning counter clockwise.

Tips

1. When removing the connector, hold the connector body itself. Do not pull it out by holding the blue cable, as this may cause damage and affect the weighing accuracy.
2. After use, cover the connector with the black cap to prevent dust from entering and causing blockages, which may affect precision.

Testing

Must test with a weighing indicator.

Step 1

Put a test weight(which may be yourself or another person) at one end of the

platform/crate and note the stable reading on the indicator.

Step 2

Take the weight off and put it on the other end of the platform/crate, and note the stable reading on the indicator.

Step 3

Remove the test weight and note whether the reading returns to zero.

Step 4

If the two readings differ by more than 1% of capacity or the reading does not return to zero, see the troubleshooting section.

Tips: During use, if the device has not been used for a period of time, repeat the above test before using it for the first time.



Troubleshooting

Fault	Remedy
-------	--------

<p>Reading does not return to zero between animals/Difference in readings at each end of the platform/Under reading(reading lighter than expected)</p>	<ol style="list-style-type: none"> 1. Ensure that the platform/crate is not touching objects that may alter the weights. <p>Typical causes are binding against fixed metal work or the buildup of dirt.</p> <ol style="list-style-type: none"> 2. Check that the load bar feet are sitting evenly on the ground. 3. Check that bolt holes are not misaligned, as this may put a residual load on the load bars. 4. Recalibrate the load bars
<p>Reading is unstable</p>	<ol style="list-style-type: none"> 1. Moisture in the load bar connector. <p>Remove moisture from the plugs and caps using methylated spirit/Ethyl alcohol, or a suitable electrical contact cleaner.</p> <ol style="list-style-type: none"> 2. Damaged cable. 3. Moisture in the load cell. 4. Moisture in the junction box.
<p>Reading moves, the display shows underload or overload.</p>	<ol style="list-style-type: none"> 1. Damaged cable. 2. Damaged indicator.

For further issues, please connect to our agency or our salesman, thanks

Further Information

1. Do not leave the indicator, load bars, or plugs immersed in water.
2. Cables should be placed correctly so that they will not be damaged.
3. Regularly clean up manure and fertilizer buildup around the load bar to ensure

weighing accuracy.

FAQs

Reading does not return to zero between animals?

Ensure the platform/crate is clear of objects affecting weights and check load bar alignment.


Reading is unstable?

Remove moisture from plugs and caps, check for damaged cables or load cells.

Reading moves, display shows underload or overload?

Check for damaged cables or the indicator. If further issues arise, please contact our agency or salesman for assistance.

Documents / Resources

	Hi Rancher AB5T Load Bars [pdf] User Manual AB5T Load Bars, AB5T, Load Bars, Bars
---	--

References

- [User Manual](#)

Hi Rancher

AB5T, AB5T Load Bars, BARS, Hi Rancher, Load Bars

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.