



Hikenture SKU:1054-C Collapsible Wagon Cart with Cargo Net Instructions

[Home](#) » [HIKENTURE](#) » Hikenture SKU:1054-C Collapsible Wagon Cart with Cargo Net Instructions 

Hikenture SKU:1054-C Collapsible Wagon Cart with Cargo Net Instruction




Contents

- [1 How to Unfold the Wagon](#)
- [2 How to Fold the Wagon](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

How to Unfold the Wagon

1. Open the storage bag and take out the wagon.

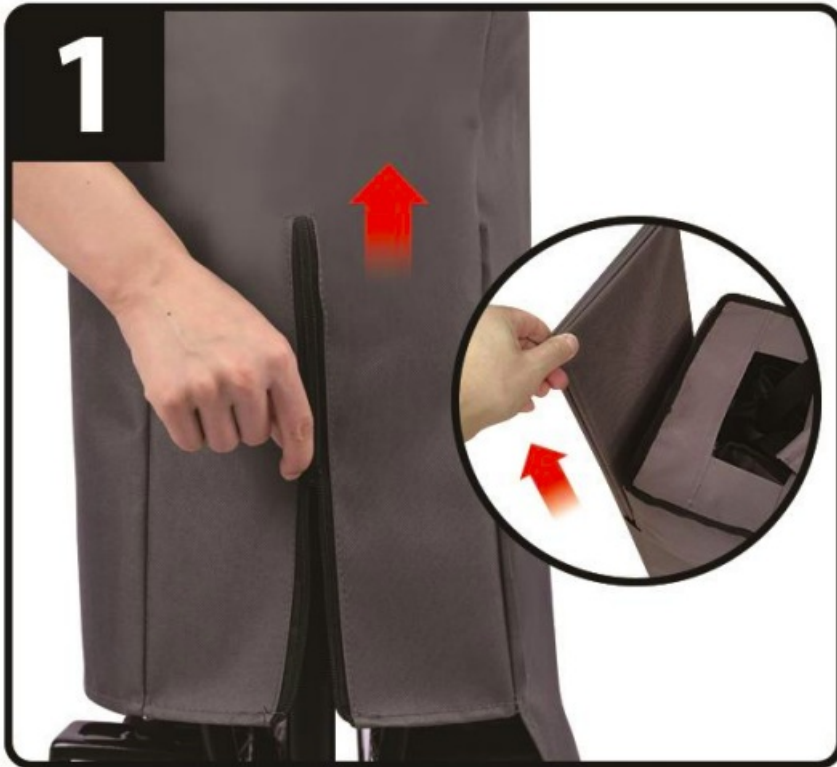

2. Untie the nylon strap on the side of the wagon.



3. Unfold the wagon.



4. Press down on the raised pillar with your hands until the wagon is fully unfolded.



5. Then put the load-bearing plate on the bottom of the wagon.



How to Fold the Wagon

1. Take out the load-bearing plate at the bottom of the wagon.



2. Lift up the bottom strap to fold the wagon.



3. Press the red button on the handle and fold the handle down.



4. Tighten the straps until the wagon is folded to the smallest size.



5. Put it in the storage bag and place the load-bearing plate on the side pocket



Need Help? Be free to email us with any question which you may have.
service@hikenture.com

Documents / Resources



[Hikenture SKU:1054-C Collapsible Wagon Cart with Cargo Net](#) [pdf] Instructions
SKU 1054-C Collapsible Wagon Cart with Cargo Net, SKU 1054-C, Collapsible Wagon Cart with Cargo Net, Wagon Cart with Cargo Net, Cargo Net, Net

References

- [User Manual](#)