



HIKOKI NH18DSL Cordless Auto Hammer Instructions

[Home](#) » [HiKOKI](#) » HIKOKI NH18DSL Cordless Auto Hammer Instructions 

HIKOKI

 
 
LIST NO. K891

NH18DSL Cordless Auto Hammer
Instructions

Contents

- [1 ELECTRIC TOOL PARTS LIST](#)
- [2 STANDARD ACCESSORIES](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

ELECTRIC TOOL PARTS LIST

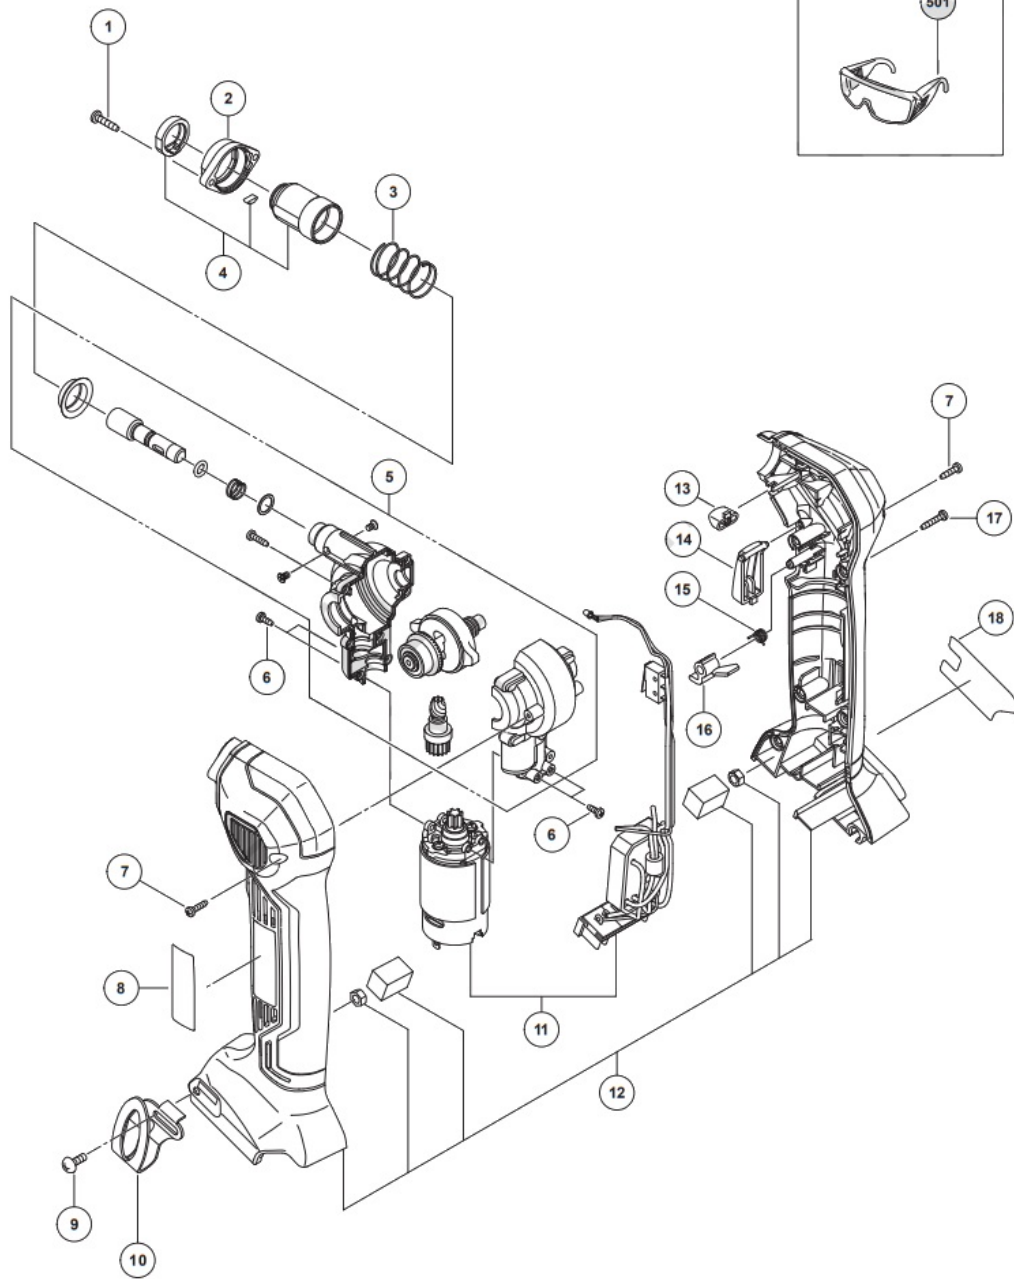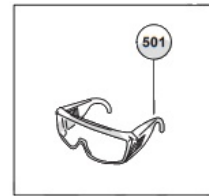

Item No.	Code No.	Description	No. Used	Remarks
1	373870	Screw Set (B) (2 pcs.)	2	
2	373917	Nail Guide Support	1	
3	373916	Spring	1	
4	373867	Nail Guide Set	1	
5	373866	Gear Case Set	1	
6	373871	Screw Set (C) (4 pcs.)	4	
7	373869	Screw Set (A) (2 pcs.)	2	
8		Brand Label	1	
9	327001	Truss HD. Screw M4 (Black)	1	
10	372229	Hook	1	
11	373868	Motor Set	1	
12	373865	Housing Set	1	
13	373915	LED Cover	1	
14	373920	Switch Trigger	1	
15	373918	Torsion Spring	1	
16	373919	Pushing Button	1	
17	373872	Screw Set (D) (6 pcs.)	6	
18		Name Plate	1	

STANDARD ACCESSORIES

ITEM NO.	CODE NO.	DESCRIPTION	USED USED	REMARKS
501	875769	PROTECTIVE GLASSES	1	

 
OPTIONAL ACCESSORIES

ITEM NO.	CODE NO.	DESCRIPTION	USED USED	REMARKS
601	333352	BATTERY BSL 1815 (EUROPE)	1	

HIKOKI

Koki Holding Co, Ltd.
*ALTERNATIVE PARTS
Printed In Japan
(180827N)
2018.8.27

Documents / Resources

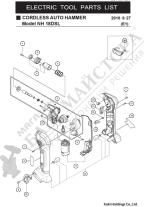	HIKOKI NH18DSL Cordless Auto Hammer [pdf] Instructions NH18DSL Cordless Auto Hammer, NH18DSL, Cordless Auto Hammer, Auto Hammer, Hammer
---	--

Manuals+