



HIKVISION MCH508 Helmet Camera User Guide

[Home](#) » [Hikvision](#) » HIKVISION MCH508 Helmet Camera User Guide 

HIKVISION MCH508 Helmet Camera



Contents

- 1 Safety Instruction
 - 1.1 Preventive and Cautionary Tips
 - 1.2 Symbol Conventions
- 2 Overview
 - 2.1 Appearance
 - 2.2 1.2 Internal LCD Description
- 3 Installation
 - 3.1 Change Battery
 - 3.2 Install SIM Card and SD Cardb
 - 3.3 Install Device to Helmet
- 4 Basic Operation
 - 4.1 Startup and Shutdown
 - 4.2 Charge
 - 4.3 Turn on LED Lights
 - 4.4 Record
 - 4.5 Capture
- 5 Chapter 4 Portable Device Assistant Connection
 - 5.1 Connect Device Wi-Fi AP
 - 5.2 4.2 Add Device
 - 5.3 Set Device
- 6 Documents / Resources
 - 6.1 References
- 7 Related Posts

Safety Instruction



WARNING

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 5 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- DO NOT connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:




- The device is only applicable to the area of which the altitude is under 2,000 m.
- The device is only applicable to the non-tropical area.
- Using battery of incorrect model may cause explosion. Handle the used battery according to the local

requirements.

- Discard the scrapped battery according to the local laws and regulations. If there is no law or regulation about battery, discard it in the electronic equipment waste bin and keep it far away from children.
- DO NOT expose the battery (including battery pack or assembled battery) in overheated environment such as sunlight and fire.
- DO NOT place the device near exposed fire, such as a burned candle.
- Avoid the device from water.
- Make sure that all the related equipment is power-off during the installation.
- DO NOT place the product in high-temperature or damp environment, and DO NOT expose it to high electromagnetic radiation.
- If the product does not function properly, please contact your dealer or the nearest service center. DO NOT disassemble the product for repair or maintenance by yourself.
- Only use the battery, power adapter and assembly parts specified by the manufacturer.
- Consult the authorized dealer or technician from Hikvision for any question and request for product using.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 NOTE	Provides additional information to emphasize or supplement important points of the main text.
 WARNING	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 DANGER	Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury.

Overview

Appearance

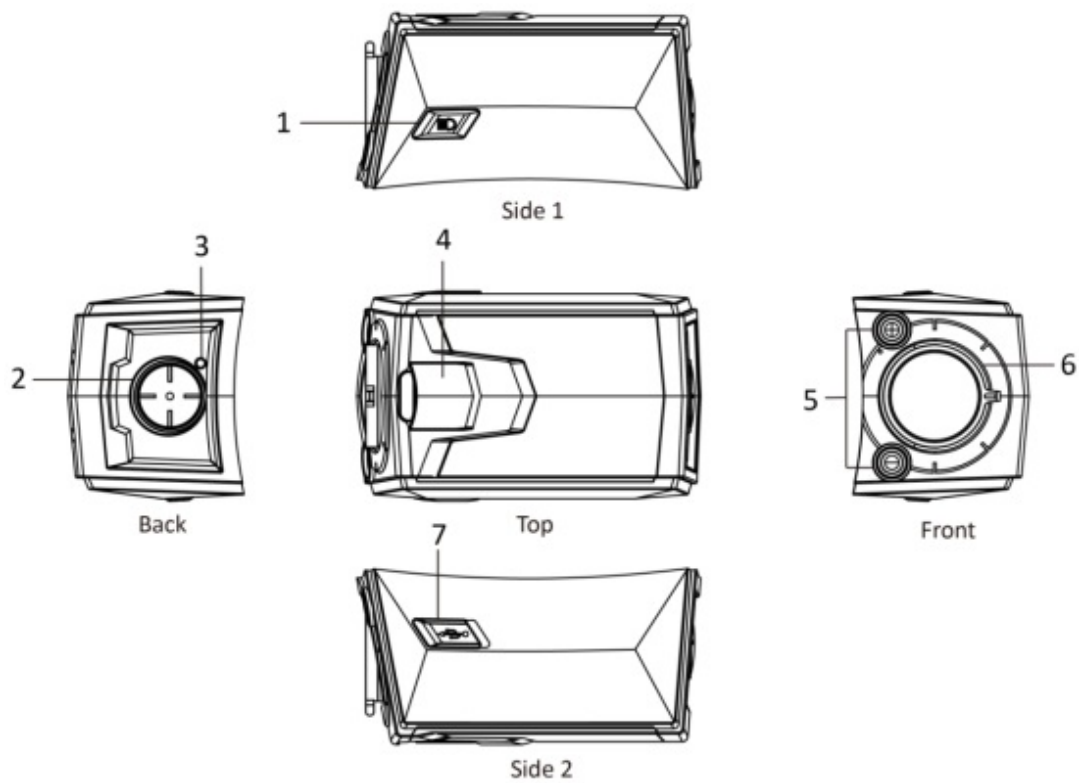 



Figure 1-1 Helmet Camera Appearance

Refer to Table 1-1 for the description of helmet camera appearance.

Table 1-1 Description of Helmet Camera Appearance

No.	Name	Description
1	LED light button/Wi-Fi A P button	<ul style="list-style-type: none"> • Press it to turn on LED lights. Then press it to turn off LED lights. • Hold it to enable/disable Wi-Fi AP.
2	On/Off button/Record b utton/Capture button/Int ernal LCD on/off button	<ul style="list-style-type: none"> • Hold it for 3 seconds to start up the device, and the device starts to recor d.
		<ul style="list-style-type: none"> • After the device starts up, hold it for 3 seconds to shut it down, and the d evice stops recording. • After the device starts up and is ready, press it to capture a picture. • After the device starts up, press it twice continuously to turn off/on the int ernal LCD.

3	Indicator	<ul style="list-style-type: none"> • Solid red: <ul style="list-style-type: none"> Ø Device is being charged after it is shut down. Ø Device is being charged after it starts up and quick charging mode is enabled. • Solid green: <ul style="list-style-type: none"> Ø Device is fully charged after it starts up. Ø Recording exception. • Flashing red and green alternately (slow): <ul style="list-style-type: none"> Ø Device is recording. Ø Device is being charged after it starts up and quick charging mode is disabled. • Flashing red and green alternately (fast): Device is out of power. <p> Note Indicator is enabled by default. Quick charging mode is enabled by default. You can disable the functions via Portable Device Assistant application. Refer to the application user manual for details.</p>
4	Battery cover buckle	For unlocking or locking battery cover.
5	LED lights	Press LED light button to turn on LED lights for light supplement or emergency illumination. Then press the button to turn off LED lights.
6	Lens	Rotatable lens to keep the image horizontal.
7	USB Type-C interface	For charging and data transmission.

1.2 Internal LCD Description

 

 






There is a LCD after you uninstall the battery cover, displaying the overwritten record condition, rest recordable time duration, battery power, Wi-Fi status, etc., as shown in Figure 1-2.



Figure 1-2 Internal LCD

Refer to Table 1-2 for icon description.

Table 1-2 Internal LCD Icon Description

Icon	Description
	Overwritten record is enabled./Overwritten record is disabled.
	The rest recordable time duration supported by the current storage capacity./MicroSD card exception.
	The current battery power status and the rest power percentage/The device is being charged via power adapter./The device is fully charged via power adapter./The device is connected to PC.
	Wi-Fi is connected./Wi-Fi is disabled, or Wi-Fi is enabled but disconnected./Wi-Fi AP is enabled.
	Positioning is enabled./Positioning is disabled./Positioning failed./Positioning exception.
	Bluetooth is enabled./Bluetooth is disabled./Bluetooth is enabled and data are transmitting.
	Recording/Recording stops.
	4G is enabled./4G network connection failed./4G is disabled.
	Platform is connected normally./Platform connection is disabled./Platform connection failed.

Installation

Change Battery

The device leaves factory with a battery. When the power is low, charge the device or change battery in time.



WARNING

Power off the device before changing battery.

Before you start:

Prepare a dedicated battery.

Step 1: Press the battery cover buckle according to the direction shown in Figure 2-1, and lift the cover to

uninstall it.

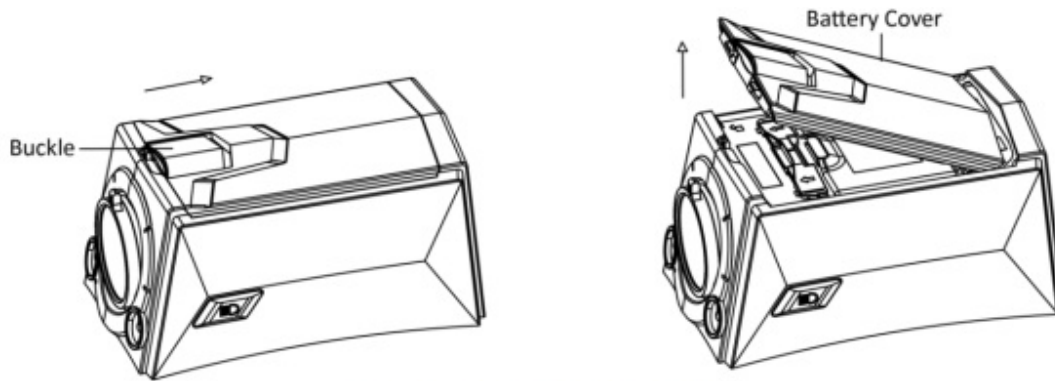 


Figure 2-1 Uninstall Battery Cover

Step 2: Push the battery buckles aside, and take the former battery out.

Step 3: Change a new battery. Press it to make the battery stuck in the battery buckles.

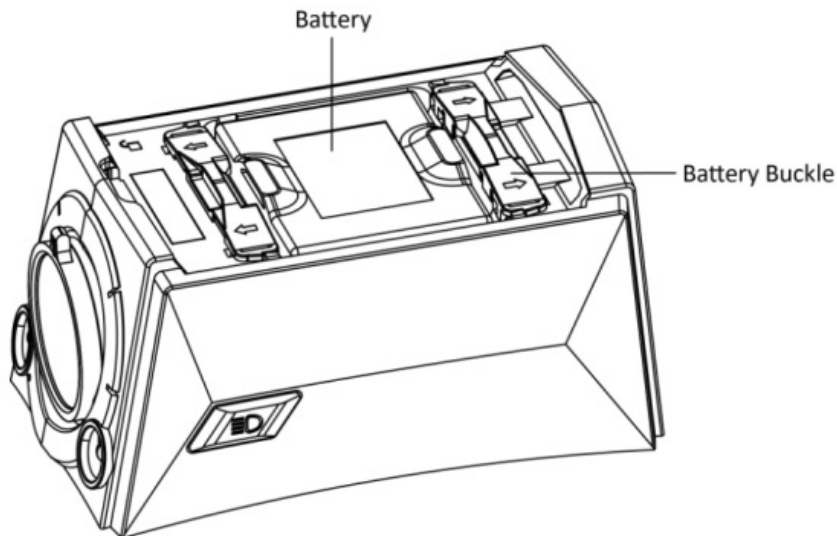 


Figure 2-2 Install Battery

Step 4: Install the battery cover back.

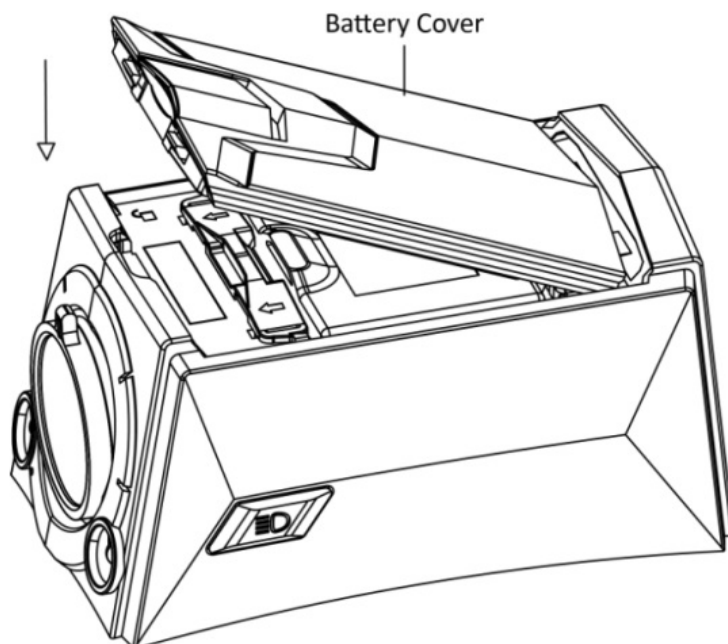 


Figure 2-3 Install Battery Cover

Install SIM Card and SD Card

You can install Micro SIM card for network connection and install MicroSD card for storage.

⚠ WARNING

Power off the device before installing Micro SIM card and MicroSD card.

Before you start:

Prepare Micro SIM card and MicroSD card.

Step 1: Uninstall battery cover. Refer to step 1 of 2.1 Change Battery.

Step 2: Take the battery out.

Step 3: Unlock the card sockets according to the tips on the printing.

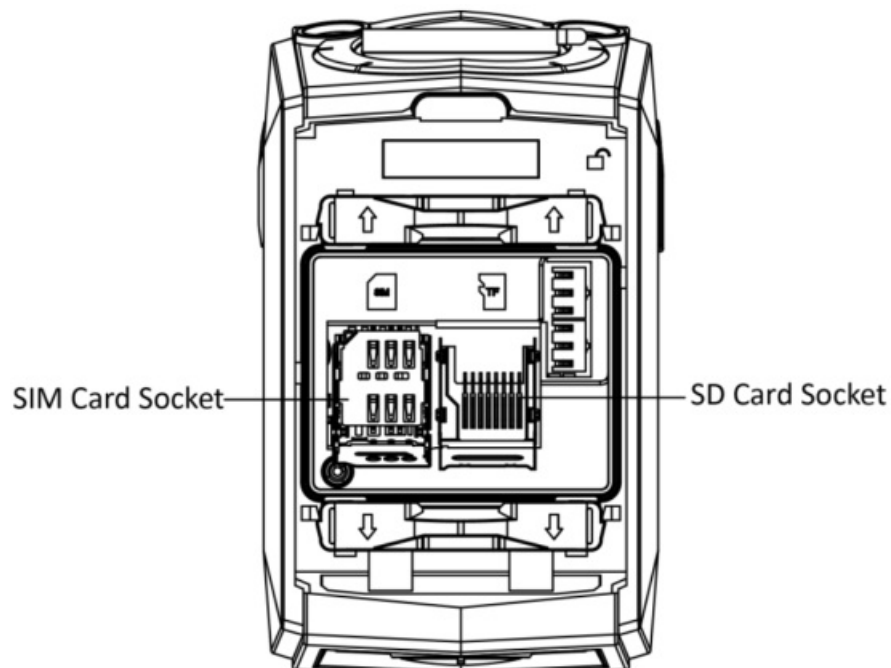 


Figure 2-4 Open Card Socket

Step 4: Place the Micro SIM card and MicroSD card according to the gap direction

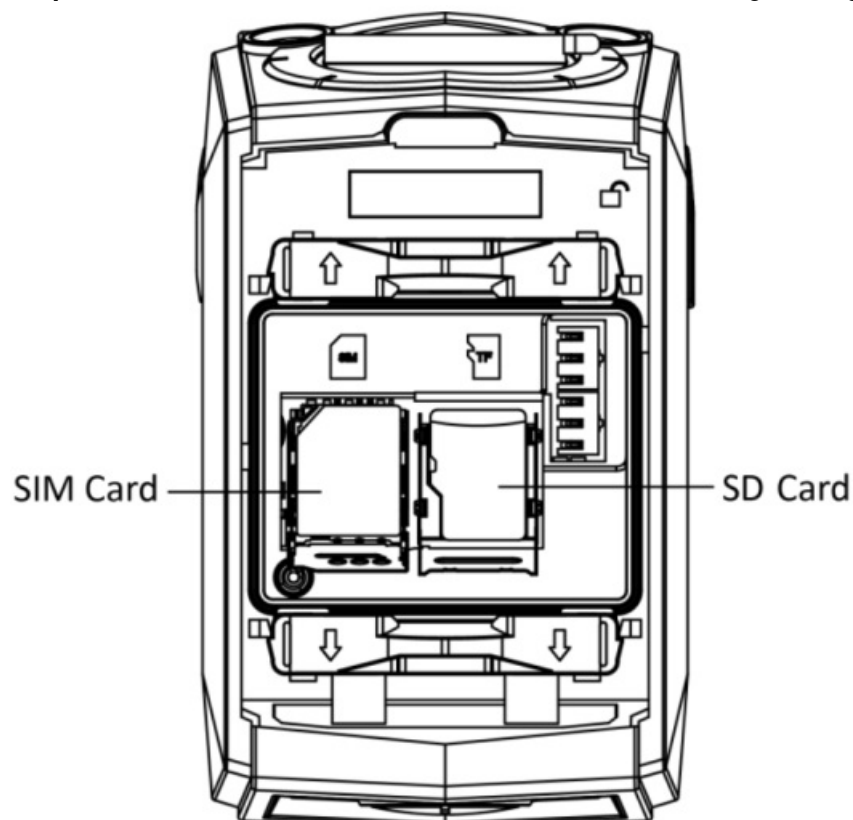 


Figure 2-5 Place Cards

Step 5: Lock the card sockets according to the tips on the printing.

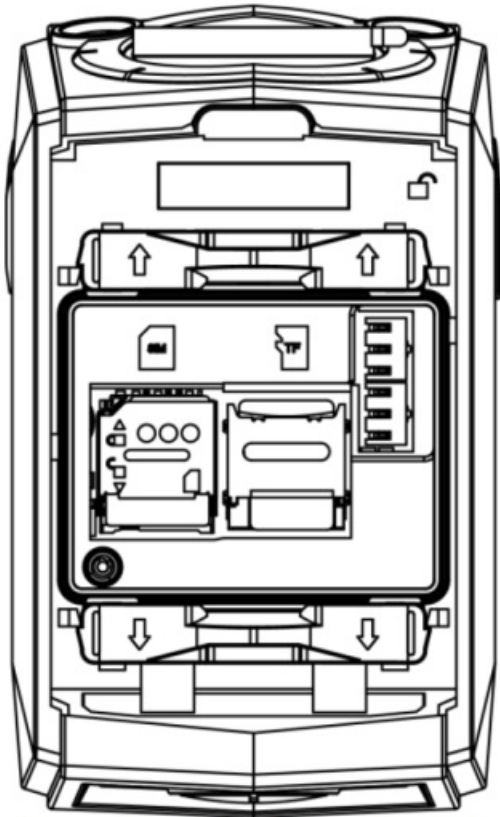 


Figure 2-6 Lock Card Socket

Step 6: Install the battery back. Refer to step 2 of 2.1 Change Battery.

Step 7: Install the battery cover back. Refer to step 3 of 2.1 Change Battery.

Install Device to Helmet

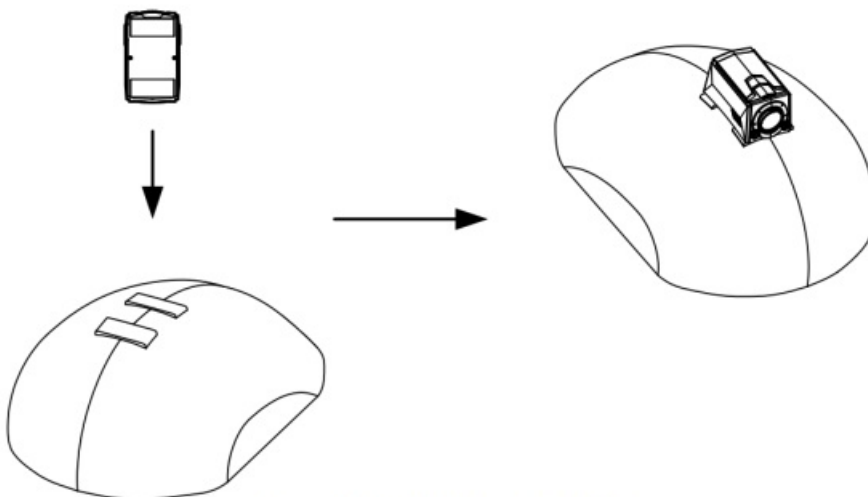 


Figure 2-7 Install Device to Helmet

Basic Operation

Startup and Shutdown

- **Startup:** Hold the On/Off button for 3 seconds until the indicator displays red. Then the device vibrates for 1 second, indicating the device has started up.
- **Shutdown:** Hold the On/Off button for 3 seconds until the indicator changes to green. Then the device vibrates twice with each vibration lasting for 0.5 second, indicating the device is shut down.



NOTE

Vibration is enabled by default. You can disable vibration via Portable Device Assistant application. Refer to the application user manual for details.

Charge

When the device is out of power, charge it or change the battery in time.

Step 1 Open the USB Type-C interface cover.

Step 2 Insert one end of USB cable to the USB Type-C interface, and the other end to the power adapter, and connect the power adapter to the power supply.



NOTE

- Use the matched power adapter to charge the device.
- Quick charging is enabled by default. In quick charging mode, all the functions are disabled.

You can disable the function via Portable Device Assistant application. Refer to the application user manual for details.

Turn on LED Lights

When the environment is dim or dark, or in emergency condition, you can press LED light button to turn on LED lights for light supplement or emergency illumination.

Record

Recording starts once the device starts up. Recording stops once the device is shut down. Refer to 3.1 Startup and Shutdown for details.



NOTE

After record starts, if you connect the device to PC via USB cable, or enable quick charging mode, record will stop.

Capture

- Manual capture: Press the capture button, and the device vibrates for 0.1 second, indicating capturing succeeded.
- Timed capture: Set timed capture via the Portable Device Assistant application. Refer to the application user manual for details. In timed capture mode, press the capture button to enable the function, and the device will capture pictures according to the set capture interval. The device vibrates for 0.1 second after capturing a picture, indicating capturing succeeded. Press the capture button again to stop timed capture.

Chapter 4 Portable Device Assistant Connection

The helmet camera has been activated after leaving factory. You can enable Wi-Fi AP of the device. After connecting the mobile terminal to the Wi-Fi AP, you can preview the record and set the device via the Portable Device Assistant application installed on the mobile terminal.

Before you start:

- Install Portable Device Assistant on mobile terminal.
- After the device starts up, hold Wi-Fi AP button until the device vibrates to enable Wi-Fi AP.

Connect Device Wi-Fi AP

Enable WLAN of the mobile terminal. Connect the mobile terminal to the Wi-Fi AP of the helmet camera to make them in the same network domain.



NOTE

- The default Wi-Fi AP SSID of the helmet camera is named as Model_Serial No.
- The default Wi-Fi AP password of the helmet camera is abcd1234. Change the Wi-Fi AP password in time. You can change it via Portable Device Assistant. Refer to the application user manual for details.




WARNING

We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

4.2 Add Device


Add device to Portable Device Assistant.

Step 1 Run Portable Device Assistant.

Step 2 Tap , and select **Devices**.

Step 3 Tap , and select **Online Device**. The application will search the devices connected by the mobile terminal.

Step 4 Tap the searched helmet camera, and click **Add**

Step 5 Enter User Name and Password. Tap 

New Device	
Alias	192.168.43.220
Address	192.168.43.220
Port	8000
User Name	admin
Password	•••••

Figure 4-1 Add Device



NOTE

The device default user name is admin, and the default password is 123456. Change the device password in time. You can change it via Portable Device Assistant. Refer to the application user manual for details.




WARNING

We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Set Device

After the device is added, you can set the device via Portable Device Assistant.

Step 1 Tap , and select Devices.


Step 2 Tap the added helmet camera to enter Device Information interface.

Device Information	
Alias	192.168.43.220
Register Mode	IP/Domain
Address	192.168.43.220
Port	8000
User Name	admin
Password	*****
Camera No.	1
Password Security: Risky Password	
Configure This Device	Start Live View

Figure 4-2 Device Information

Step 3 Tap **Configure This Device**.

Result:

- After selecting the helmet camera as the set device, you can tap **Start Live View** to start live view.
- You can tap  and select **Device Maintenance** to set the device. Refer to the application user manual for details.

Quick Start Guide

COPYRIGHT © 2019 Hangzhou Hikvision Digital Technology Co., Ltd.

ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be “Hikvision”). This user manual (hereinafter referred to be “the Manual”) cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

This Manual is applicable to Helmet Camera.

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (<http://overseas.hikvision.com/en/>).

Please use this user manual under the guidance of professionals.

Trademarks Acknowledgement

HIKVISION and other Hikvision’s trademarks and logos are the properties of Hikvision in various

jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES. IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory information

FCC information

FCC compliance: Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement

This product and – if applicable – the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Radio Equipment



Directive 2014/53/EU, the EMC Directive 2014/30/EU, the LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the

purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.

2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.

Industry Canada ICES-003 Compliance


This device meets the CAN ICES-3 (B)/NMB-3(B) standards requirements.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1) this device may not cause interference, and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.



Documents / Resources

	<p>HIKVISION MCH508 Helmet Camera [pdf] User Guide MCH508, 2ADTD-MCH508, 2ADTDMCH508, MCH508, Helmet Camera</p>
--	---

References

-  [HOME](#)
-  [HOME](#)