

HIKVISION PG Camera LED Brightness Setting Instructions

Home » Hikvision » HIKVISION PG Camera LED Brightness Setting Instructions




Contents

- 1 HIKVISION PG Camera LED Brightness **Setting**
- **2 Product Information**
- **3 Product Usage Instructions:**
- 4 PG camera LED brightness setting
- 5 Documents / Resources
 - **5.1 References**
- **6 Related Posts**



HIKVISION PG Camera LED Brightness Setting

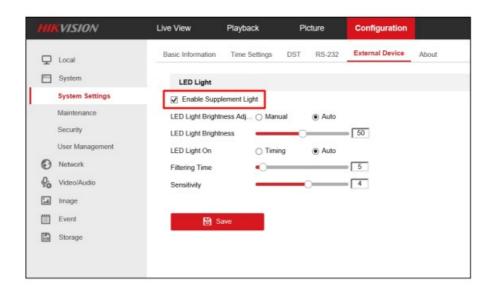

Product Information

Specifications:

• Product Name: PG Camera

LED Brightness Setting: Available

• Default User Name: admin

• Default Password: 123456

Product Usage Instructions:

Step 1: Connect the Camera and Computer to the Network

- 1. Connect the camera to the switch (or router) using a network cable.
- 2. Connect the computer to the same switch (or router) using a network cable.

Step 2: Download and Install AjDevTools

- 1. Download the search software AjDevTools from your computer.
- 2. Install AjDevTools on your computer.

Step 3: Configure Network Settings

- 1. Launch AjDevTools and search for the camera on the network.
- Once found, select the camera and modify the IP address of your computer to be on the same network segment as the camera.

Step 4: Access Camera Settings

- 1. Open a web browser on your computer.
- 2. Enter the IP address of the camera in the browser's address bar.

Step 5: Log in to the Camera Interface

- 1. On the camera's web login interface, enter the default user name: admin.
- 2. Enter the default password: 123456.

Step 6: Adjust LED Brightness

- 1. After logging in, navigate to the "Settings" section.
- 2. Select "Camera" and then choose "Graphics".
- 3. Look for the option to adjust LED brightness and click on it.

Frequently Asked Questions (FAQ)

Q1: What is the default user name and password for logging into the camera interface?


The default user name is admin, and the default password is 123456.

Q2: How can I adjust the LED brightness of the PG camera?


To adjust the LED brightness, follow the steps mentioned in the "Product Usage Instructions" section above.

PG camera LED brightness setting


1. First connect the camera to the switch (or router) with a network cable, connect the computer network cable to the same switch (or router), download the search software AjDevTools from the computer, search, check the camera and modify the IP address of the computer on the same network segment.

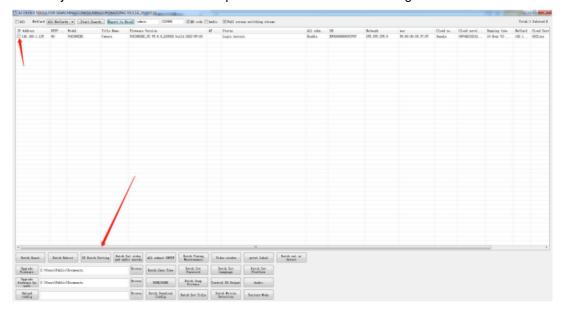

2. Open the browser and enter the IP address of the camera, enter the web login interface, the default user name is admin, and the default password is 123456.

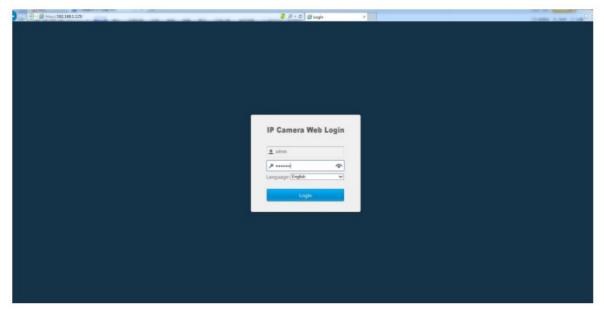

3. After logging in, click Settings – Camera – Graphics – LED Brightness.

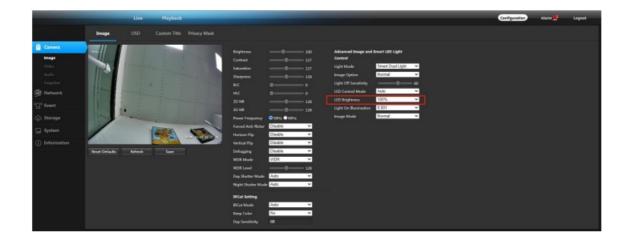

Documents / Resources



<u>HIKVISION PG Camera LED Brightness Setting</u> [pdf] Instructions PG Camera LED Brightness Setting, Camera LED Brightness Setting, LED Brightness Setting, Brightness Setting, Setting

References

• User Manual

Manuals+,