



Home » HINKLEY » HINKLEY 15540 Aura Path Light Installation Guide 🏗

Contents hide

- 1 HINKLEY 15540 Aura Path Light
- 2 Specifications
- 3 Product Usage Instructions
- 4 AURA PATH LIGHT
- 5 LED replacement
- 6 Typical Ground Stake Mounting
- 7 LED replacement
- 8 FAQS
- 9 Documents / Resources
- 9.1 References

HINKLEY

HINKLEY 15540 Aura Path Light



Specifications

Product: HINKLEY AURA PATH LIGHT

Item No: 15540

• Designed for use with Hinkley-approved 12-volt landscape systems.

Product Usage Instructions

1. Find a clear area in which you can work.

 
- 2. Unpack the fixture and glass from the carton.
- 3. Carefully review instructions before assembly.

SAVE THESE INSTRUCTIONS


Note: This Luminaire is designed for use with Hinkley-approved 12-volt landscape systems.

4. Connection to other systems may cause premature Failure or unintended operation.


AURA PATH LIGHT



LED replacement

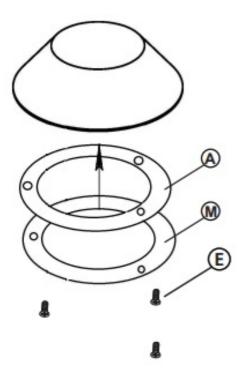

Typical Ground Stake Mounting

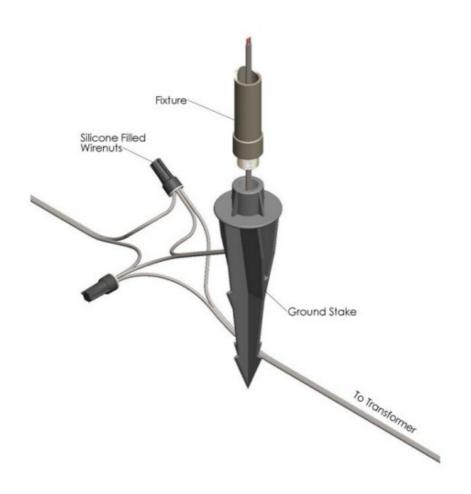

LUMINAIRE MOUNTING: (for typical ground stake mounting)

- 1. To prevent electrical shock, disconnect the transformer from the electrical supply before installation or service.
- 2. Run wire from the Luminaire through the mounting hole in the top of the ground stake.
- 3. Attach the Luminaire to the ground stake by threading it into the mounting hole in the stake until it fits snugly against the bottom of the stem.
- 4. Place a stake in the desired position and insert it into the ground until the flange of the stake is flush with the ground.
- 5. Strip the two wire leads from the Luminaire and connect to the main supply wire using the provided silicone-filled wirenut.
- Silicone-filled nuts are intended for one-time use. Wire Nut Capacity -2 pcs 18 AWG 2 pcs 12 AWG

The main low-voltage cable from the Luminaire is to be:

1. Protected by routing near the luminaire or fitting, or next to a building a structure

such as a house or deck.

- 2. The main secondary wire is intended for shallow burial, less than 6 inches (15.2cm) to connect to the main low-voltage cable 3.
- 3. Have the length cut off so that it is connected to a connector within 6 inches (15.2cm) from a building structure, a luminaire or fitting.

LED replacement

- 1. Power of fixtures
- 2. Remove acyclic ring (A) and middle ring (M) using screws (E)
- 3. Remove stem screws
- 4. Remove the failed LED
- 5. Replace the failed LED with a new LED
- 6. Replace stem screws
- 7. Next re-secure acyclic ring (A) and middle ring (M) using screws (E)
- 8. Restore power to the fixture

 
HINKLEY 33000 Pin Oak Parkway, Avon Lake, OH 44012 800.446.5539 / 440.653.5500 hinkley.com

FAQS

Q: Can this product be used with systems other than Hinkley Approved 12-volt landscape systems?

A: No, connecting this product to other systems may cause premature failure or unintended operation.

Documents / Resources



References

- H HINKLEY
- User Manual
- ■HINKLEY 15540, 15540 Aura Path Light, Aura Path Light, HINKLEY, Path Light Previous Post

HINKLEY 903352FCW-NWA 52 inch Metro Indoor Fan Instruction Manual

Next Post

HINKLEY 15542OZ Lakehouse Path Light Installation Guide

Leave a comment

rour email address will not be published. Required fields are marked
Comment *
Name
Email
Website
$\hfill\square$ Save my name, email, and website in this browser for the next time I comment.
Post Comment

Manuals+, Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.