



Hisense 2024 Range of Mini LED User Guide

[Home](#) » [Hisense](#) » Hisense 2024 Range of Mini LED User Guide 

Hisense

QUICK SETUP GUIDE
Before using the TV,
please read this guide
thoroughly and retain it
for future reference.



Contents







- 1 2024 Range of Mini LED
- 2 Find what you want
- 3 What's in the box
- 4 Getting started
- 5 Troubleshooting
- 6 Product specifications
- 7 Certification and compliance
- 8 Documents / Resources
 - 8.1 References



1407933 ES-A24093G-1

Congratulations on the purchase of your Hisense TV! If you would like to know “all things Hisense”, contact us using the support info:

The model and serial number of the TV is located on the back and/or on one side of the TV. We recommend that you record this if you ever need service.


Country	U.S.A	CANADA	MEXICO
Customer Care Center	<ul style="list-style-type: none"> • Phone: 1-888-935- 888 0 • Hours of Operation: Monday – Friday: 9 AM to 9 PM EST Saturday – Sunday: 9 AM to 6 PM EST • Service Email: Service@hisense-usa.com <p>USA: Hisense USA Corporation 105 Satellite BLVD Suite I, Suwanee, GA 30024</p>	<ul style="list-style-type: none"> • Phone: 1-855-344-7367 • Hours of Operation: Monday – Friday: 8 AM to 8 PM EST Saturday – Sunday: 9 AM to 6 PM EST, Federal holidays excluded • Service Email: canadasupport@hisense.com <p>CANADA: Hisense Canada Co., Ltd 2550 Meadowvale Boulevard, Unit 1 Mississauga, ON, Canada L5N 8C2 21:00 hrs</p>	<ul style="list-style-type: none"> • Phone: 800-008-8880 • Hours of Operation: Monday – Friday: 9:00- Saturday: 9:00-15:00 hrs • Service Email: servicio@hisense.com.mx <p>MEXICO IMPORTER: Hisense Mexico S. de R.L. de C.V. Blvd. Miguel de Cervantes Saavedra No 301 Torre Norte Piso 2, Col. Ampliacion Granada Miguel Hidalgo, Ciudad de Mexico, C.P. 11520</p>
Hisense Support Page	http://www.hisense-usa.com/support/ 	http://www.hisense-canada.com/support/ 	https://hisense.com.mx/support/ 
Register your TV	http://www.hisense-usa.com/support/registrer 	http://www.hisense-canada.com/support/productReg.asp 	https://hisense.com.mx/support/register 



Disclaimer

Disclaimer: Subscriptions or other payments may be required to access content through some applications. Some or all of the included or downloaded application services in this Hisense device may not function depending on the Internet connection, local limitations of included applications or other reasons outside of Hisense’s control. HISENSE EXPRESSLY DISCLAIMS RESPONSIBILITY FOR ANY APPLICATION SERVICE FROM FUNCTIONING AT ANY TIME, FOR CONTENT IN ANY APPLICATION SERVICE, FOR DISRUPTIONS OF SERVICE, LOCAL OR REGIONAL LIMITATIONS, WARRANTIES OF TITLE, NO INFRINGEMENT, AND FOR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. By purchasing

this device, you accept such Disclaimer without any claim on Hisense at any time.

Find what you want

This TV is equipped with this quick setup guide and embedded E-Manual ( > Settings > System > Advanced System > E-Manual). On the website (www.hisense.com), you can get the User Manual.

E-Manual support functions		
	QR Code	Scan to open the E-Manual on your mobile device.
	Search	Find the help you are looking for.

This Quick Setup Guide supports the following models:

55U7N / 55U75N / 55U78N / 65U7N / 65U75N / 65U78N
75U7N / 75U75N / 75U78N / 85U7N / 85U75N / 85U78N

What's in the box

Your Hisense TV comes with the following items:

 
- TV
- power cord e remote control
- 2 base stands
- 4 screws (55"/65"/75")(139.7cm/165.1cm/190.5cm)
- 6 screws (85")(215.9cm)
- Quick Setup Guide (this document)
- 1 set of AAor AAA (1.5Vcc) batteries
- Important Safety Information and Warranty Card
- Base cover

NOTE:

- If you need the AV adapter cable, please contact us and we will send it to you for free.
- The accessories may be different from the list above due to different models, countries/ regions, please refer to the actual accessory bag.

IMPORTANT:

To prevent accidentally discarding items that came with your TV, be sure to check ALL of the foam in the carton box.

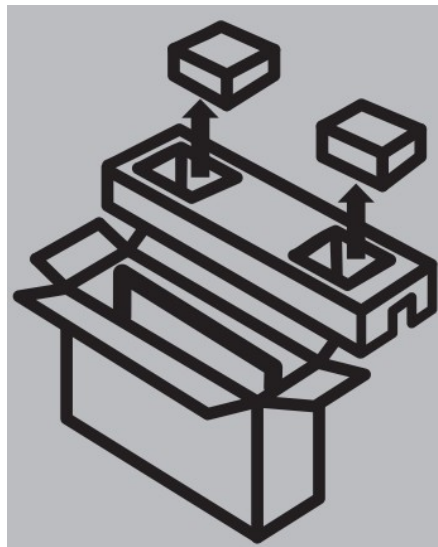

- Please check foam for accessories before discarding.

Disclaimer: This Quick Setup Guide is intended as a general guideline to help you set up your TV. Images throughout this document are for illustrative purposes only and may differ from the actual product.

Getting started

Step 1. Attach stand or mount

Before you start using your TV, attach your TV stand or mount it on the wall.

CAUTION:

 
- Disconnect the AC power cord before installing a stand or a wall mount bracket.
- The LED display on your TV is fragile. Make sure the TV screen is not scratched or damaged by hard objects or from pressure.
- After the installation is completed, make sure the TV is steady on a table or firmly attached to a wall mount, before removing all protective film, if any.

Attach the TV stand


To attach the TV stand legs to your TV:

1. Carefully place your TV face-up on a clean, soft and flat surface.
2. Insert the TV base stands into the bottom slots on your TV.
3. Use the screws provided to secure each base stand tightly.

55"/65"/75" (139.7cm/165.1cm/190.5cm)

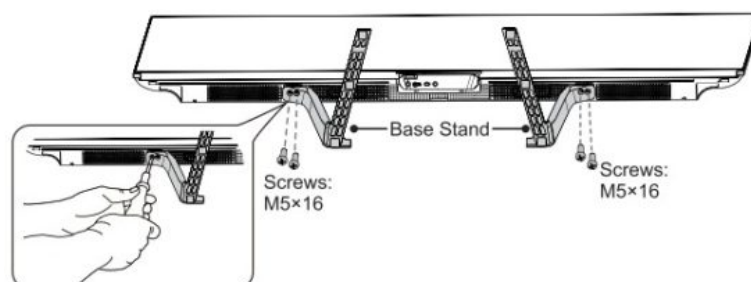


85" (215.9cm)

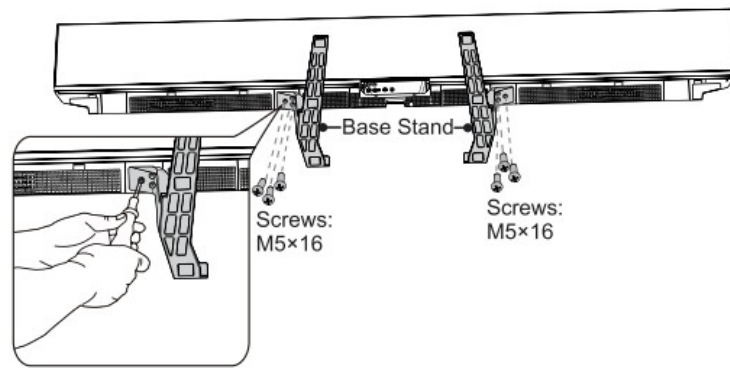 


4. Take out the base cover and insert it into the two base stands as the illustration shows.

 
55"/65"/75" (139.7cm/165.1cm/190.5 cm)

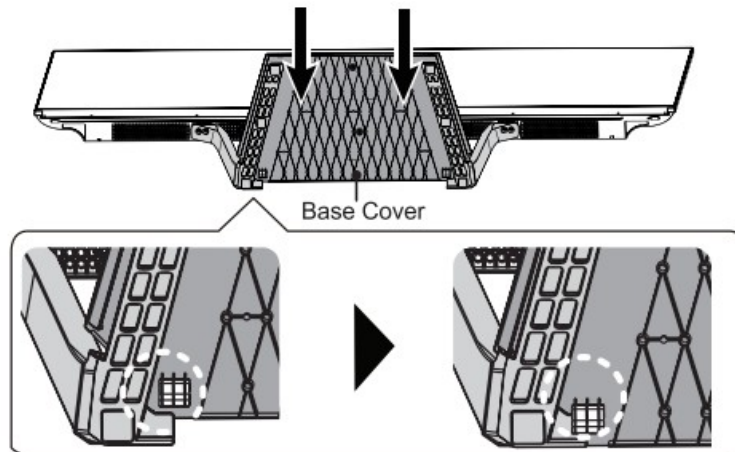

85" (215.9cm)

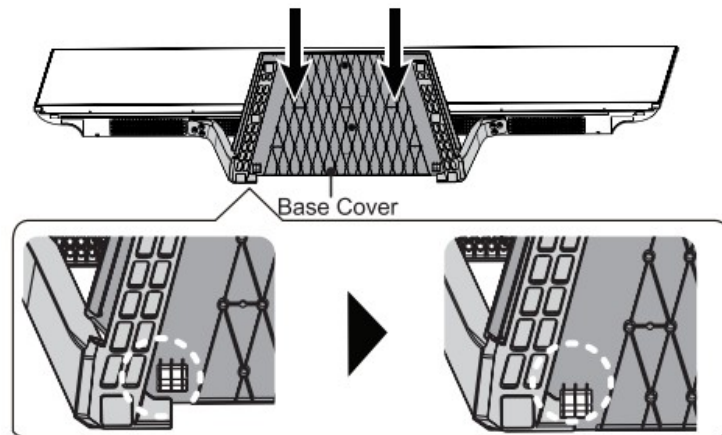 

 5. Use your hands to pinch the base cover and base stands together tightly until you heard a snap sound.

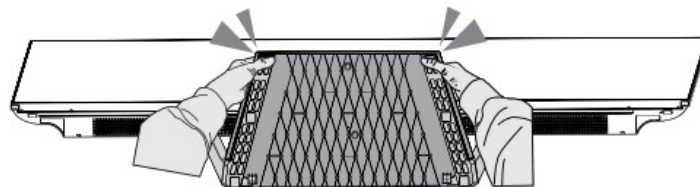


6. Move your TV to a flat surface and you can tidy the cable into cable organizer on the base stands.

Attach the wall mount bracket (not included)

Before you begin the third-party manufacturer instructions, be sure to do the following things:

 
1. Place the TV on a clean, safe and cushioned surface.
2. Remove the TV stand if you have already attached it.
3. Place spacers (not included) in the corresponding bracket holes.

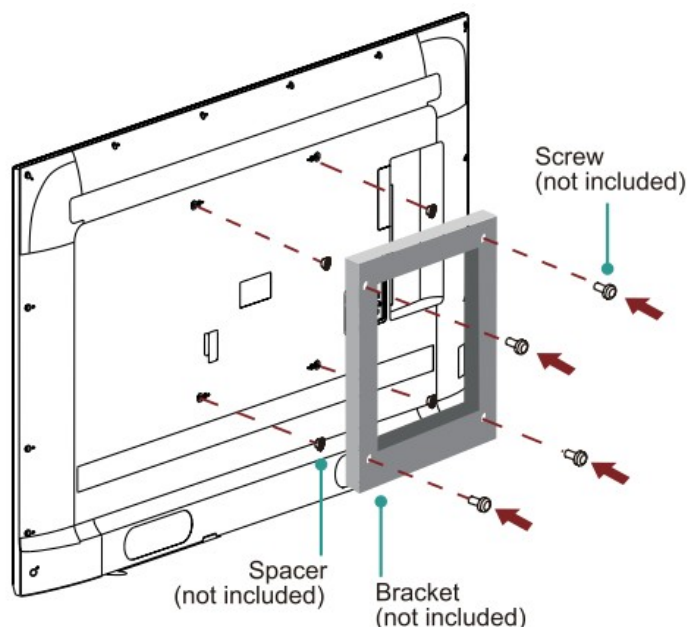

CAUTION:


- Follow instructions provided with the wall mount bracket. If it is not correctly mounted, the TV may fall and cause property damage or personal injury.
- When you attach the mount, be sure to use spacers (provided by the third-party manufacturer) between the TV and the bracket.
- To prevent internal damage to the TV and to ensure it is mounted securely, be sure to use fixing screws (not included) that are 9.5 – 11.5 mm in length when measured from the attaching surface of the rear cover.

 95-11.5mm

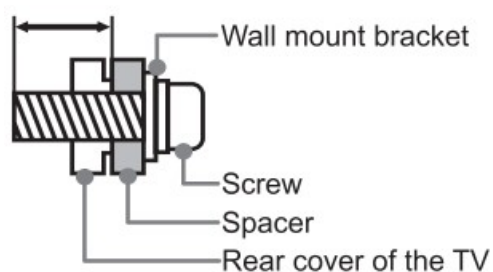

Wall mount hole pat-tern(mm)	400 x 200 (55")(139.7cm) 400 x 300 (65")(165.1cm) 400 x 400 (75")(190.5cm) 600 x 400 (85")(215.9cm)
Wall mount screw size	M6 (55"/65"/75")(139.7cm/165.1cm/190.5cm) M8 (85")(215.9cm)

 - We do not recommend hanging the TV on a slanted wall, and when wall mounting make sure your television remains parallel to the wall and does not lean forward.

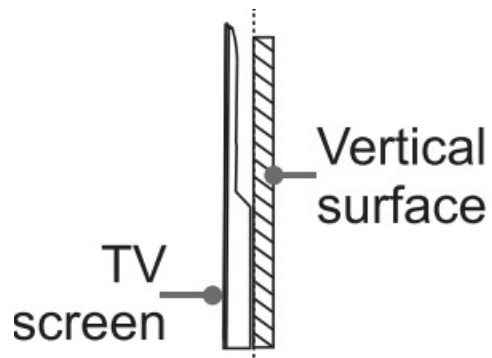




NOTE:

- If installed on a ceiling or slanted wall, or the television installed is not parallel to the wall, the television may fall and result in property damage or severe personal injury.
- If you have additional questions, please contact the wall mount manufacturer or the retailer from which you purchased the TV.
- The diameter and length of the screws differ depending on the wall mount bracket model.

 Step 2. Connect devices to your TV

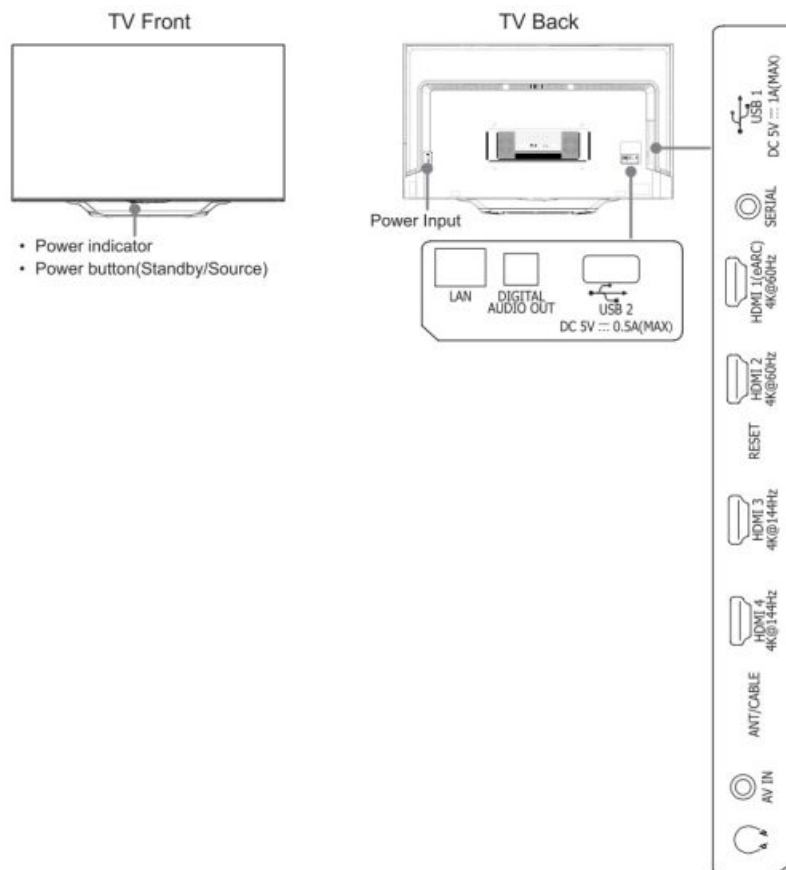
Check to ensure that you have connected right cables for right ports securely. Loose connections can affect the quality of the picture image and color.



Power indicator	The light is white in standby mode.
 Power button (Standby/Source)	When the TV is in standby mode, quick press the power button, and TV will be turned on. When the TV is on, quick press the power button to call up the menu: •Quick press to change the selection. •Long press to confirm your selection.
SERIAL	Service use only.
ANT/CABLE	Connect an outdoor VHF/UHF antenna.
HDMI	Connect a High Definition Multimedia Interface (HDMI) cable from an external device.
AV IN	Connect a composite video cable and left-right audio cables from an external AV device.
HEADPHONE / 	Connect headphones to hear audio from the TV. Headphones with microphones are not supported.
RESET	Power off / restart (quick press) Reset your TV back to the factory setting (long press for 5 seconds)
USB	Connect a USB device for browsing photos, music and movies. The rate of speed of USB 3.0 port 10 times faster than the USB 2.0 port. NOTE: You can still plug a USB 2.0 device into a USB 3.0 port; however, the rate of speed will not be as fast. USB 3.0 devices are also backwards compatible with USB 2.0 ports.
LAN	Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.
DIGITAL AUDIO OUT	Connect an optical cable from an external digital audio system.



 
Step 3. Get to know controls

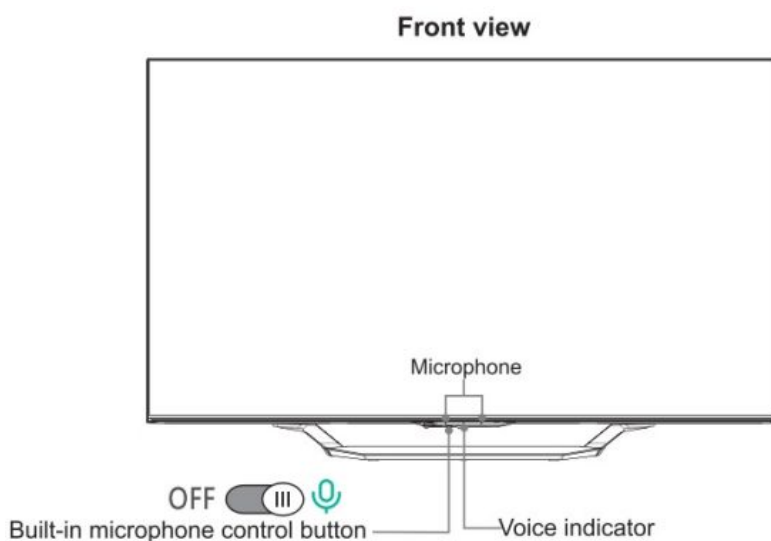Control on the TV



The Google Assistant can answer your questions or help you change TV configuration. Before using this function, connect the TV to the Internet and sign in your Google account. When you turn on the TV for the first time, you can select Set up Google TV to sign into a Google Account by the setup guide, if you select Set up basic TV, you can also select Set up Google TV on launcher later.

- How to use the Google Assistant function via the control button on your TV:

1. Switch the button to [] to turn on built-in microphone.
2. Pair the remote first, press  button to select “Yes, I’m in”. Or press  button and select Settings > Accounts & Sign In > Google Assistant to turn on the Hands- free Mic switch.
3. Start a conversation by saying “Hey Google”, and the dialog bar appears at the top of the TV screen. At the same time, voice indicator illuminate.
4. Continue speaking, such as “What’s the weather” or “volume up”.

- Screenless Mode

Talk to the Google Assistant even when the screen is off.











 

 






In Screenless Mode, the Google Assistant is always available to help even when the screen is not on. Just say “Hey Google”.

This feature will affect standby power consumption. To turn it off, go to Settings > System > Advanced System > Screenless Mode.

NOTE: The Google Assistant and some features are available on limited country/ region/language.

Get your remote ready

The following table shows the buttons on your remote control and describes what they are for.

BUTTON	DESCRIPTION
	Power on/off
	Microphone / Indicator
	Change TV input source
	Google Assistant of TV
	Accounts & Sign In or switch profile
	Access the settings (direct or through the dashboard in GTV) from any place in the system
	D-pad (up/down/left/right navigation buttons)
OK	Confirmation button
	Return to the previous place in the menu or app
	Press to display the Home screen
	Enter to Live tab in launcher/Display the Electronic Program Guide(if support)/Return to Live TV*
	Volume (up/down)
	Channel (up/down)
	Press to mute or restore sound Press and hold to display Accessibility menu
MENU / 	Press to enter Menu
	Media content control function buttons
	Enter Channels/input numbers and special function buttons
App	Quick access buttons to applications
	Custom button to launch input or apps quickly
	Fast access to all applications
	Enter to the media center

NOTE:

- Buttons listed here are for reference only. Actual remote control may vary depending on model, country.
- *Pressing the button in different scenarios will have different responses.

Insert the batteries

- Take off the back cover to open the battery compartment of the remote control.
- Insert two AA or AAA (1.5Vcc) size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.

3. Restore the battery compartment cover.




Important information about the remote and batteries

- Discard batteries in a designated disposal area. Do not throw them into a fire.
- Remove old batteries immediately to prevent them from leaking into the battery compartment.
- If you do not intend to use the remote control for a long time, then remove the batteries.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin then wash it immediately.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (NiCd, NiMH, etc.) batteries.
- Do not continue using the remote if it gets warm or hot.
- Call our Support Center immediately on the support website.

Remote control range information

- The remote control can work at a distance of up to 26 feet (792.5 cm) in front of the TV set.
- It can work at a 30 degree horizontal or vertical angle.

Pairing the remote control

1. Pair the remote to the TV after you power it on for the first time, there will be instructions on how to pair the remote.
2. If your remote fails to pair with TV, keep the remote within 10 feet (304.8 cm) from the TV, press and hold the [] button and [] button at the same time at least 3 seconds to start pairing.
3. If the remote pairs successfully, a confirmation will display on the screen. If it does not pair successfully, an unsuccessful message will display. Repeat step 2, or you can press [] button to select Settings > Remotes & Accessories > Bluetooth to On.

 
NOTE:

- If an unknown error occurs with the remote, it could have been caused by interference. Try to remove what's causing the interference and pair the remote again.
- If an unknown error occurs with the remote control while the battery power is normal, you can take out the batteries and press any key for 1~2 seconds, and insert them back. The remote control can work normally.
- The remote cannot be paired to the TV while the TV is in the standby mode.


Step 4. Power on the TV

Connect your power cord to the TV and plug it into a power outlet.
Your TV will display a launch screen showing the Hisense logo.

55"/65" (139.7cm/165.1cm)

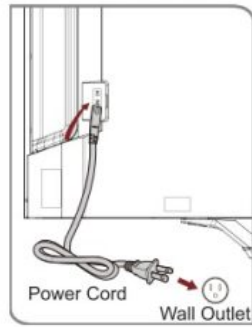


75"/85" (190.5cm/215.9cm)

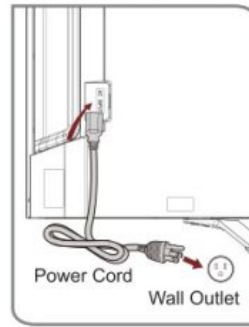 


Step 5. Complete the first-time setup

The first time you turn on your TV, there is a guided setup to make it easy to connect your TV to the Internet and complete the setup of your TV.


Step 6. Establish a network connection

1. Press the [] button on the remote, and select Settings to enter the Settings menu
2. Select Network & Internet.

 Establish a wired network connection

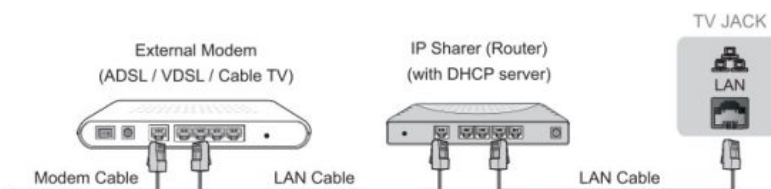

Establish a wireless network connection

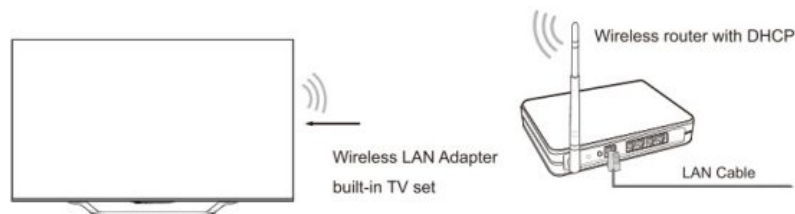 

And setup is done, congratulations!

Now that you've completed the first-time setup, enjoy your TV!

Troubleshooting

If you are having trouble with your TV, first try turning it off and on again. If this does not fix the problem, check the tips in the following table. If your problem is not listed in the following table, then contact us at one of the phone numbers on page before.

Issues	Possible solutions
No sound or picture	<ul style="list-style-type: none"> • Check if the power cord is plugged into a powered AC outlet. • Press the Power button on the remote control to activate the unit from 'Standby' mode. • Check to see if the LED light is on or not. If it is, then the TV is receiving power.
have connected an external source to my TV and I get no picture and/or sound.	<ul style="list-style-type: none"> • Check for the correct output connection on the external source and for the correct input connection on the TV. • Make sure you have made the correct selection for the input mode for the incoming signal.
When I turn on my TV, there is a delay for a few seconds before the picture appears. Is this normal?	<ul style="list-style-type: none"> • Yes, this is normal. The TV is initializing and searching for previous setting information.
The picture is normal but there is no sound	<ul style="list-style-type: none"> • Check the volume settings. • Check if 'Mute' mode is set to On.
Sound but no picture or black and white picture	<ul style="list-style-type: none"> • If the picture is black and white, unplug the TV from the AC outlet and replug it after 60 seconds. • Check that the Color is set to 50 or higher. • Try different TV channels.
The sound and/or picture is distorted or appears wavy	<ul style="list-style-type: none"> • An electric appliance may be affecting the TV. Turn off any appliances that are nearby and move it farther away from the TV. • Insert the power plug of the TV set into another power outlet.
The sound and picture is blurry or cuts out	<ul style="list-style-type: none"> • If using an external antenna, check the direction, position and connection of the antenna. • Adjust the direction of your antenna or reset or fine tune the channel.
A horizontal or vertical stripe appears on the picture and/or the picture is shaking	<ul style="list-style-type: none"> • Check if there is an appliance or electric tool nearby that is causing interference.
The plastic cabinet makes a "clicking" type of sound	<ul style="list-style-type: none"> • The 'click' sound can occur when the temperature of the television changes. This change causes the television cabinet to expand or contract, which makes the sound. This is normal and the TV is OK.
The remote control does not work	<ul style="list-style-type: none"> • Confirm that TV still has power and is operational. • Change the batteries in the remote control. • Check if the batteries are correctly installed.

Product specifications

Model Name		55U7N / 55U75N / 55U78N	65U7N / 65U75N / 65U78N
Dimension (tv x H x D)	Without Stand	48.4 x 28.2 x 3.1 inches (1 230 x 717 x 79 mm)	57.0 x 33.0 x 3.0 inches (1 449 x 838 x 77 mm)
	With Stand	48.4 x 30.7 x 11.6 inches (1 230 x 781 x 295 mm)	57.0 x 35.4 x 11.6 inches (1 449 x 899 x 295 mm)
Weight	Without Stand	30.6 lbs (13.9 kg)	42.5 lbs (19.3 kg)
	With Stand	34.0 lbs (15.4 kg)	45.9 lbs (20.8 kg)
TV Stand Width(W x D)		29.2 x 11.6 inches (741 x 295 mm)	29.2 x 11.6 inches (741 x 295 mm)
Active Screen Size (Diagonal)		54.6 inches (138.7 cm)	64.5 inches (163.8 cm)
Screen Resolution		3840 x 2160	
Audio Power		2 x 10W + 20W	2 x 10W + 20W
Power consumption		180 W	250 W
Power Supply		100-240 V- 50/60 Hz	
Connectivity		Built-in Wireless feature (2x2, three band)	
Receiving Channels		VHF: 2 – 13, UHF: 14 – 69, CAN: 1 – 125 Digital Terrestrial Broadcast (8VSB): 2 – 69 Digital cable (64/256 QAM): 1 – 135 Next-Gen TV (QPSK-4096QAM): 2-36	
Wireless LAN Module specifications	Frequency Range	2.4-2.4835GHz 5.15-5.85GHz 5.9-6.425GHz	
	Output Power (Max.)	2.4-2.4835GHz 17dBm 5.15-5.25GHz 14dBm 5.25-5.35GHz(DFS Band) 14dBm 5.49-5.71GHz(DFS/TPC Band) 14dBm 5.725-5.85GHz(for Non EU) 14dBm 5.9-6.425GHz 14dBm	
	Modulation Type	IEEE802.11 a/b/g/n/ac/ax	
Bluetooth Module specifications	Version/Profiles	Bluetooth 5.3	
	Frequency Range	2.4-2.4835GHz	
	Output Power (Max.)	2.4-2.4835GHz,Class1,6dBm	
	Modulation Type	GFSK,Tr/4-DQPSK and 8-DPSK	
Tuner Type		Frequency synthesized	
Receiving Systems		Analog: NTSC, PAL M/N Digital: ATSC 1.0/Next-Gen TV/QAM on cable, ISDB-T	
Operating Temperature		41°F – 95°F(5°C – 35°C)	
Operating Humidity		20% to 80% non-condensing	
Storage Temperature		5°F to 113°F(-15°C to 45°C)	
Storage Humidity		10% to 70%, non-condensing	

Model Name		75U7N / 75U75N / 75U78N	85U7N / 85U75N / 85U78N
Dimension ON x H x D)	Without Stand	65.9 x 38.0 x 3.1 inches 74.5 x 43.0 x 3.7 inches	(1 673 x 966 x 79 mm) (1 892 x 1 093 x 95 mm)
	With Stand	65.9 x 40.6 x 13.3 inches 74.5 x 45.6 x 14.8 inches	(1 673 x 1 032 x 338 mm) (1 892 x 1 158 x 377 mm)
Weight	Without Stand	60.2 lbs (27.3 kg)	80.3 lbs (36.5 kg)
	With Stand	64.4 lbs (29.2 kg)	86.2 lbs (39.2 kg)
TV Stand Width(W x D)		21.0 x 13.3 inches (534 x 338 mm)	25.9 x 14.8 inches (658 x 377 mm)
Active Screen Size (Diagonal)		74.5 inches (189.3 cm)	84.5 inches (214.7 cm)
Screen Resolution		3840 x 2160	
Audio Power		2 x 10W + 20W	2 x 15W + 20W
Power consumption		300 W	400 W
Power Supply		100-240 V- 50/60 Hz	
Connectivity		Built-in Wireless feature (2x2, three band)	
Receiving Channels		VHF: 2 – 13, UHF: 14 – 69, CATV: 1 – 125 Digital Terrestrial Broadcast (8VSB): 2 – 69 Digital cable (64/256 QAM): 1 – 135 Next-Gen TV (QPSK-4096QAM): 2-36	
Wireless LAN Module specifications	Frequency Range	2.4-2.4835GHz 5.15-5.85GHz 5.9-6.425GHz	
	Output Power (Max.)	2.4-2.4835GHz 17dBm 5.15-5.25GHz 14dBm 5.25-5.35GHz(DFS Band) 14dBm 5.49-5.71GHz(DFS/TPC Band) 14dBm 5.725-5.85GHz(for Non EU) 14dBm 5.9-6.425GHz 14dBm	
	Modulation Type	IEEE802.11 a/b/g/n/ac/ax	
Bluetooth Module specifications	Version/Profiles	Bluetooth 5.3	
	Frequency Range	2.4-2.4835GHz	
	Output Power (Max.)	2.4-2.4835GHz,Class1,6dBm	
	Modulation Type	GFSK,u/4-DQPSK and 8-DPSK	
Tuner Type		Frequency synthesized	
Receiving Systems		Analog: NTSC, PAL M/N Digital: ATSC 1.0/Next-Gen TV/QAM on cable, ISDB-T	
Operating Temperature		41°F – 95°F(5°C – 35°C)	
Operating Humidity		20% to 80% non-condensing	
Storage Temperature		5°F to 113°F(-15°C to 45°C)	
Storage Humidity		10% to 70%, non-condensing	

NOTE: “Receiving Systems” may differ depending on your model/country/region.

Disclaimer: All products, product specifications, and data are subject to change without notice to improve reliability, function, design or otherwise.

Certification and compliance

NOTE: The following warnings only apply to products with such certification.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of [20] cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with radio frequency exposure limits set forth by the Innovation, Science and Economic Development Canada for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the device and the user or bystanders.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Declaration of conformity

Trade Name: Hisense

Model: 55U7N / 55U75N / 55U78N / 65U7N / 65U75N / 65U78N / 75U7N / 75U75N / 75U78N / 85U7N / 85U75N / 85U78N

Responsible Party: Hisense USA Corporation

Service Address: 105 Satellite BLVD Suite J, Suwanee, GA 30024

Service Phone Number: 1-[888-935-8880](tel:888-935-8880)

Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Dolby Vision IQ is a trademark of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works.

Copyright © 2012-2022 Dolby Laboratories. All rights reserved


HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, DTS:X, Virtual:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.



Manufactured under license from IMAX Corporation. IMAX® is a registered trademark of IMAX Corporation in the United States and/or other countries. For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.



Environmental protection

This mark indicates that this product should not be disposed together with other domestic garbage, to avoid damage to the environment or human health due to the disposal of uncontrolled waste. Recycle it responsibly for promoting the sustainable reuse of material resources. To return your used device, please use the return systems available in your location or contact the vendor where you purchased your product they could take this product for recycling and protection of the environment.

©2024. All rights reserved. Hisense and the Hisense logo are registered trademarks of Hisense. Other brand and product names are registered trademarks of their respective owners.



Documents / Resources

	<p>Hisense 2024 Range of Mini LED [pdf] User Guide</p> <p>2024 Range of Mini LED, 2024, Range of Mini LED, of Mini LED, Mini LED, LED</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.