




Hisense 4074372-02 Remote Controller Instructions

[Home](#) » [Hisense](#) » Hisense 4074372-02 Remote Controller Instructions 

Hisense 4074372-02 Remote Controller Instructions



 
Thanks you very much for purchasing this Air Conditioner. Please read this instructions carefully before using this appliance and keep this manual for future reference.

Contents

- 1 Remote controller
- 2 Operation mode
- 3 Airflow direction control
- 4 SMART mode
- 5 CLOCK button
- 6 SUPER mode
- 7 Timer mode
- 8 SLEEP mode
- 9 Documents / Resources
- 10 Related Posts

Remote controller



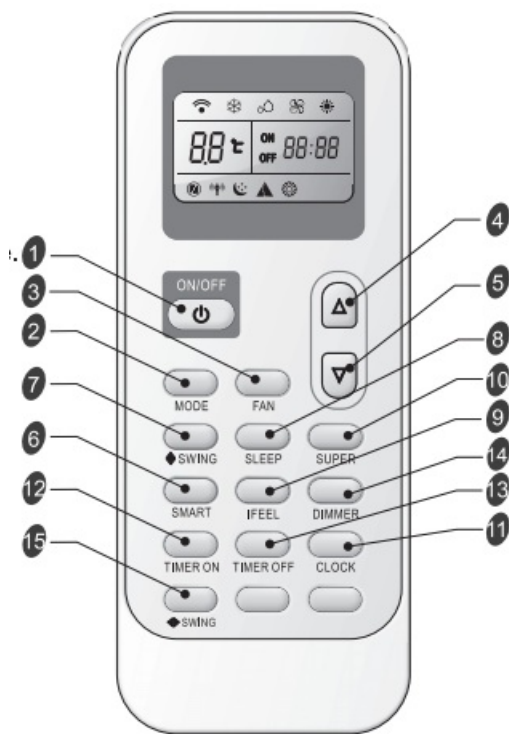










The remote controller transmits signals to the system.



1. ON/OFF BUTTON The appliance will be started when it is energized or will be stopped when it is in operation, if you press this button.
2. MODE BUTTON Press this button to select the operation mode.
3. FAN BUTTON Used to select fan speed in sequence auto, high, medium or low.
- 4.
5. ROOM TEMPERATURE SETTING BUTTONS Used to adjust the room temperature and the timer, also real time.
6. SMART BUTTON(invalid for some models) Used to enter fuzzy logic operation directly, regardless of the unit is on or off.
7. SWING BUTTON(invalid for some models) Used to stop or start vertical adjustment louver swinging and set the desired up/down airflow direction.
8. SLEEP BUTTON Used to set or cancel Sleep Mode operation.

9. IFEEL BUTTON Used to set IFEEL mode operation. Press it once, the IFEEL function will be started. Press it again, the IFEEL function will be shut off. Advice to put the remote controller in the place where the indoor unit receive signal easily. Advice to cancel the IFEEL mode so as to save energy when stopping the air conditioner.
10. SUPER BUTTON Used to start or stop the fast coding/heating. (Fast cooling operates at high fan speed with 16t set temp automatically : Fast heating operates at auto fan speed with 30t: set temp automatically) Indication symbols on LCD:
11. CLOCK BUTTON Used to set the current time.
- 12.
13. TIMER ON/OFF BUTTON Used to set or cancel the timer operation.
14. DIMMER BUTTON(invalid for some models) When you press this button, all the display of indoor unit will be closed. Press any button to resume display.
15. ◀▶ SWING BUTTON(invalid for some models) Used to stop or start Horizontal adjustment louver swinging and set the desired left/right airflow direction.


Indication symbols on LCD:

 Cooling indicator	 Auto fan speed	 Smart indicator	 Signal transmit
 Dry indicator	 High fan speed	 Sleep indicator	ON 88:88 Display set timer
 Fan only indicator	 Medium fan speed	 Ifeel	OFF 88:88 Display current time
 Heating indicator	 Low fan speed	 Super indicator	88℃ Display temperature

Note: Each mode and relevant function will be further specified in following page.

• How to Insert the Batteries

 
Remove the battery cover according to the arrow direction. Insert new batteries making sure that the (+) and (-) of battery are matched correctly. Reattach the cover by sliding it back into position. Note: • Use 2 LRO3 AAA(1.5volt) batteries. Do not use rechargeable batteries. Replace batteries with new ones of the same type when the display becomes dim.

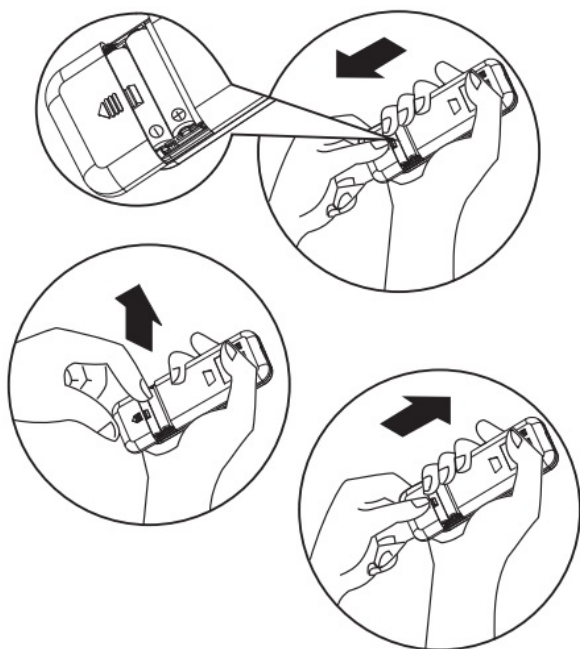

• Storage and Tips for Using the Remote Controller


The remote controller may be stored mounted on a wall with a holder.

 Note: The remote controller holder is an optional part.

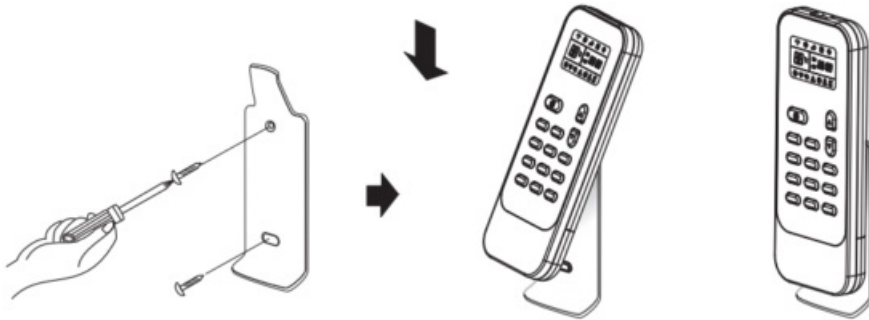

• How to Use

 To operate the room air conditioner, aim the remote controller to the signal receptor. The remote controller will operate the air conditioner at a distance of up to 7m when pointing at signal receptor of indoor unit.

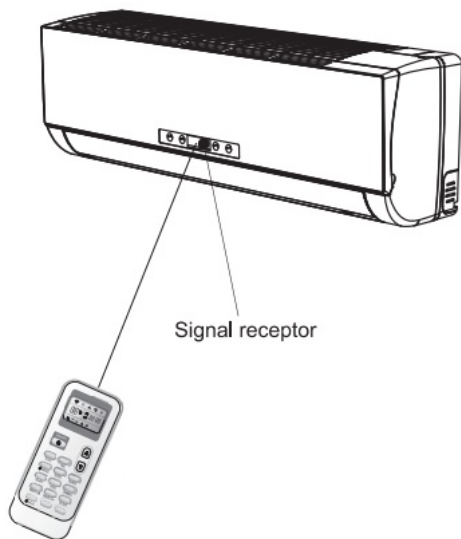


CAUTIONS

For appropriate signal transmission between remote controller and indoor unit, keep the signal receiver away from the following items:

- Direct sunlight or other strong lights or heat
- Flat panel television screen or other electrical appliances that react to the remote controller

Additionally, the air conditioner will not operate if curtains, doors or other materials block the signals from the remote controller to the indoor unit. If the signal may not be transmitted properly, either move these materials or consult your local dealer.

 Operation mode

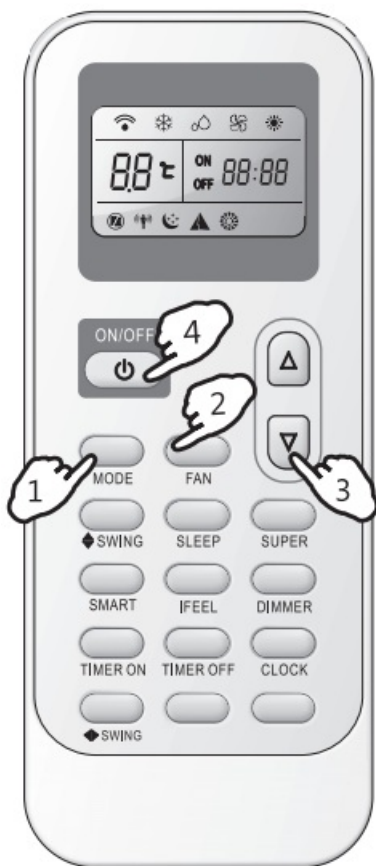

1. Selecting mode

Each time MODE button is pressed, the operation mode is changed in sequence:

COOLING → DRY → FAN ONLY → HEATING

Heating mode is NOT available for cooling only air conditioner.

2. FAN mode

Each time the “FAN” button is pressed, the fan speed is changed in sequence:

Auto → High → Medium → Low

At “FAN ONLY mode, only ”High”, ”Medium” and ‘tow” are available.

At “DRY” mode, Fan speed is set at “AUTO” automatically, “FAN” button is ineffective in this case.

3. Setting temperature



Press once to raise temperature setting by 1 C




Press once to lower temperature setting by 1 C

Range of available set temperature	
HEATING, COOLING	16 C-30 C
DRY	-7 – 7
FAN ONLY	unable to set

Note: Heating mode is NOT available for cooling only models. Note: At “Dry” mode, the unit can decrease or rise 2°C if you still feel uncomfortable.(For some models you can choose from -7 to 7.)

4. Turning on

Press  button, when the appliance receives the signal, the RUN indicator of the indoor unit lights up. SWING, SMART, TIMER ON, TIMER OFF, CLOCK, SLEEP and SUPER operation modes will be specified in the following pages.

- Changing modes during operation, sometimes the unit does not response at once. Wait 3 minutes.
- During heating operation, air flow is not discharged at the beginning. After 2-5 minutes, the air flow will be discharged until temperature of indoor heat exchanger rises.
- Wait 3 minutes before restarting the appliance.

Airflow direction control



5. Airflow direction control

Vertical airflow(Horizontal airflow) is automatically adjusted to a certain angle in accordance with the operation mode after turning on the unit.

Operation mode	Direction of airflow
COOLING, DRY	horizontal
HEATING, FAN ONLY	downward

The direction of airflow can be also adjusted to your own requirement by pressing the “SWING” button of the remote controller.



Heating mode s only available for heat pump models.


Vertical airflow control (with the remote controller)

Using remote controller to set various angles of flow or specific angle as you like.

Singing airflow

Pressing “ SWING” button once, the vertical adjustment louver will swing up and down automatically.

Desired direction airflow

Pressing the “ SWING” button again when the louvers swing to a suitable angle as desired.


Horizontal airflow control (with the remote controller)

Using remote controller to set various angles of flow or specific angle as you like.

Swinging airflow

Pressing “ SWING” button once, the horizontal adjustment louver will swing left and right automatically.

Desired direction airflow

Pressing the “ SWING” button again when the louvers swing to a suitable angle as desired.

NOTE: If the unit doesn't have four ways airflow function, you can adjust horizontal airflow by yourself. (invalid for some models)

- A. Do not turn the vertical adjustment louvers manually, otherwise malfunction may occur. If that happens, turn off the unit first and cut off the power supply, then restore power supply again.
- B. It is better not to let the vertical adjustment louver tilt downward for a long time at COOLING or DRY mode to prevent condensed water from dripping.

SMART mode

(invalid for some models)

Press the SMART button, the unit enters SMART mode (fuzzy logic operation) directly regardless of the unit is on or off. In this mode, temperature and fan speed are automatically set based on the actual room temperature. For the split-type models, such as wall-mounted air conditioners and some floor-standing air conditioners, their operation mode and set temperature should be determined based on the indoor temperature.

Operation mode and temperature are determined by indoor temperature

Heat pump models

Indoor temperature	Operation mode	Target temperature
21 °C or below	HEATING	22°C
21 °C - 23°C	FAN ONLY	
23°C - 26°C	DRY	Room temperature decrease 2°C after operate for 3 minutes
Over 26°C	COOLING	26°C

Cooling only models

Indoor temperature	Operation mode	Target temperature
23°C or below	FAN ONLY	
23°C - 26°C	DRY	Room temperature decrease 1°C after operate for 3 minutes
Over 26°C	COOLING	26°C

For commercial air conditioner products, such as cassette type air conditioners, duct type air conditioners, ceiling & floor air conditioners and some floor-standing air conditioners, their operation mode should be determined based on the difference between the indoor temperature and set temperature.

The operation mode is determined by the difference between the indoor temperature and set temperature.


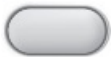
Heat pump models

Indoor temperature	Operation mode	Target temperature
Below T-3°C	HEATING	T
T-3°C - CT indoor —, T+3°C	FAN ONLY	T
Over T-1-3°C	COOLING	T



Cooling only models


Indoor temperature	Operation mode	Target temperature
T+3°C or below	FAN ONLY	T
Over T+3°C	COOLING	T

SMART button is ineffective in SUPER mode. Press MODE button cancel SMART mode. Note: Temperature, airflow and direction are controlled automatically in SMART mode. However, For the on/off, you can choose from -2 to 2 (for some models you can choose from -7 to 7), for the inverter you can choose from -7 to 7. if you still feel uncomfortable.


What you can do in SMART mode			
Your feeling	button	adjustment procedure	
Uncomfortable because of unsuitable air flow volume.	 FAN	Indoor fan speed alternates among High, Medium and Low each time this button is pressed.	
Uncomfortable because of unsuitable flow direction.	 SWING	Press it once, the vertical adjustment louver swings to change vertical airflow direction. Press it again, swings stops. For horizontal airflow direction, please refer to the previous page for details.	

CLOCK button

 You can adjust the real time by pressing CLOCK button, then using  and  buttons to get the correct time, press CLOCK button again the real time is set.

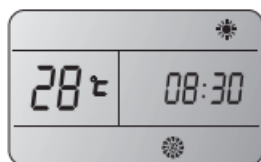

SUPER mode

- SUPER mode is used to start or stop fast cooling or heating. In SUPER mode, the super indicator  will display on LCD. Fast cooling operates at high fan speed, changing the set temperature automatically to 16°C; Fast heating operates at auto fan speed, changing the set temperature automatically to 30 °C.
- SUPER mode can be set when the appliance is in operation or energized.
- In SUPER mode, you can set temperature, airflow direction or timer. If you want to escape from SUPER mode, press SUPER, MODE, FAN, ON/OFF or SLEEP button, the display will return to the original mode.

Note:

- SMART button is not available in SUPER mode.
- The Appliance will continue working in SUPER mode , if you don't escape from it by pressing any of the buttons mentioned above.
- Heating is NOT available for cooling only air conditioner.
- For the first generation of products, you can't set temperature in super mode, but you can press



TEMPERATURE SETTING button to escape super mode.

Timer mode

It is convenient to set the timer on with TIMER ON button when you go out in the morning to achieve a comfortable room temperature at the time you get home. You can also set timer off at night to enjoy a good sleep.

How to set TIMER ON

TIMER ON button can be used to set the timer programming as wished in order to switch on the appliance at your desired time.

 
1. Press TIMER ON button, "ON 12:00" flashes on the LCD, then you can press the  or  buttons to select your desired time for appliance on.







Increase

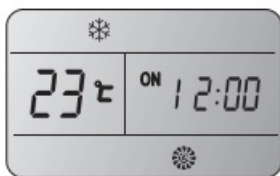



Decrease



Press the  or  button once to increase or decrease the time setting by 1 minute.

Press the  or  button 2 seconds to increase or decrease the time setting by 10 minute.

Press the  or  button for a longer time to increase or decrease the time by 1 hour.

Note: If you don't set the time in 10 seconds after you press TIMER ON button, the remote controller will exit the TIMER ON mode automatically.

2. When your desired time displayed on LCD, press the TIMER ON button and confirm it.

A "beep" can be heard.

"ON" stops flashing.

The TIMER indicator on the indoor unit lights up.(invalid for some models)

3. After the set timer displayed for 5 seconds the clock will be displayed on the LCD of the remote controller instead of set timer.

How to cancel TIMER ON

Press the TIMER ON button again, a "beep" can be heard and the indicator disappears, the TIMER ON mode has been canceled.

Note: It is similar to set TIMER OFF, you can make the appliance switch off automatically at your desired time.

SLEEP mode



SLEEP mode can be set in COOLING, HEATING or DRYING operation mode. This function gives you a more comfortable environment for sleep. In SLEEP mode,

 
- The appliance will stop operation automatically after operating for 8 hours
- Fan speed is automatically set at low speed.
- Set temperature will rise by 2°C at most if the appliance operates in cooling mode for 2 hours constantly, then keeps steady.
- Set temperature will decrease by 2°C at most if the appliance operates in heating mode for 2 hours constantly, then keeps steady.

Note: In cooling mode, if room temperature is 26 C or above, set temperature will not change(invalid for some models).


Note: Heating is NOT available for cooling only air conditioner.

Note: Press SUPER ,SMART, MODE,SLEEP or FAN button cancel SLEEP mode.

Documents / Resources

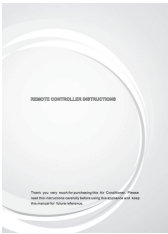

[Hisense 4074372-02 Remote Controller](#) [pdf] Instructions
4074372-02 Remote Controller, 4074372-02, Remote Controller

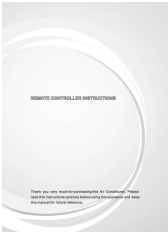 

[Hisense 4074372-02 Remote Controller](#) [pdf] Instructions
4074372-02 Remote Controller, 4074372-02, Remote Controller