




## HKoenig tos14 4 Slice Toaster Instruction Manual

[Home](#) » [HKoenig](#) » HKoenig tos14 4 Slice Toaster Instruction Manual 

### Contents

- [1 HKoenig tos14 4 Slice Toaste](#)
- [2 SPECIAL SAFETY INSTRUCTIONS FOR THIS APPLIANCE](#)
- [3 OPERATION](#)
- [4 CLEANING](#)
- [5 WARRANTY](#)
- [6 ENVIRONMENT](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

# HKoenig

### HKoenig tos14 4 Slice Toaste



Grille-pain 4 tranches Toaster für 4 Scheiben Broodrooster voor 4 sneetjes Tostadora de 4 ranuras Tostapane 4



- Please read the operating instructions carefully before using the appliance.
- Please keep these instructions, the guarantee slip. The receipt and if possible the box with inner packaging in a safe place!
- This appliance is intended exclusively for private and not for commercial use.
- Always remove the plug from the socket when the appliance is not in use or when you are attaching accessories, cleaning it or in the event of a malfunction. Switch off the appliance. Do not pull the cable, pull the plug.
- Keep children away from the appliance to keep them safe from electric shocks. Make sure that the appliance is out of the reach of the reach of children. Ensure that the cable does not hang down.
- Check the cable and the appliance regularly for damage. Do not switch on the appliance if it is damaged.
- Do not repair the appliance yourself, but consult an authorized professional instead.
- Keep the appliance and the cable away from heat, direct sunlight, moisture, sharp edges and such like.
- Never leave the appliance unsupervised if it is use! Always switch off the appliance if you are not using it, even if only for a brief period.
- Only use original parts.
- Never use the appliance outside.
- Never submerge the appliance in water or any other liquid. Do not allow the appliance to come into contact with water or other liquids. Do not use the appliance with wet or moist hands.
- Remove the plug from the socket immediately if it is moist or wet. Do not touch the water!
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard;
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge provided they have received supervision or instruction in the safe use of the appliance and understand the hazards involved. Children should not play with the device.
- The appliance is not intended to be operated by an external timer or by a separate remote control system.
- Only use the appliance for its intended purpose
- After you finish using this product, please recycle the product for disposal in accordance with local regulations.
- Do not turn down the upside on the table after finishing the toasting, which to help shake away the bread crumbs.
- Do not overturned in using.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved.
- Cleaning and maintenance should not be carried out by children unless they are at least 8 years of age and are supervised by an adult.

- Keep the appliance and its power cord out of reach of children under 8 years of age.
- The device must not be used if it has been dropped, if obvious signs of damage are visible or if it has leaks.  
When using electrical equipment, safety precautions must always be taken to prevent the risk of fire, electric shock and/or injury in the event of misuse.
- Make sure that the voltage rating on the typeplate corresponds to your main voltage of your installation. If this is not the case, contact the dealer and do not connect the unit.
- Your appliance has been designed for domestic use only. It is not intended for use in the following situations which are not covered by the warranty:
  - in staff kitchen areas in shops, offices and other professional environments,
  - in farm hostels,
  - by guests in hotels, motels and other residential environments,
  - in bed and breakfast type environments.

## **SPECIAL SAFETY INSTRUCTIONS FOR THIS APPLIANCE**

- Only use the appliance if supervised (very dry bread may catch fire if toasted).
- The metal parts heat up! Danger of burns!
- Do not insert any forks, knives or such like in the toasting slot.
- Do not place the appliance anywhere near inflammable objects (e.g. curtains, wood, etc.)!

## **OPERATION**

1. Only connect the appliance to a correctly installed safety plug (220-240V 50Hz/60Hz).
2. Turn the selector switch clockwise to set the toasting level from the lightest stage 1 to the darkest stage 7. If in any doubt, start with the lower setting (the black mark on the selector switch shows you the setting).
3. Insert sliced bread into the toasting slot and push down the lever until it locks.
4. The appliance starts toasting. The appliance switches off immediately once the set degree of toasting has been reached. The toast then pops up automatically.
5. The toaster only allowed 4 slices of the toaster to be toasted at a time.

If you wish to use the special functions, push the button Cancel: To stop toasting prematurely

## **CLEANING**

- Before cleaning, remove the plug from the socket and allow the appliance to cool down.
- Use a moderately damp cloth to clean the outside of the appliance.
- Do not use any aggressive or scrubbing detergents.
- Grasp the crumb shaft by the loop and pull it out, remove the bread residue and push the shaft back in.

This appliance conforms to the relevant CE guidelines and has been constructed on the basis of the latest technical safety regulations.

Subject to technical changes!

## **WARRANTY**

The warranty period for our products is 2 years, unless otherwise stated, starting from the date of initial purchase

or the date of delivery.

If you have any problems or questions, you can easily access our help pages, troubleshooting tips, FAQ, and user manuals on our service site: <https://sav.hkoenig.com>.

By typing the reference name of your device in the search bar, you can access all available online support, designed to best meet your needs.

If you still cannot find an answer to your question or problem, then click on “Did the answer solve your problem?”. This will direct you to the Customer Support Request Form, which you can fill out to validate your request and get help.

## **WARRANTY CONDITIONS**

The warranty covers all failures occurring under normal use, in accordance with the usage and specifications in the user's manual.

This warranty does not apply to packaging or transportation problems during shipment of the product by the owner. It also does not include normal wear and tear of the product, nor maintenance or replacement of consumable parts.

## **EXCLUSION OF WARRANTY**

- Accessories and wearing parts (\*).
- Normal maintenance of the device.
- All breakdowns resulting from improper use (shocks, failure to comply with power supply recommendations, poor conditions of use, etc.), insufficient maintenance or misuse of the device, as well as the use of unsuitable accessories.
- Damage of external origin: fire, water damage, electrical surge, etc.
- Any equipment that has been disassembled, even partially, by persons other than those authorized to do so (notably the user).
- The products whose serial number would be missing, deteriorated or illegible that would not allow its identification.
- The products subjected to leasing, demonstration, or exhibition.

(\*) Some parts of your device, called wear parts or consumables, deteriorate with time and frequency of use of your device. This wear and tear are normal but can be accentuated by poor conditions of use or maintenance of your device. These parts are therefore not covered by the warranty.

The accessories supplied with the device are also excluded from the warranty. They cannot be exchanged or refunded. However, some accessories can be purchased directly through our website:

<https://sav.hkoenig.com/>.

## **ENVIRONMENT**

### **CAUTION:**

Do not dispose of this product as it has with other household products. There is a separation of this waste product into communities, you will need to inform your local authorities about the places where you can return this product. In fact, electrical and electronic products contain hazardous substances that have harmful effects on the environment or human health and should be recycled. The symbol here indicates that electrical and electronic equipment should be chosen carefully, a wheeled waste container is marked with a cross.

Adeva SAS / H.Koenig Europe – 8 rue Marc Seguin – 77290 Mitry Mory – France  
[www.hkoenig.com](http://www.hkoenig.com) – [sav@hkoenig.com](mailto:sav@hkoenig.com) – [contact@hkoenig.com](mailto:contact@hkoenig.com) – Tél: +33 1 64 67 00 05

## **Documents / Resources**



[H. Koenig tos14 4 Slice Toaster](#) [pdf] Instruction Manual  
tos14 4 Slice Toaster, tos14, tos14 Toaster, 4 Slice Toaster, Toaster

## References

- [H. Koenig : Le spécialiste du petit électroménager](#)
- [H. Koenig : Le spécialiste du petit électroménager](#)
- [H. Koenig SAV: Pièces détachées ,accessoires, FAQ](#)
- [H. Koenig SAV: Pièces détachées ,accessoires, FAQ](#)

Manuals+.