

HKUSOA B0BZCKF2G4 Fast Push Bubble Pop Fidget Toy



# HKUSOA B0BZCKF2G4 Fast Push Bubble Pop Fidget Toy Instructions

[Home](#) » [HKUSOA](#) » HKUSOA B0BZCKF2G4 Fast Push Bubble Pop Fidget Toy Instructions 

## Contents

- [1 HKUSOA B0BZCKF2G4 Fast Push Bubble Pop Fidget Toy](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Simple Use](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)

# HKUSOA

HKUSOA B0BZCKF2G4 Fast Push Bubble Pop Fidget Toy



## Product Information

### Specifications:

- **Power Source:** 3 AAA batteries (not included)
- **Age Group:** Kids age 6-12, Teenagers aged 12-16, and Adults
- **Modes:** 4 Modes
- **Volume:** Adjustable with mute option

## Product Usage Instructions

### 1. Battery Installation:

Insert 3 AAA batteries into the product ensuring correct polarity.

### 2. Power On/Off:

Press the 'ON/OFF' button to turn the product on or off.

### 3. Mode Selection:

Click the Menu button to cycle through the 4 available modes.

### 4. Volume Adjustment:

To adjust the volume, use the designated controls. The sound can also be muted if desired.

### 5. Progressing Levels:

To start or enter the next level, press the Back Key as instructed.

### 6. Age Group:

This product is suitable for Kids aged 6-12, Teenagers aged 12-16, and Adults.

## Warm Tips

Remember to follow the instructions carefully for optimal product performance and enjoyment.

## FAQ

### • Q: Can I use rechargeable batteries with this product?

A: Yes, you can use rechargeable AAA batteries with this product for eco-friendly power options.

## Simple Use

1. Insert 3 AAA batteries in it correctly. (battery not included)
2. Press the 'ON/OFF' Button to Turn it ON/OFF.
3. Click Menu to Select Mode (4 Modes).
4. Adjust volume(can be muted)
5. Start and Enter Next Level: Press the Back Key
6. Age Group: Kids age 6-12, Teenagers aged 12-16 and Adults.

## Warm Tips

1. No operation for 1 mins, the toy will auto shut down. Restart it plz.
2. **Principle:** Push the lighting bubbles until touch the inner pressure sensor, the light will off. Push the bubbles in

3. If there is no response or shutdown during the game, the battery may be low, please replace the battery.
4. Check the bubble pop-up toy appearance for any breakage after receive the package.
5. **Contact Seller:** Have a question for HKUSOA? Ask a question.

## Documents / Resources

<p><b>Assembly List</b></p> <ol style="list-style-type: none"> <li>1. Check if you have all the parts in the list. If you are missing any parts, please contact us.</li> <li>2. Please check the assembly instructions carefully.</li> <li>3. Check the assembly instructions carefully.</li> <li>4. Check the assembly instructions.</li> <li>5. Check the assembly instructions.</li> <li>6. Check the assembly instructions.</li> <li>7. Check the assembly instructions.</li> <li>8. Check the assembly instructions.</li> <li>9. Check the assembly instructions.</li> <li>10. Check the assembly instructions.</li> </ol> <p><b>Assembly List</b></p> <ol style="list-style-type: none"> <li>1. Check the assembly instructions.</li> <li>2. Check the assembly instructions.</li> <li>3. Check the assembly instructions.</li> <li>4. Check the assembly instructions.</li> <li>5. Check the assembly instructions.</li> <li>6. Check the assembly instructions.</li> <li>7. Check the assembly instructions.</li> <li>8. Check the assembly instructions.</li> <li>9. Check the assembly instructions.</li> <li>10. Check the assembly instructions.</li> </ol>	<p><b>HKUSOA B0BZCKF2G4 Fast Push Bubble Pop Fidget Toy</b> [pdf] Instructions</p> <p>B0BZCKF2G4 Fast Push Bubble Pop Fidget Toy, B0BZCKF2G4, Fast Push Bubble Pop Fidget Toy, Push Bubble Pop Fidget Toy, Bubble Pop Fidget Toy, Pop Fidget Toy, Fidget Toy, Toy</p>
---	---

## References

- User Manual

**Manuals+, Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.