

Contents [[hide](#)]

- [1 HME 4.0B13M10F6 ZOOM Nitro Drive Thru Timer User Guide](#)
- [2 ZOOM Nitro Drive-Thru Timer Overview](#)
- [3 Drive-Thru Leaderboard®](#)
- [4 Need more help?](#)
- [5 Read More About This Manual & Download PDF:](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

HME 4.0B13M10F6 ZOOM Nitro Drive Thru Timer User Guide



ZOOM Nitro Drive-Thru Timer Overview

Measures drive-thru lane events for comparison to your service time goals at up to eight detection points in the drive-thru lane. The Dashboard displayed below provides an example overview for a single-lane drive-thru with seven lane detectors (PRE-MENU, MENU 1, CASHIER, SERVICE, and three Pull-Forward detectors) as well as two independent detectors (Mobile Pickup).

Lane Total Time
White number by car indicates total time car has been in lane. Car color changes based on Total Time goals.

Event Time
The amount of time car has spent at a detection point.

Goal
The target goal time for a detection point.

Average Time
Average time car has spent at a detection point.

Menu
Click to open sidebar menu (see Dashboard image on page 2).

Cars Per Hour
Total number of cars served for the current hour.

Prev: The result of the previous hour.

Best: Best result ever achieved for an hour.

Pace: Predicts the final result for the hour based on current count.

MENU 1 Detection Point: First detection point, others include CASHIER & SERVICE.

Goal: The target result desired for the hour.

Pull-Forward
Awaiting orders at areas off the drive-thru lane or at a PF window help keep the lane fluid and free from congestion.




Mobile Pickup
Parking areas reserved for mobile orders.* These are independent detectors (not part of the drive-thru lane) and are now also supported using Vision AI.**

* Mobile Ordering is a service that allows you to place orders using a smart device.
** Vision AI requires additional equipment.

Pre-Menu Stack
Using a camera, Vision AI gives you the ability to monitor the area before the Pre-Menu for Drive Offs along with other enhanced metrics.

Lane Total Time
Is the Total Time tracked from a starting detection point (usually the first detector in the lane, "MENU 1" in this example) to the departure from the last detection point in the lane ("SERVICE" in this example). Cars will display "0:00" until they arrive/depart the first detection point.

So what's with the colors?
Color-coded cars and values provide an easy method for identifying how a metric is performing against a preset goal. Goals are used to motivate performance.

- A green car or value like this  indicates you are exceeding your goal.
- A yellow car or value like this  indicates you are meeting your goal.
- A red car or value like this  indicates you are not meeting your goal.

How to make changes to your ZOOM Nitro Timer

- To edit your Dashboard, use a mouse connected to the USB port on the CU or use a back-office PC if configured on the same network. Click on  to open screen below.
- Click on the **SECURITY** icon.
- Log in to the system. Note: The manager assigns permissions and passwords. If you do not have a password, contact HME Technical Support at the number below to obtain a temporary Manager password.
- Once logged in, click on **DASHBOARD SETTINGS** in the sidebar menu to edit.

Language
The default language is English. Click on Canadian flag for French.

Dashboard Layout
Click to open pane and select your desired layout.

Lane and Data Section Graphics
Click on a graphical element on the Dashboard to open it for editing.

In this example, use the fields or toggles under the **Section Settings** to edit what is displayed.

Drive Offs and Pre-Menu Stack are enabled and therefore displayed here on the Dashboard (also see page 1 image).

Drive-Thru Leaderboard®

The Drive-Thru Leaderboard shows the top three and bottom three stores ranked against others in your network.

Your store will be outlined and displayed with its closest competitors.



Control Unit (CU) Receives and processes data from the TSP to provide information for the ZOOM Dashboard display.

CU Mounted location



Need more help?




A copy of this guide and more information can be found by scanning this QR code above. When you land on the web page, navigate to Drive-Thru Timer Systems and click/tap on ZOOM Nitro to expand. Or go to: <https://www.hme.com/qsr/drive-thru-user-manuals>

Need help? Call **1-800-848-4468**, options 1,2,3n or email us at support@hme.com

HME, INC.


Read More About This Manual & Download PDF:


Documents / Resources

	<p>HME 4.0B13M10F6 ZOOM Nitro Drive Thru Timer [pdf] User Guide</p> <p>4.0B13M10F6, PF WINDOW, 4.0B13M10F6 ZOOM Nitro Drive Thru Timer, 4.0B13M10F6, ZOOM Nitro Drive Thru Timer, Drive Thru Timer, Thru Timer, Timer</p>
---	---

References

- [User Manual](#)

 HME

 4.0B13M10F6, 4.0B13M10F6 ZOOM Nitro Drive Thru Timer, Drive-Thru Timer, HME, PF WINDOW, Thru Timer, Timer, ZOOM Nitro Drive-Thru Timer

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.