

HMF 326 Key Safe Outside With 4 Digit Number Code Instruction Manual



Contents

[1 INSTRUCTION MANUAL](#)

[1.1 ART.-NO.: 326](#)

[1.1.1 KEY BOX](#)

[2 Documents / Resources](#)

[2.1 References](#)

[3 Related Posts](#)

INSTRUCTION MANUAL

ART.-NO.: 326



1. Reset-Hebel (reset-lever)

KEY BOX

1. Open the cover plate and turn the numbers onto the combination 0-0-0-0. Push down the OPEN button.
2. Open the door of the key box and push the reset lever on the back of the door towards yourself. The reset lever remains in the position.
3. Set your desired combination on the lock (without closing the box).
4. Then push the reset lever away from you so that it snaps back to its original position. Please check again your

selected combination, before closing the box. IMPORTANT: Write down your number combination!


5. Close the key box.

6. Please set the digits in that way that the code is no longer visible und close the cover.

The number combination is stored now. To change the combination repeat steps 1-6.

© Holthoff Trading GmbH
HMF.DE | service@hmf.DE

Documents / Resources

| | |
|---|--|
|  | <p>HMF 326 Key Safe Outside With 4 Digit Number Code [pdf] Instruction Manual 326 Key Safe Outside With 4 Digit Number Code, 326, Key Safe Outside With 4 Digit Number Code, Outside With 4 Digit Number Code, 4 Digit Number Code</p> |
|---|--|

References

-  [HMF Shop | Tresore, Geldkassetten, Koffer uvm.](#)