



HOCHIKI FireNET FN-LCD-N Networking Annunciator Instruction Manual

[Home](#) » [HOCHIKI](#) » HOCHIKI FireNET FN-LCD-N Networking Annunciator Instruction Manual 



FireNET Operating Instructions (For Models 4127 control panel and FN-LCD-N annunciator)

Contents

- [1 FIRE CONDITION:](#)
- [2 TROUBLE CONDITON:](#)
- [3 BUTTON FUNCTIONS:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

FIRE CONDITION:

During a Fire condition the Fire LEDs will pulse on and off on the panel face, the local buzzer will sound, and the bells/horns/strobes will be activated. The location text of the alarm point as programmed into the fire alarm control panel will be displayed on the LCD display. Additional fire events can be viewed by pressing the “More Fire Events” button and using the Up/Down Arrows to scroll through the list. To silence the bells/horns, enter Access Level 2 by turning the “Enable Controls” switch or entering the Level 2 password, then pressing the “Alarm Silence” button. The Fire LEDs will be lit continuously, and the bells/horns will turn off. To turn the bells/horns back on again press the “Resound Alarm” button. The “Reset” button will turn off the bells/horns/strobes and return the fire control panel to a normal standby condition.

TROUBLE CONDITON:

During a trouble condition the local buzzer will sound, the “General Trouble” LED will flash, a specific trouble LED will illuminate, and a trouble message will be displayed on the LCD Display. If more than one trouble condition occurs at the same time the “More Events” LED will illuminate. All trouble events can be viewed by pressing the “More Events” button and using Up/Down Arrows to move to the desired event menu, pressing the Right Arrow button to open the desired menu, and then using the Up/Down Arrows to scroll through all the trouble conditions. Pressing the “?” button may offer additional information. Contact Authorized Service Personnel Immediately.

BUTTON FUNCTIONS:

Alarm Silence: Silences the bells/horns after an alarm is received by the fire alarm control panel.

Re-Sound Alarm: Turns the bells/horns back on after being silenced.

Panel Sounder Silence: Silences the local buzzer on the fire alarm control panel.

More Fire Events: Scrolls through the Fire event queue showing devices in alarm.

More Events: Scrolls through the event queue showing system events.

Reset: Resets the fire alarm control panel out of an alarm or latched condition.

Fire Drill: When the fire alarm control panel is placed in Level 2 Access (password or key required), a fire drill can be initiated by pressing the Fire Drill button. Press button again to stop Fire Drill.

Lamp Test: Lights all LEDs and turns on all display pixels.

Programmable Function: Advanced feature.

Left/Right Arrow: Used to move backward and forward in the menus on the LCD display.

Up/Down Arrow: Used to scroll up and down when navigating through menus on the LCD display.

?: Help menu for current system status.

HOCHIKI AMERICA CORPORATION 7051 Village Drive Suite 100 Buena Park, CA 90621

Name: Address:


For Service Contact

Phone #:

These instructions are to be framed and placed next to the FireNET 4127 control panel and FN-LCD-N annunciator.

firealarmresources.com

Documents / Resources

| | |
|---|--|
|  | <p>HOCHIKI FireNET FN-LCD-N Networking Annunciator [pdf] Instruction Manual FireNET FN-LCD-N Networking Annunciator, FireNET FN-LCD-N, Networking Annunciator, Annunciator</p> |
|---|--|

References

- [Fire Alarm Resources | Download fire alarm documents](#)