

# **HOLMAN 2 Dial Tap Timer CO1601 User Guide**

Home » Holman » HOLMAN 2 Dial Tap Timer CO1601 User Guide 🖫



### **Contents**

- 1 2 Dial Tap Timer
  - 1.1 GLOSSARY
  - 1.2 INSTALLATION
  - **1.3 BATTERY INSTALLATION**
  - 1.4 SIMPLE 3 STEP

**PROGRAMMING** 

- 1.5 MANUAL START
- 1.6 STOP OR NO WATERING
- 1.7 RED LED OPERATING

**STATES** 

- **1.8 EXTRA WATERING CYCLES**
- 1.9 FAULT FINDING
- 1.10 CLEARING MEMORY
- 1.11 TECHNICAL DATA
- 2 Documents / Resources
- **3 Related Posts**



2 Dial Tap Timer



www.holmanindustries.com.au

**User Guide** 

### **GLOSSARY**

- A. UNIVERSAL TAP ADAPTOR
- **B. TAP CONNECTION**
- **C. UNION NUT**
- D. CONTROL DIALS
- **E. BATTERY COMPARTMENT**
- F. CLEAR SCREW-ON COVER
- **G. SNAP-ON HOSE CONNECTION**



### **INSTALLATION**

Make sure the washer is in place, then screw the 2 Dial Tap Timer to the tap. Turn it clockwise (hand tighten only).

1 There should be no need to use thread seal tape, as long as the tap seals onto the washer

## **BATTERY INSTALLATION**

- 1. Hold the **Tap Timer** with the battery compartment facing you
- 2. Remove the **BATTERY COMPARTMENT** tray
- 3. Connect a 9V alkaline battery to the battery connector
- 4. Insert the connected battery and push in the **BATTERY COMPARTMENT** tray

When changing a battery, the **Tap Timer** will hold the current program if you fit the battery within 2 minutes. When changing the battery, make sure the battery compartment stays dry




1 Use only 9V alkaline batteries

#### SIMPLE 3 STEP PROGRAMMING


How to set run time and watering interval. Press **ENTER** to reference the start time.

1 The **Tap Timer** will not run immediately after program is set. Program will commence after chosen interval duration has lapsed


1. Turn the **LEFT** dial to select **RUN TIME**. Select from 2 minutes to 240 minutes

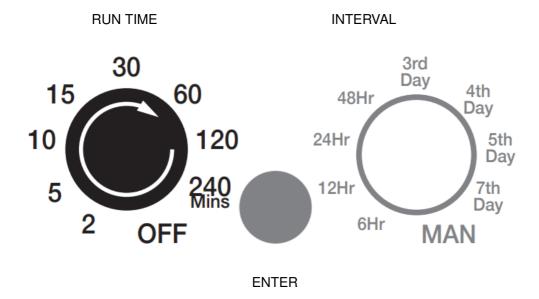

2. Turn the RIGHT dial to select the INTERVAL. Select from every 6 hours to every 7 days

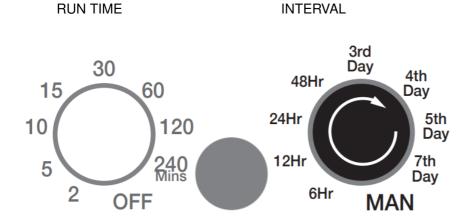



- 3. Push **ENTER** the red LED will appear solid for three seconds to confirm your section. Watering will start at the selected interval
- The time that the **ENTER** button is pushed is used as a reference start time. To change the program, simply follow the same three steps

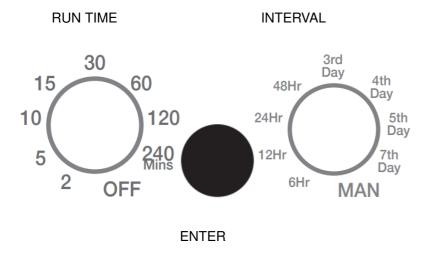


#### **MANUAL START**

- 1. Turn the **LEFT** dial to select **RUN TIME**
- 2. Turn the RIGHT dial to MAN
- 3. Press ENTER
- Running a manual run time will not change any program previously entered. Watering will begin and end at selected run time. No need to move the dials

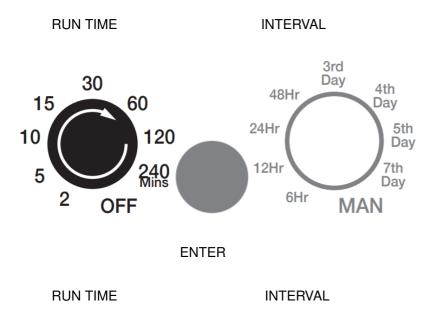

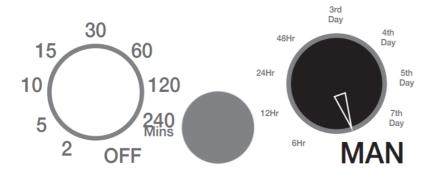


**ENTER** 

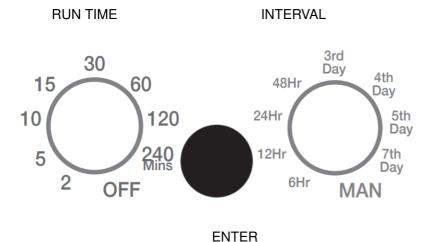

#### STOP OR NO WATERING

- 1. Turn the **RUN TIME** dial to the **OFF** position. While the **RUN TIME** dial is in the **OFF** position no watering will happen
- 1 To re-commence a pre-set program, move the RUN TIME dial to any other position

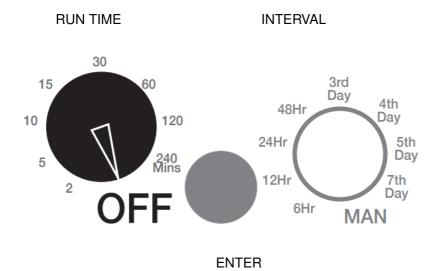

### **RED LED - OPERATING STATES**

- 1. SOLID for three seconds: Confirms program and each time the auto program is changed
- 2. FLASHING every 30 seconds: All is running correctly
- 3. FLASHING every one second: Battery needs changing

#### **EXTRA WATERING CYCLES**

The manual operation mention previously can be used for running an extra cycle whilst the timer is programmed. The manual cycle will run immediately after the **ENTER** button is pressed.

The **Tap Timer** will resume the automatic program once the manual time has elapsed.

#### **FAULT FINDING**

- 1. Ensure your tap is turned on
- 2. Ensure your battery is in good condition. Use only 9V alkaline battery

When the **Tap Timer** is not using an automatic program, it must be in the **OFF** position. Turn the tap **OFF** when the **Tap Timer** is not in watering mode

#### **CLEARING MEMORY**

To clear an existing program, remove the battery and wait until the **Tap Timer** resets. (This can take up to 5 minutes.)

Alternatively, remove the battery and initiate a manual start which will clear the memory immediately.

#### **TECHNICAL DATA**

PRODUCT: Holman 2 Dial Tap Timer

PRODUCT CODE: CO1601

MAXIMUM WATER PRESSURE: 600 kPa MINIMUM WATER PRESSURE: 100 kPa BATTERY: Use a standard 9V alkaline battery

FLUID: Only use cold water with NO added chemicals

FREQUENCY OPTIONS: Every 6 hours, 12 hours, 24 hours, 48 hours, Every 3rd Day, Every 4th Day, Every 4th

Day, Every 7th Day

RUN TIME OPTIONS: 2, 5, 10, 15, 30, 60, 120 or 240 minutes.

We really appreciate having you as a customer, and would like to say thank you for choosing us. Should you have any questions about this product or its operation please call customer service on 1300 716 188





## **Head Office/Service**

11 Walters Drive, Osborne Park WA 6017
Tel: +61 8 9416 9999 Fax: +61 8 9416 9920
support@holmanindustries.com.au
www.holmanindustries.com.au

# Copyright © 2020 Holman Industries

# **Documents / Resources**



**HOLMAN 2 Dial Tap Timer CO1601** [pdf] User Guide HOLMAN, 2 Dial, Tap Timer, CO1601

Manuals+,