


HOLMAN CO6004 4x Outlet Digital Tap Timer



HOLMAN CO6004 4x Outlet Digital Tap Timer User Guide

[Home](#) » [Holman](#) » HOLMAN CO6004 4x Outlet Digital Tap Timer User Guide 

Contents

- [1 HOLMAN CO6004 4x Outlet Digital Tap Timer](#)
- [2 Overview](#)
- [3 Specifications](#)
- [4 Setup](#)
- [5 Operation](#)
- [6 Maintenance](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



HOLMAN CO6004 4x Outlet Digital Tap Timer



PRODUCT CODE: CO6004



QuikDial™

Our **QuikDial Tap Timers** have a simple and intuitive setup system that is quickly completed in 5 steps.

DIAL TO SELECT



WATER CONTROL PRESS TO CONFIRM



SCAN FOR MORE INFO

Overview

Main Components

1. ZONE 1 outlet
2. ZONE 2 outlet
3. ZONE 3 outlet
4. ZONE 4 outlet
 - Each outlet is 20mm BSP with 12mm snap-on connection included
5. 20/25mm BSP tap nut inlet
6. Tap connection locking nut
7. Display
8. ON/OFF
9. Main dial
10. Battery compartment:
 - Requires 2× AA alkaline batteries only (not included)



Additional Functions

- Inactivity on your QuikDial Tap Timer controls for 6 seconds will return to the default system mode displaying the current time
- Removing the AA batteries will reset all clock and schedule settings
- To reset your QuikDial Tap Timer, remove the batteries and twist the main dial until the display is completely blank
- For use with cold water only

Specifications

- **Interval scheduling** 1, 2, 3, 6 or 12 hours, or 1-7 days
- **Watering duration** 1-99 minutes
- **Working pressure** 30-1200 kPa
- **Maximum flow rate** 25 L/min
- **Connections** 20/25mm BSP inlet / 20mm BSP outlet
- **Working temperature** 3°C to 50°C
- **Batteries** 2× AA alkaline (not included)


Setup

Battery Installation

1. Install 2× 1.5v AA alkaline batteries into your QuikDial Tap Timer, as indicated in the battery compartment [a]




- After installing the batteries, the display will flash and your QuikDial will make clicking noises as part of the start-up phase
- Once the start-up process is complete, the clock will display as follows, with the time separator flashing [b] and the battery indicated as full [c]

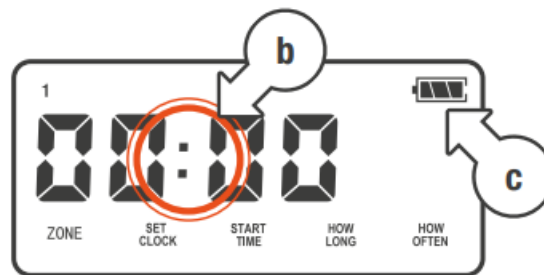

Setup Process

- Your QuikDial features a quick setup process across 5 key steps. Use the main dial to scroll through the main menu for each step

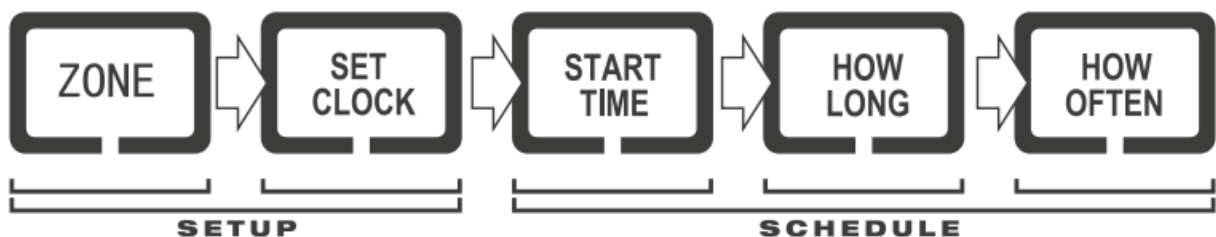

Zone


- This process is to select which zones will be watered as part of your schedule

1. Turn the main dial to select ZONE [a] in the main menu



2. Press the main dial to edit zones


- The zone selector [b] will flash around ZONE 1 and indicate as ON [c]

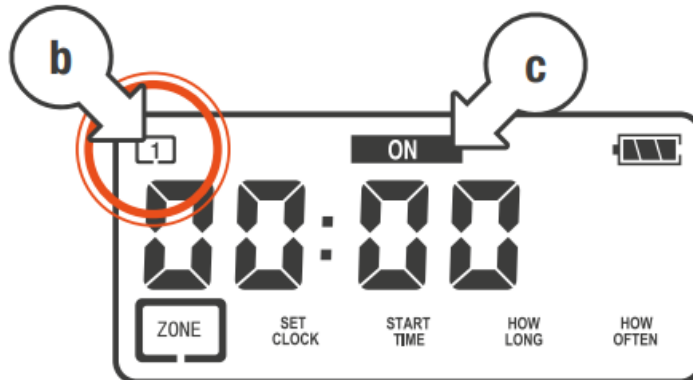

- By default, ZONE 1 is ON, and ZONES 2-4 are OFF


3. Press the main dial to toggle ZONE 1 ON or OFF as desired

- When a zone is turned OFF, the zone number [d] will disappear and the OFF indicator [e] will be displayed
- The zone selector [f] will remain flashing

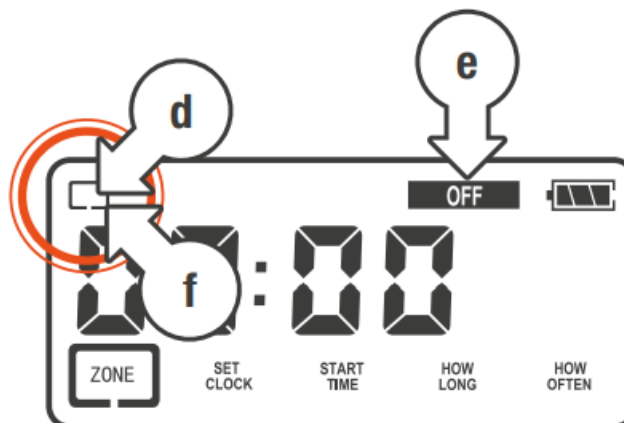

4. Turn the main dial to the next zone

- The zone selector [g] will flash around the next zone and indicate as OFF [h]

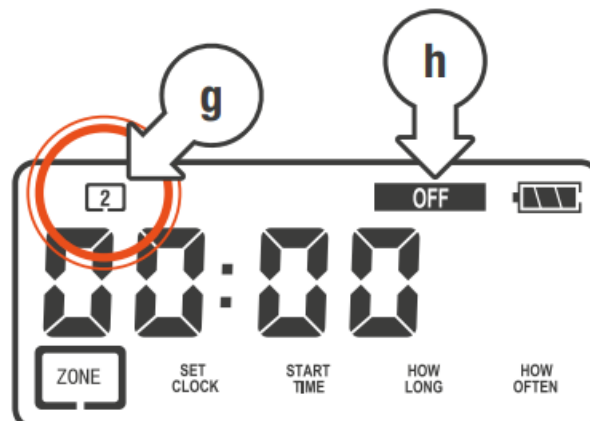


5. Press the main dial to toggle the zone ON or OFF as desired

6. Repeat steps 4-5 for the remaining zones


7. After ZONE 4 has been set to ON or OFF, turn the main dial one more step

- The zone selectors will flash around all zones [i], and the status of each zone will be indicated by their respective numbers being present (ON) [j] or missing (OFF) [k]

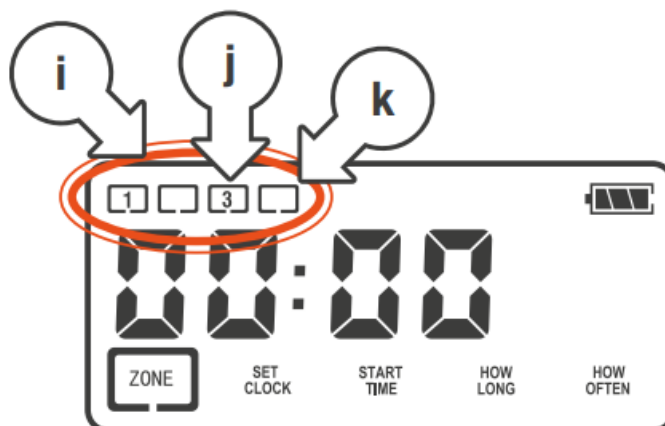

8. To confirm your zone settings, press the main dial


- Alternatively, to go back and change your zone settings, turn the dial another step and repeat steps 3-7
- Once your zones are confirmed, ZONE will flash in the main menu [l] and the active zones will be shown [m]

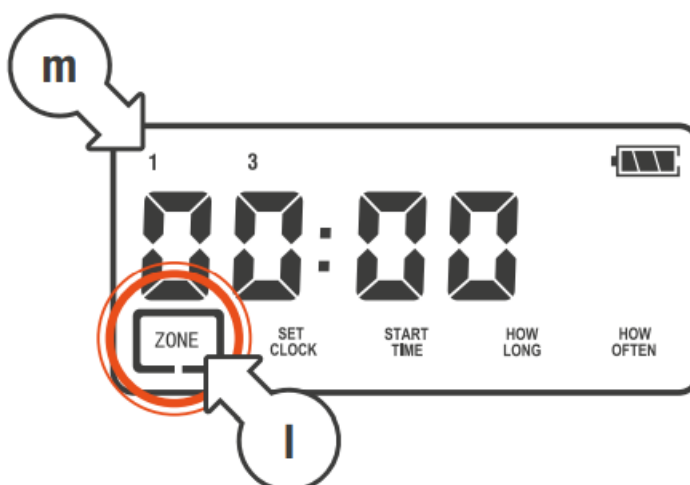


Set Clock

- This process is to set the system clock for your QuikDial
- Your QuikDial system time is always in 24-hour format (military time)

1. Turn the main dial to select SET CLOCK [a] in the main menu

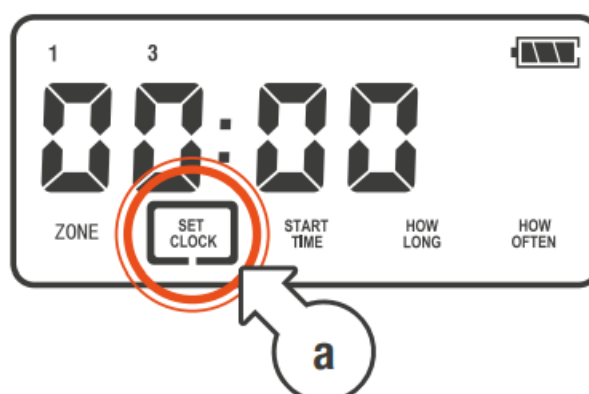


2. Press the main dial. The current hour [b] will begin flashing

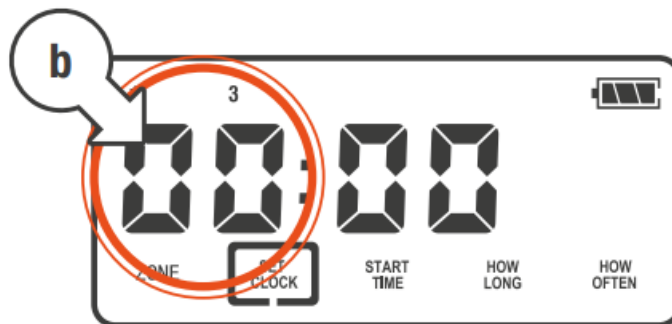

3. Turn the main dial to adjust the hour to the current time


4. Press the main dial to confirm the current hour. The current minute will begin flashing [c]

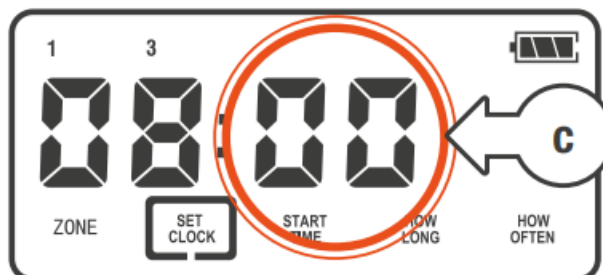

5. Turn the main dial to adjust the minute to the current time

6. Press the main dial to confirm the current minute


- SET CLOCK will flash again in the main menu [d], to indicate the system time [e] has been set

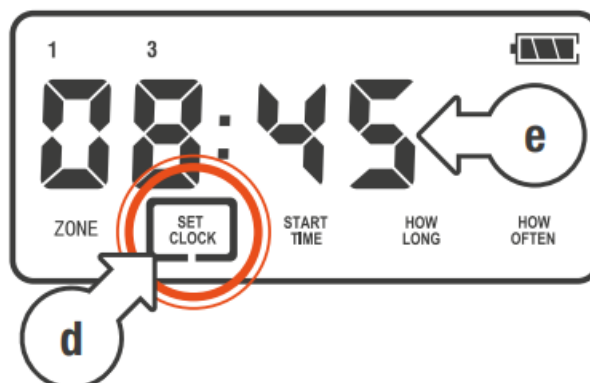

Start Time

- This process is to set the START TIME for watering of your active zones
- This START TIME is applied to all zones but is only active on the zones that have been toggled ON in the previous instructions
- Refer back to Zone for more information on enabling or disabling zones

1. Turn the main dial to select START TIME [a] in the main menu

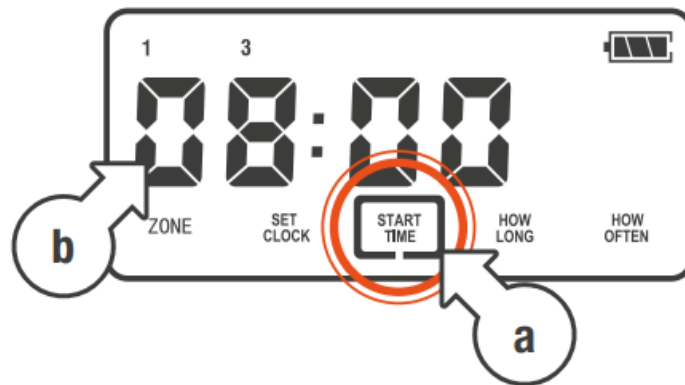


- This will display the current START TIME [b]. By default, this is set to 08:00 (8:00 am)

2. Press the main dial. The START TIME hour [c] will begin flashing



3. Turn the main dial to adjust the hour to the desired START TIME


4. Press the main dial to confirm the hour. The START TIME minute will begin flashing [c]

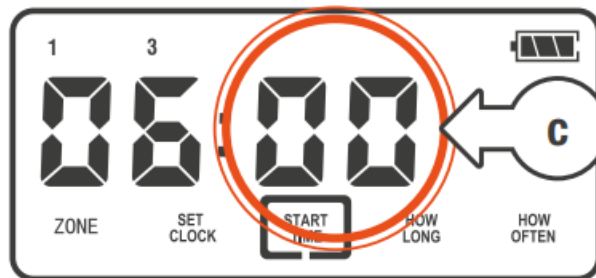

5. Turn the main dial to adjust the minute to the desired START TIME

6. Press the main dial to confirm the minute

- START TIME in the main menu [d] will flash again, to indicate it has been set [e]

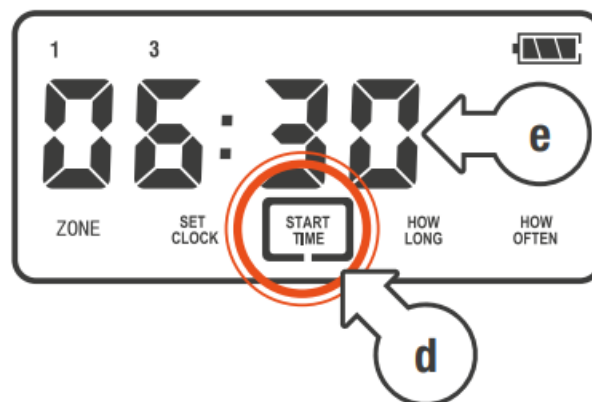


How Long (Watering Duration)

- This process sets the watering duration of your active zones
- This duration is applied to all zones but is only active on the zones that have been toggled ON in the previous instructions


- Refer back to Zone for more information on enabling or disabling zones

1. Turn the main dial to select HOW LONG [a] in the main menu

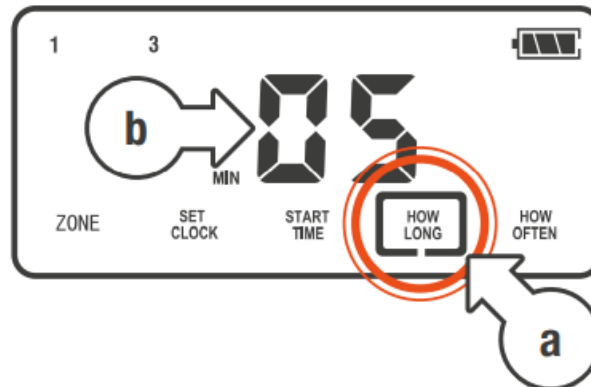

- This will display the current watering duration [b]. By default, this is set to 5 minutes


2. Press the main dial. The duration in minutes [c] will begin flashing

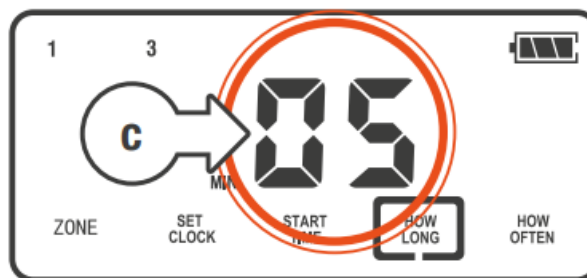

3. Turn the main dial to adjust the duration as desired

4. Press the main dial to confirm the duration

- HOW LONG in the main menu [d] will flash again, to indicate the duration has been set [e]

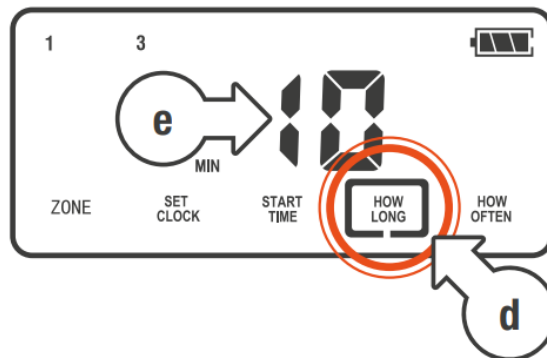


How Often (Watering Interval)


- This process is to set the interval time between watering sessions of your active zones
- This interval is applied to all zones, but is only active on the zones that have been toggled ON in the previous instructions
- Refer back to Zone for more information on enabling or disabling zones

1. Turn the main dial to select HOW OFTEN [a] in the main menu

- This will display the current watering interval [b]. By default, this is set to 1 day

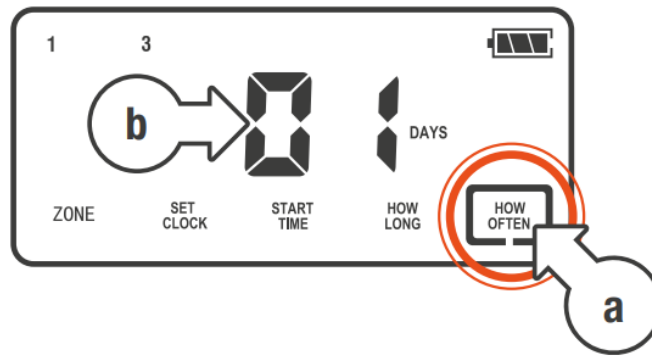


2. Press the main dial. The interval [c] will begin flashing

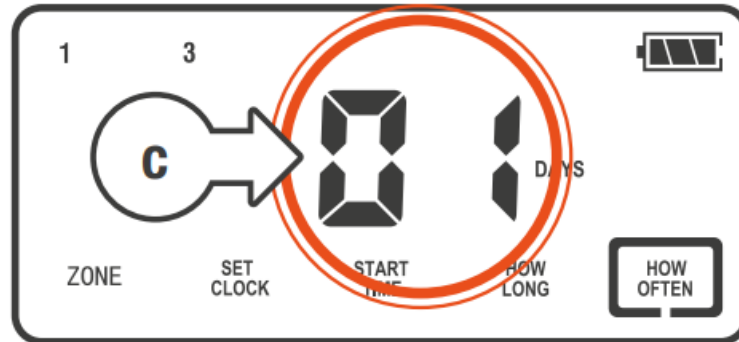


3. Turn the main dial to adjust the interval length in DAYS from 1 to 7


- For shorter watering intervals in HOURS [d], turn the main dial beyond 7 days. The interval will now show as 1 hour

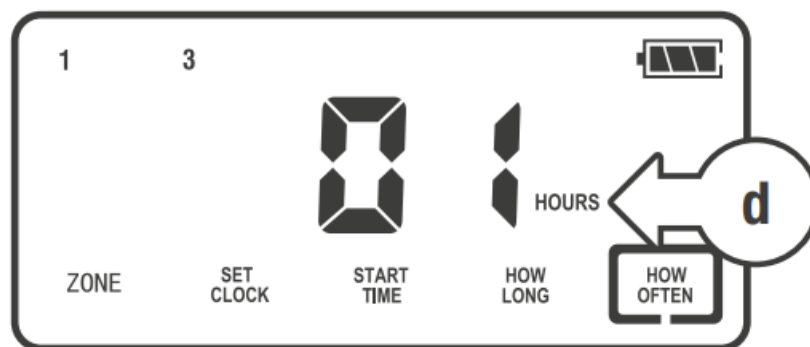

- Keep turning the main dial to adjust the watering interval in HOURS
- Hourly watering intervals are available in 1, 2, 3, 6 or 12 hours
- To go back to setting the interval in DAYS [e], keep turning the dial beyond 12 hours. The interval will return to 1 day

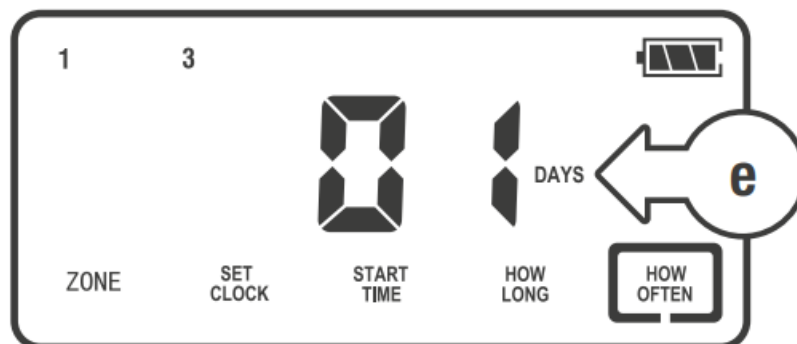

4. With the desired interval time showing, press the main dial to confirm


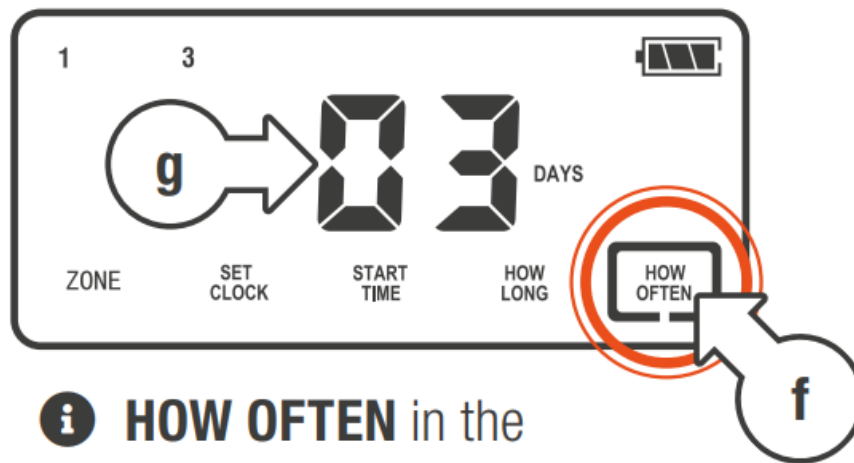


- HOW OFTEN in the main menu [f] will flash again, to indicate the interval has been set [g]


Operation

Automatic Watering

1. For automatic watering, ensure ZONE, SET CLOCK, START TIME, HOW LONG, and HOW OFTEN have all been set correctly as per the previous instructions
2. After a period of inactivity on your QuikDial controls, the set watering schedule will be active in the background as per your confirmed settings
 - In this state, your QuikDial display will cycle between the current time [a] and the amount of time left before your NEXT watering session [b]

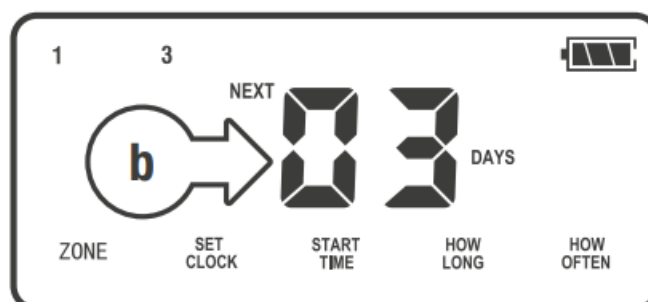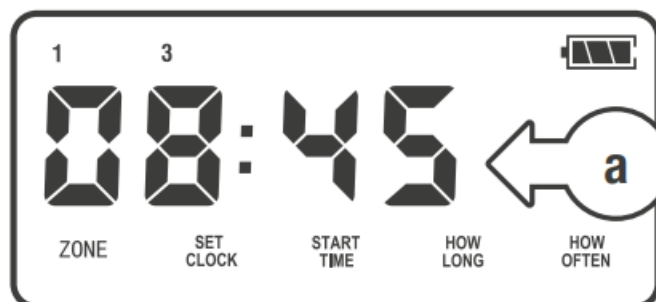


3. When the current interval time [b] lapses, the zones will start watering in sequential order
 - During watering, the sprinkler animation [c] will be active, the current zone [d] will flash, and the remaining watering time [e] will also flash as it counts down
 - Additional zones scheduled for watering will also show [f]

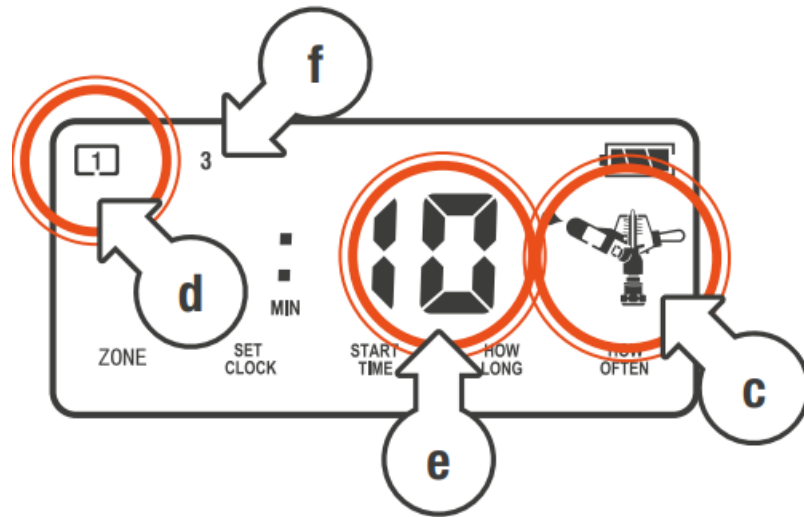


Manual Watering

1. For manual (instant) watering, press ON/OFF
2. The zone selector [a] will flash. Twist the main dial to select a zone

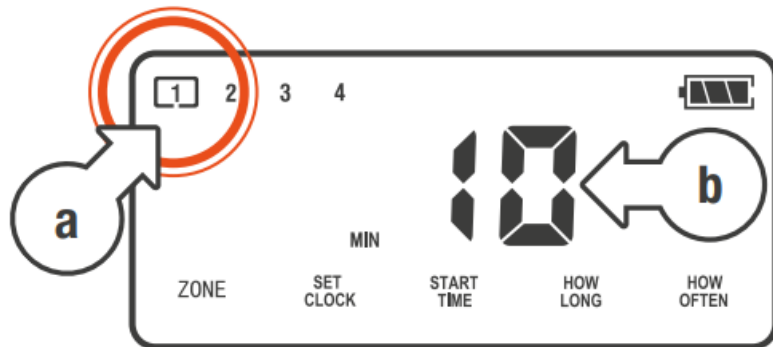


3. Press the main dial to water immediately for the pre-set duration [b]. By default, this is 10 minutes
 - During watering, the sprinkler animation [c] will be active, and the current zone [d] will flash

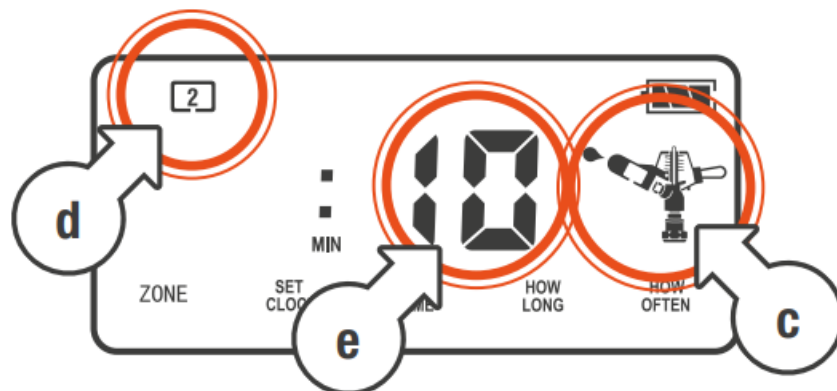

4. Once watering, the remaining time [e] will also flash to indicate it is adjustable
5. Turn the main dial to adjust the watering time as desired
 - The minimum watering time is 1 minute
 - The maximum watering time is 99 minutes
6. After a short period, the remaining watering time will stop flashing to indicate it has been set
 - To stop watering before the remaining time has lapsed, press ON/OFF and your QuikDial will return to the default display
 - If the remaining time stops flashing before you are able to adjust it, press ON/OFF to stop watering and restart the manual watering process from Step 1

No/Suspended Watering Mode

1. To stop all automatic watering, press the Menu dial for 3 seconds
2. The display will enter nonwatering mode [a]
3. To return to scheduled automatic watering, press the Menu dial for 3 seconds

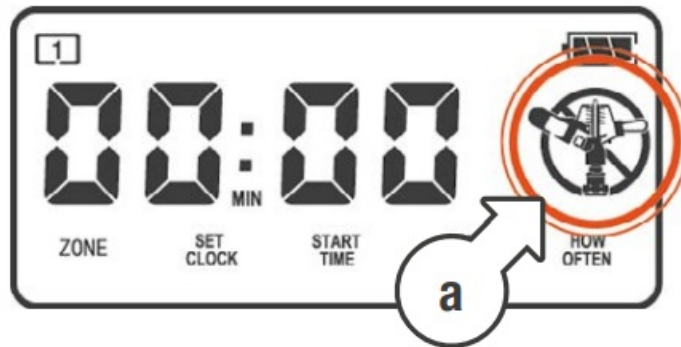

4. The non watering icon will disappear and your automated watering will continue

Maintenance

Cold Weather

- Your QuikDial should be removed from the tap and stored away during winter
- Keep your tap timer out of freezing conditions as this can damage internal components

Batteries

- Remove batteries from your QuikDial during periods of non-use—this will erase all settings
- Battery leakage can cause corrosion and damage to your QuikDial
- Do not mix old and new batteries
- Do not use rechargeable batteries

NEED HELPS? JUST ASK!

The Holman website has a host of additional information on features. Head to support.holmanindustries.com.au for more tips, tricks, and support content. If you still need help, feel free to email our friendly Customer Service team at support@holmanindustries.com.au or call at 08 9416 9999.



SCAN FOR MORE INFO

Thanks for being a #SMARTGARDENER

We appreciate having you as a customer and would like to say thank you for choosing us. We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an

extended warranty. Keep up to date to with relevant product information and special offers available through our newsletter. www.holmanindustries.com.au/product-registration/



- Copyright © 2023 Holman Industries

Documents / Resources

	<p>HOLMAN CO6004 4x Outlet Digital Tap Timer [pdf] User Guide</p> <p>CO6004 4x Outlet Digital Tap Timer, CO6004, 4x Outlet Digital Tap Timer, Digital Tap Timer, Tap Timer, Timer</p>
--	---

References

- [Product Registration and Extended Warranty - Holman Industries](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.