



## HOLMAN WiFi Controlled Hub Socket with Trimer User Manual

[Home](#) » [Holman](#) » **HOLMAN WiFi Controlled Hub Socket with Trimer User Manual** 

*HOLMAN WiFi Controlled Hub Socket with  
Trimer User Manual*

# HOLMAN

## Wi-Fi HUB + WX1

Wi-Fi Controlled Hub Socket with Tap Timer



### Warranty

## HOLMAN

For the #SMARTGARDENER   

### Contents

- [1 Introduction](#)
- [2 Overview](#)
- [3 Installation](#)
- [4 Manual Operation](#)
- [5 Automation](#)
- [6 Warranty](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

## Introduction

Your Wi-Fi Hub allows smartphone access to your WX1 Tap Timer from anywhere with internet access and the Holman Home app. Holman Home provides your WX1 with three irrigation start times, tap-to-run features and custom watering automation.

RF range: 917.2MHz ~ 920MHz  
RF maximum output power: +10dBm  
Wi-Fi frequency range: 2.400 to 2.4835GHz  
Wi-Fi maximum output power: +20dBm  
Firmware version: 1.0.5  
Socket input voltage: AC 90V-240V 50Hz  
Socket output Voltage: AC 90V-240V 50Hz  
Socket maximum load current: 10A  
Socket operating temperature: 0-40°C

iOS is a trademark of Apple Inc. Android is a trademark of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. All other content is Copyright © Holman Industries 2020



[holmanindustries.com.au/holman-home](https://holmanindustries.com.au/holman-home)

[App Store](#)

[Google Play Store](#)

## Overview



#### WX1 Tap Timer

1. 20/25mm BSP reducing bush
2. 25mm tap adaptor
3. **TAP TIMER BUTTON**
4. Watering indicator
5. 20mm BSP outlet
6. Battery compartment

7. HUB BUTTON
8. Power indicator
9. Power plug
10. Wi-Fi Socket for power

## Installation

### Installing Holman Home

1. Download Holman Home to your mobile device via the [App Store](#) or [Google Play](#)
  - 📌 Visit our website for more [www.holmanindustries.com.au/holman-home/](http://www.holmanindustries.com.au/holman-home/)
2. Open Holman Home on your mobile device
  - 📌 You may be prompted to allow notifications the app can still function if you choose to opt out
3. Tap REGISTER
4. Read our Privacy Policy and tap AGREE if you wish to proceed
5. Follow the prompts to register a Holman Home account with your email or mobile number
  - ⚠️ Ensure your country details are correct at this stage
  - 📌 You may be prompted to allow access your location. This allows the app to show weather information, and can still function if you choose to opt out

### Add the Wi-Fi Hub to Holman Home

1. For the setup process, plug your Wi-Fi Hub to a power source near your Wi-Fi router
2. Open Holman Home and add a new device by tapping + on the HOME screen



3. Tap GARDEN WATERING and choose Wi-Fi HUB



4. Follow the prompts from Holman Home to work through the Wi-Fi Hub setup process

 
### Add the WX1 and Wi-Fi Socket to Holman Home

1. Install 4x 1.5v AA batteries into the **WX1 Tap Timer**, with the contacts (a) pointing towards the front of the tap timer




3. In the **Wi-Fi HUB** screen, tap **ADD/VIEW DEVICES**

2. Using **Holman Home**, return to the **HOME** screen and tap the **Wi-Fi Hub**

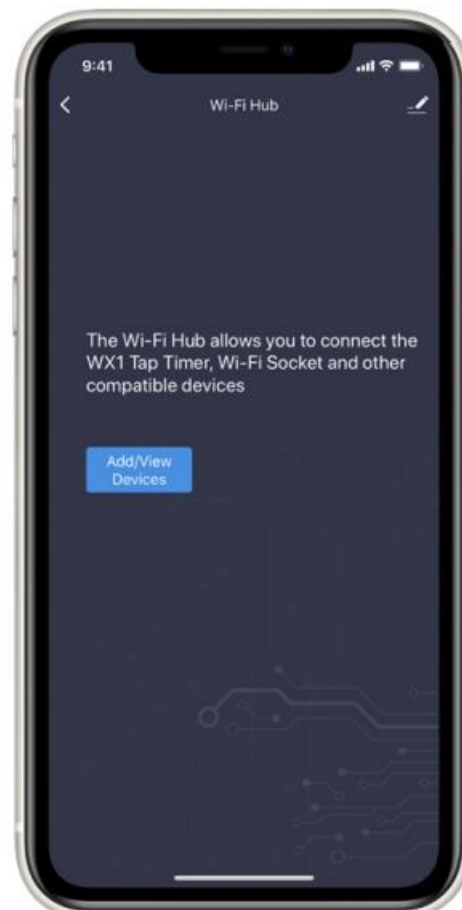

  
4. In the next screen, tap **ADD DEVICES** and follow the prompts to connect your **WX1** and **Wi-Fi Socket**

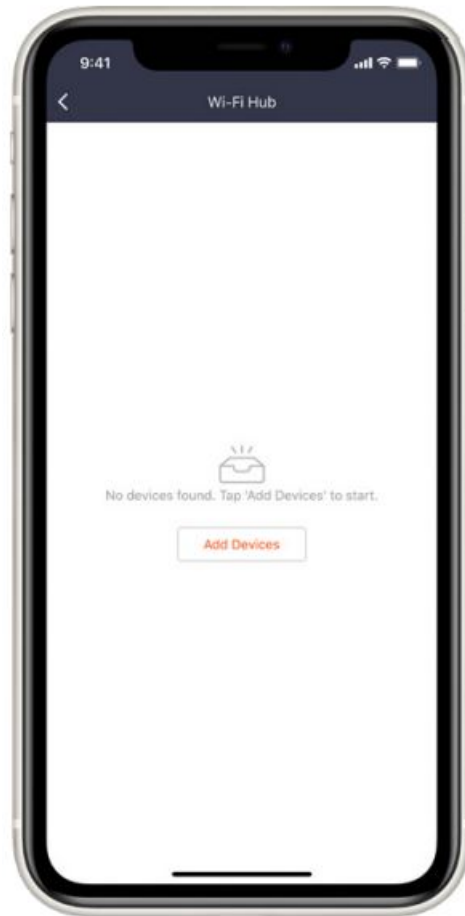


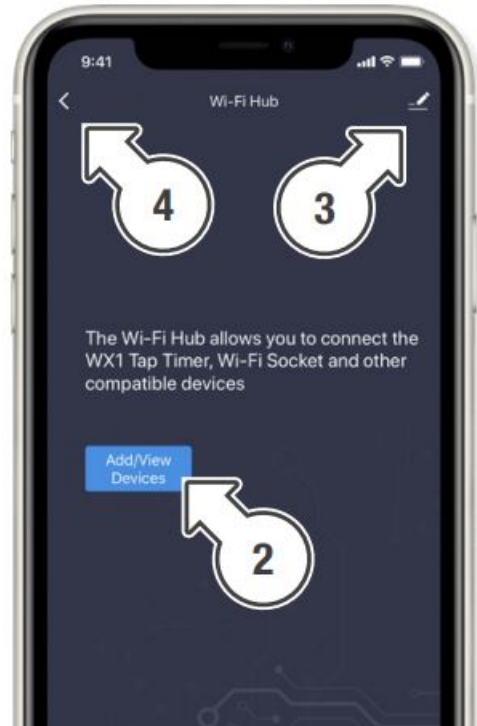 
## Manual Operation

### Wi-Fi Hub

1. Tap the **Wi-Fi HUB** on the **HOME** screen devices list

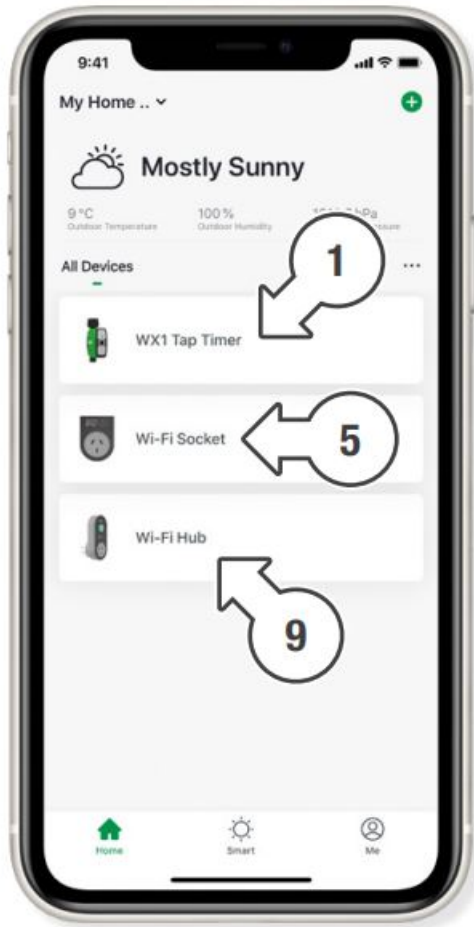


- i** This displays **Wi-Fi Hub** controls and settings
2. To add additional **WX1 Tap Timers** to your system, tap **ADD/VIEW DEVICES** and follow the prompts
3. For additional information about your **Wi-Fi Hub**, tap the pencil icon 
4. Tap **<** to return to the **HOME** screen



## Wi-Fi Socket

5. Tap the **Wi-Fi SOCKET** on the **HOME** screen devices list



- i** This displays **Wi-Fi Socket** controls and settings
6. Toggle the socket power on and off using the **POWER** button in Holman Home, or the **HUB BUTTON** on the **Wi-Fi Hub**
7. Tap **SCHEDULE** for automated scheduling options
- i** See [Automation](#) below for more information on scheduling
8. For additional information about your **Wi-Fi Socket**, tap the pencil icon 
- i** The **Wi-Fi Socket** can also be toggled manually using the **HUB BUTTON**

## WX1 Tap Timer



9. Tap the **WX1 TAP TIMER** on the **HOME** screen devices list




- i** This displays **WX1 Tap Timer** controls and settings

10. **LAST WATER USAGE** uses a built-in flow meter within the **WX1**

- i** With a **Smart Moisture Sensor** (sold separately) installed, this will also display soil moisture and temperature

- i** For more information on the **Smart Moisture Sensor**, visit [www.holmanindustries.com.au/product/smart-moisture-sensor](http://www.holmanindustries.com.au/product/smart-moisture-sensor)

11. For additional information about your **WX1 Tap Timer**, tap the pencil icon 

12. Tap **MANUAL CONTROL** to access manual watering controls

- i** The **MANUAL WATERING** is for one-off watering durations



13. Move the hollow green circle on the dial to set the desired watering duration
14. Press ► to start watering and ■■ to stop
15. For automated watering schedules, tap **STARTS**
- i** See [Automation](#) below for more information on scheduling
16. For additional data from the **Smart Moisture Sensor**, tap **SENSOR**
- i** Manual watering can also be stopped or started at any time using the **TAP TIMER BUTTON**
17. For additional support, tap **HELP** or visit [support.holmanindustries.com.au](http://support.holmanindustries.com.au)

[www.holmanindustries.com.au/product/smart-moisture-sensor](http://www.holmanindustries.com.au/product/smart-moisture-sensor)  
[support.holmanindustries.com.au](http://support.holmanindustries.com.au)

## Automation

## Wi-Fi Socket

1. Tap the **Wi-Fi SOCKET** on the **HOME** screen devices list

 


2. On the **Wi-Fi SOCKET** screen, tap **SCHEDULE** for automated scheduling options



- i** This displays the **Wi-Fi Socket SCHEDULE** screen


3. Tap **ADD** to set up a schedule for the **Wi-Fi Socket**

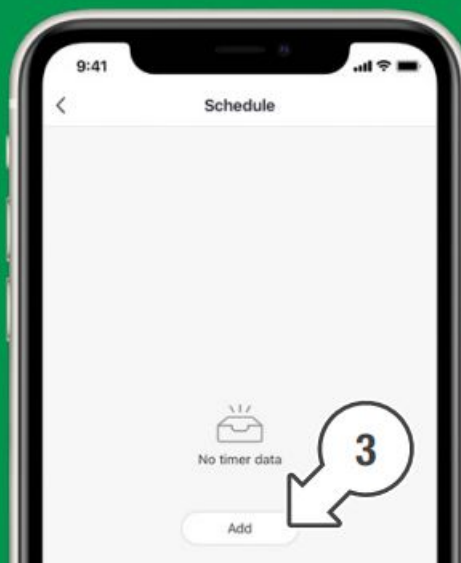

- i** This displays the **ADD SCHEDULE** screen

4. Use the **POWER** menu to choose if the schedule is to switch the **Wi-Fi Socket ON** or **OFF**
5. Use the clock wheels to set the desired switch time of day

 
6. Tap **REPEAT** to choose which days of the week to toggle the socket
7. Tap **NOTE** to add a custom description to your schedule
8. Toggle the **NOTIFICATION** switch to receive alerts when the schedule is triggered
9. Tap **SAVE** to set your schedule, or **<** to exit without saving

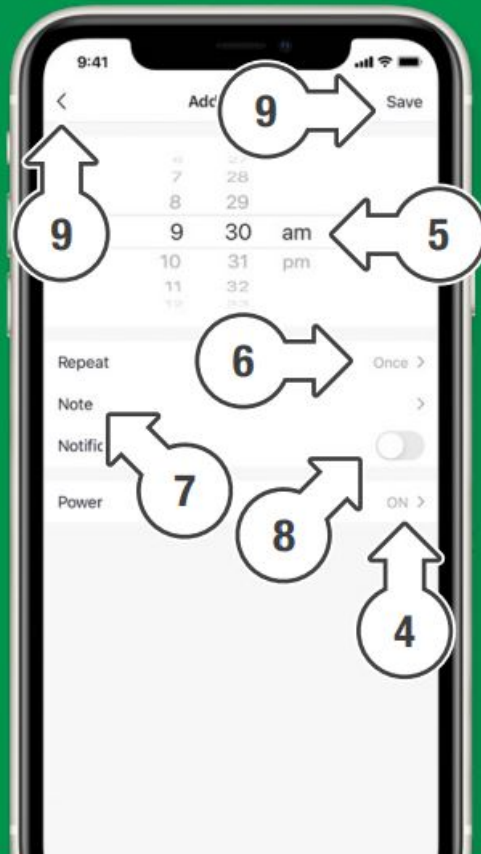

WX1 Tap Timer

10. Tap the **WX1 TAP TIMER** on the **HOME** screen devices list

 **i** This displays **WX1 Tap Timer** controls and settings

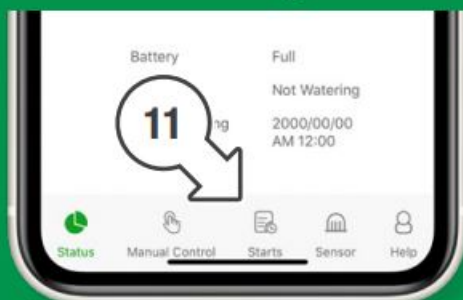


11. Tap **STARTS** to access automated watering controls

**i** This displays the **STARTS** screen for watering schedules

12. Tap **START A** to set one of three schedules as desired



 **i** This displays **START SETTINGS** for watering schedules

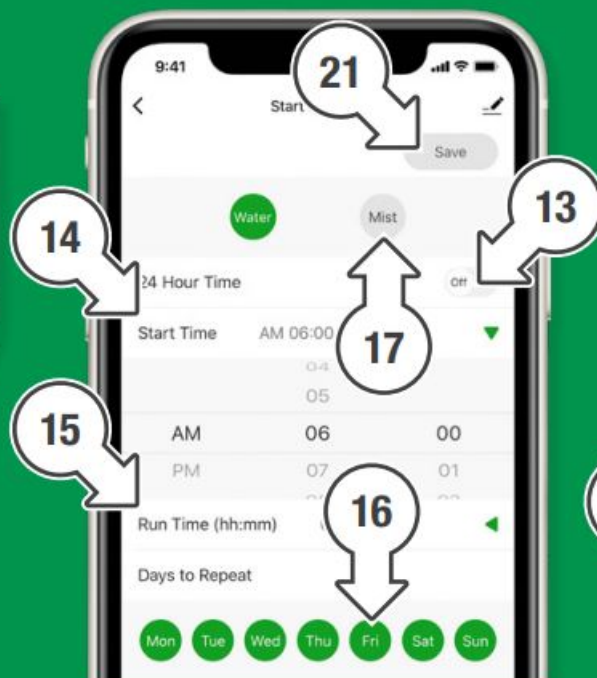

13. Use the **24 HOUR TIME** switch to toggle between 24hr and AM/PM time

14. Tap **START TIME** to open the clock and set a start time

15. Tap **RUN TIME** to open the timer and set a watering duration



16. Tap each of the days as required to toggle watering days on or off

17. For shorter watering bursts in intervals tap **MIST**

**i** This displays **MIST** timing

18. Use **MISTING PERIOD** to set the overall duration of the misting program

19. Use **MIST TIME** to set the duration for each burst of misting

20. Use **INTERVAL** to set the amount of time between each burst

21. In either **WATER** or **MIST** mode, tap **SAVE** to set the desired schedule and return to the **STARTS** screen, or tap **<** to return without saving

22. Continue setting additional **STARTS** for **B** and **C** as desired

**i** As **START SETTINGS** are saved, the scheduled times will show on each **START**

23. The watering days will also be indicated at the top of the screen

24. To manually toggle **START** schedules on or off, use the switches on each start

25. To suspend all watering schedules for a set period of time (ie. during rain), tap **24H**, **48H** or **72H** under **RAIN DELAY** as desired

26. Tap **<** to return to the **HOME** screen when setup is complete



## Warranty

### 2 Year Replacement Guarantee

Holman offers a 2 year replacement guarantee with this product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

As well as your statutory rights referred to above and any other rights and remedies you have under any other laws relating to your Holman product, we also provide you with a Holman guarantee.

Holman guarantees this product against defects caused by faulty workmanship and materials for 2 years domestic use from the date of purchase. During this guarantee period Holman will replace any defective product. Packaging and instructions may not be replaced unless faulty.

In the event of a product being replaced during the guarantee period, the guarantee on the replacement product will expire 2 years from the purchase date of the original product, not 2 years from the date of replacement.

To the extent permitted by law, this Holman Replacement Guarantee excludes liability for consequential loss or

any other loss or damage caused to property of persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some clarification or advice please contact us directly: 1300 716 188 [support@holmanindustries.com.au](mailto:support@holmanindustries.com.au) 11 Walters Drive, Osborne Park 6017 WA

If you are certain your product is defective and is covered by the terms of this warranty, you will need to present your defective product and your purchase receipt as proof of purchase to the place you purchased it from, where the retailer will replace the product for you on our behalf.



**Thanks for being a  
#SMARTGARDENER**

We really appreciate having you as a customer, and would like to say thank you for choosing us.

We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an extended warranty. Keep up to date with relevant product information and special offers available through our newsletter.

[www.holmanindustries.com.au/product-registration/](http://www.holmanindustries.com.au/product-registration/)



**HOLMAN**

For the #SMARTGARDENER   

[www.holmanindustries.com.au/product-registration](http://www.holmanindustries.com.au/product-registration)



**Documents / Resources**



**[HOLMAN WiFi Controlled Hub Socket with Trimer](#) [pdf] User Manual**  
HOLMAN, WiFi, Controlled, Hub Socket, with, Trimer

Manuals+.