

HOLMAN WX1 Tap Timer and Wi-Fi Hub Setup Apps User Guide

Home » Holman » HOLMAN WX1 Tap Timer and Wi-Fi Hub Setup Apps User Guide 🖫



For the #SMARTGARDENER



Contents


- 1 ADDING YOUR WI-FI HUB TO HOLMAN HOME USING AP MODE
- 2 ADDING YOUR WX1 TAP TIMER AND WI-FI SOCKET TO HOLMAN HOME
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**

ADDING YOUR WI-FI HUB TO HOLMAN HOME USING AP MODE

- 1. Plug your Wi-Fi Hub into a power source near your Wi-Fi router
- 2. Open Holman Home and add a new device by tapping plus [a] on the HOME screen



3. Tap **GARDEN WATERING** [b] and choose Wi-Fi HUB [c]

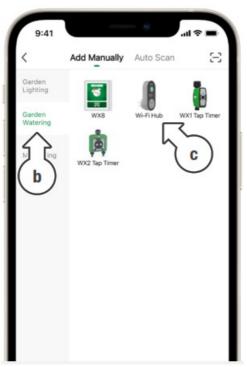

4. Enter your Wi-Fi network [d] and password [e], then tap NEXT [f]




- 5. On the following screen, tap EZ MODE [g]
- 6. From the drop-down menu, tap AP MODE [h]




- 7. Reset the Wi-Fi Hub as per the instructions provided on-screen [i]
- 8. Once the Wi-Fi Hub is flashing accordingly, check the LED confirmation toggle [j] and tap NEXT [k]
 - The Wi-Fi Hub has three flashing modes:
 - Fast flash
 - · Slow flash
 - Slow long blink




9. On the following screen, tap GO TO CONNECT [I]

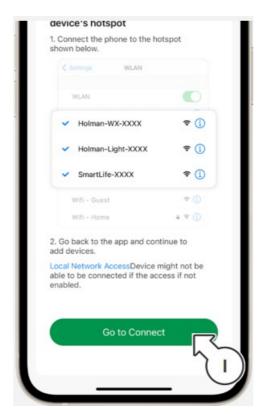


10. apple iOS only: If redirected to SETTINGS, tap Wi-Fi [m]

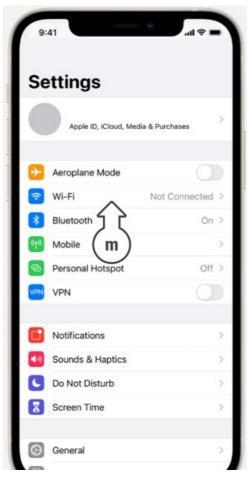

11. apple iOS only: Tap Holman-WX-XXXX [n] and wait until the network is connected

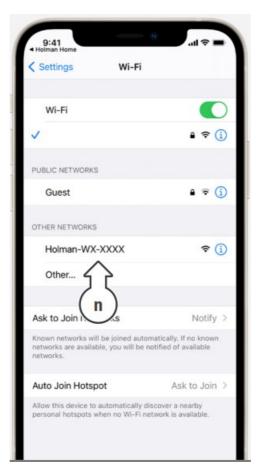

12. android Android only: Tap the Holman-WX-XXXX [o] and wait until the network is connected

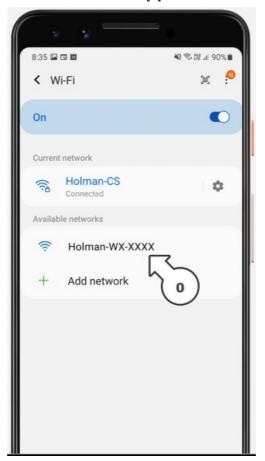


apple iOS or android Android: If the Holman-WX-XXXX network does not show in your Wi-Fi settings, try the following:


Disable Wi-Fi on your smartphone, wait a few moments and turn Wi-Fi back on

You may need to reset your Wi-Fi Hub again; Hold the button for approximately 5 seconds to change to fast-flash mode, then hold the button again for approx 5 seconds to change back to slow-flash mode

13. android Android only: Ignore messages such as "Connected without internet" and tap chevron-left in the Android nav bar to ignore[p]

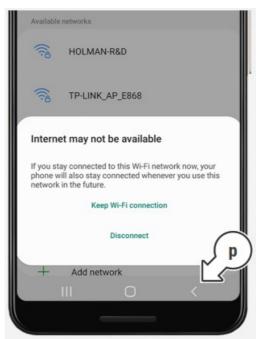


14. android Android only: Once Holman-WX-XXXX is the active network, return to Holman Home using by tapping the multi-screen icon [q]

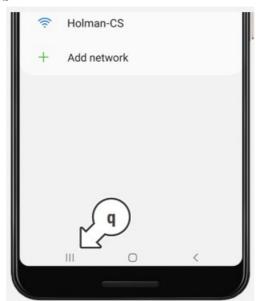

15. **iOS** only: Once **Holman-WX-XXXX** is the active network [r], return to Holman Home using by tapping the Holman Home shortcut [s]



16. Wait while your Wi-Fi Hub is being added to Holman Home [t]

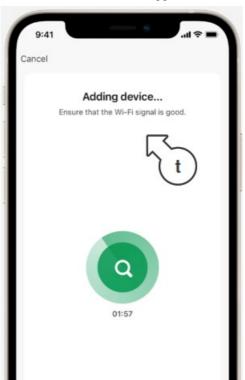

17. If your Wi-Fi Hub [u] connects successfully, tap DONE [v]




18. After confirming the connection, tap ADD/VIEW DEVICES [w] and follow the prompts to connect the Wi-Fi Socket and WX1 Tap Timer



If this method of connecting the **WX1 Tap Timer** and **Wi-Fi Sockedoes** not work, tap the back button [x] to go back to the **HOME** screen, and follow the next set of instructions for an alternative connection method

ADDING YOUR WX1 TAP TIMER AND WI-FI SOCKET TO HOLMAN HOME

- 1. Ensure your WX1 Tap Timer is close to your router and install 4x 1.5v AA alkaline batteries [a]
- 2. From the HOME screen tap plus [b] to add the WX1 Tap Timer and Wi-Fi Socket

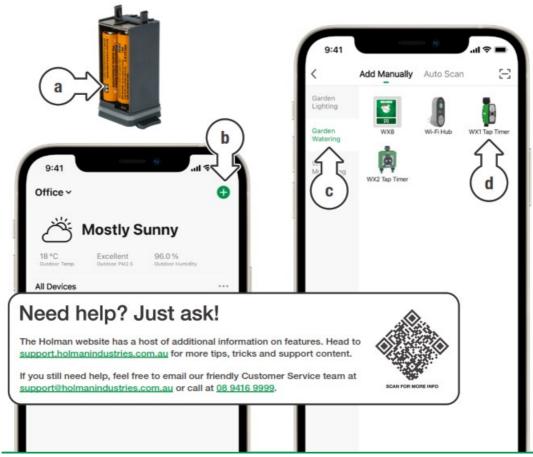


https://support.holmanindustries.com.au/?=qr

3. Tap GARDEN WATERING [c] and choose WX1 Tap Timer [d] When a GATEWAY [e] is requested, select Wi-Fi HUB [f]




- 4. Reset the **WX1 Tap Timer** as per the instructions provided on-screen [g]
- 5. Once the WX1 Tap Timer is flashing accordingly, check the LED confirmation toggle [h] and tap NEXT [i]

If your **WX1 Tap Timer** fails to add to Holman **Home**, restart the app, and start the process again to add your **WX1 Tap Timer and Wi-Fi Socket**

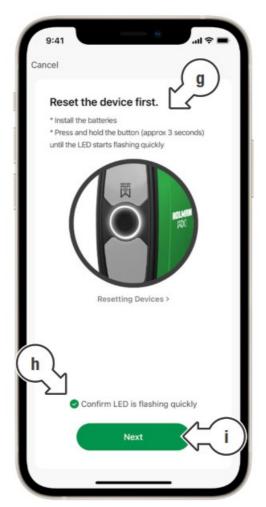

6. Wait until both the WX1 Tap Timer [j] and Wi-Fi Socket [k] have been added, then tap DONE [l]

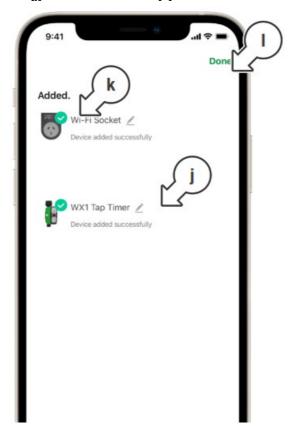



For additional help, visit https://www.holmanindustries.com.au/

Documents / Resources



HOLMAN WX1 Tap Timer and Wi-Fi Hub Setup Apps [pdf] User Guide WX1, Tap Timer and Wi-Fi Hub Setup Apps

References

• — Holman Industries - Irrigation, Garden Lights, Plumbing

Manuals+,