



## Contents [ [hide](#) ]

- [1 HOMCOM 800-208V70 Built-In Toaster](#)
- [2 Important Instructions](#)
- [3 Features of a Toaster](#)
- [4 Using the Toaster](#)
- [5 Toasting Frozen Bread](#)
- [6 Cleaning the Toaster](#)
- [7 Specifications](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)



## HOMCOM 800-208V70 Built-In Toaster



# **HomCom Toaster Instruction Manual**

**Model: 800-208V70**

## **Important Instructions**

1. Before using this appliance, read all instructions. Retain this manual for future reference.
2. To prevent electrical hazards, do not immerse any part of the appliance or cord in water or other liquids.
3. Children must be supervised when near the appliance.
4. Always use the appliance on a dry and level surface.
5. Do not use this appliance outdoors.
6. When not in use and before cleaning, unplug the appliance from the socket.
7. If the appliance is damaged or malfunctions in any way, do not use it. Return the appliance to an authorised service engineer for repair, as special tools are required.
8. Regularly check the supply cord, ensuring there is no damage. If signs of damage occur, return the entire appliance to an authorised service engineer.
9. Ensure the cord does not hang over a table or counter or touch hot surfaces. Let the unit cool before wrapping the cord around the base for storage.
10. Parts of this appliance can become hot – do not touch to avoid burns. Do not store or cover the appliance until it has cooled down completely.
11. Keep this appliance away from hot gas, electric burners, heated ovens, and other heat sources.
12. When cleaning this appliance, do not use harsh abrasives, caustic cleaners, or oven cleaners.
13. When using this appliance, ensure there is enough space on all sides, allowing air to circulate. Keep the appliance away from curtains, wall coverings, clothing, cloths, and other flammable materials. Extra caution is required for surfaces that are not heat-resistant – an insulated heat pad is recommended.
14. This appliance is for household use only. Do not use for commercial purposes.
15. When using the toaster, ensure the slide-out crumb tray is in place. Clean the crumb tray regularly – do not allow crumbs to build up.
16. Do not use this appliance with ingredients containing sugar, jam, or preserves.

17. This appliance is not for use by children or individuals with limited physical, sensory, or mental capabilities unless they have received proper supervision or instructions for safe usage.
18. Children must be supervised when near the appliance.
19. Whilst this appliance is in use, the temperature of surrounding surfaces may be high.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
21. Keep this appliance away from curtains, clothes, and other flammable materials.
22. When in use, do not leave this appliance unattended. Ensure it is switched off when not in use.
23. Do not use this appliance through an external timer or separate remote control system.

### **Warning**

Never use a knife to take out items from the toaster – contact with live elements could cause electrocution. Let the appliance cool down, unplug, and carefully remove the bread.

### **Features of a Toaster**

- Full-length crumb tray
- Stop button with indicator light
- Reheat button with indicator light
- Defrost button with indicator light
- Electronic variable browning control
- High-lift bread release



### **Using the Toaster**

1. Insert the plug into a suitable mains supply socket, then turn the power on.
2. Place two slices of bread, muffins, or bagels into the bread slots.
3. Using the control knob, select the desired browning (No.1 is the lightest and No.7 is the darkest). For first-time use, it is suggested to use No.3. Different types of bread and personal preference may require a different browning setting.
4. Press the carriage control lever down until it clicks into place – the toasting cycle will automatically begin. Note: If the toaster is not plugged in and switched on, the lever will not click into place.
5. When the desired toast colour is achieved, the toaster will turn off and the toast will pop up automatically. To stop the toasting process at any time, press the stop button.

## Toasting Frozen Bread

To toast frozen bread, place the bread into the bread slots and select the desired browning setting. Press the carriage control lever down until it clicks into place, then press the 'frozen' button.

## Cleaning the Toaster

- A slide-out crumb tray is included, making it quick and convenient to remove crumbs.
- Before removing and emptying the crumb tray, unplug the toaster and wait for it to cool down.
- Clean the tray with a damp cloth. **NOTE:** The tray must be completely dry before placing it back into the toaster.
- Use a stiff brush to remove any burnt-on crumbs.
- Wipe the outside of the toaster with a damp cloth.
- Do not use sharp or abrasive objects to clean the toaster.
- Slide the crumb tray out of the toaster and remove the crumbs, wipe it with a clean, dry cloth, and put it back in place. Clean the crumb tray after each use of the toaster. Make sure that crumbs do not accumulate in it. Otherwise, they could burst into flames.

## Caution

- To prevent an electric shock, unplug the appliance.

- There are no user-serviceable parts inside.
- Maintenance and repairs must be done by qualified personnel.
- Do not use this appliance through an external timer or separate remote control system.

## Specifications

<b>Model No.</b>	ST-408
<b>Mains Voltage</b>	AC220-240V 50/60Hz
<b>Power Consumption</b>	1350-1600W

## Contact Information

If you have any questions, please contact our customer care center. Our contact details are below:

- Phone: 0044-[800-240-4004](tel:0044-800-240-4004)
- Email: [enquiries@mhstar.co.uk](mailto:enquiries@mhstar.co.uk)

## **IMPORTER ADDRESS:**

- MH STAR UK LTD
- Unit 27, Perivale Park,
- Horsenden Lane South
- Perivale, UB6 7RH
- MADE IN CHINA

## FAQ

### • Can I use the toaster outdoors?

No, this appliance is not designed for outdoor use.


### • What should I do if the supply cord is damaged?

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

• **How do I clean the crumb tray?**



Unplug the toaster, let it cool down, then slide out the crumb tray and clean it with a damp cloth. Ensure it is completely dry before reinserting.

**Documents / Resources**

	<p><a href="#">HOMCOM 800-208V70 Built In Toaster [pdf]</a> Instruction Manual</p> <p>800-208V70 Built In Toaster, 800-208V70, Built In Toaster, Toaster</p>
---	--

**References**

- [User Manual](#)

 800-208V70, 800-208V70 Built In Toaster, Built In Toaster, HOMCOM,  HOMCOM Toaster

---

**Leave a comment**

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.