



Homcom 824-058V70WT Table Desk Fan Instruction Manual

[Home](#) » [HOMCOM](#) » Homcom 824-058V70WT Table Desk Fan Instruction Manual 

Homcom 824-058V70WT Table Desk Fan Instruction Manual




Contents

- [1 FUNCTIONS & OPERATION](#)
- [2 CLEANING AND MAINTENANCE](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)


FUNCTIONS & OPERATION

When plugged in, the product will be on standby and the power button lit.

Push  to start/stop the fan.

SPEED button: Press  to select low, medium or high.

TIMER button: Press  and choose between 1-8 hrs. It will show on the display panel.

 
OSCILLATING button: PRESS  to oscillate the fan, press again to cancel.

Light on/off: Press  to turn the light on/off the LED display (can only be operated with remote control).


Note: The LED light will automatically turn off after 10 minutes, push any button to turn on

The fan head can be moved up and down manually.



Control and display

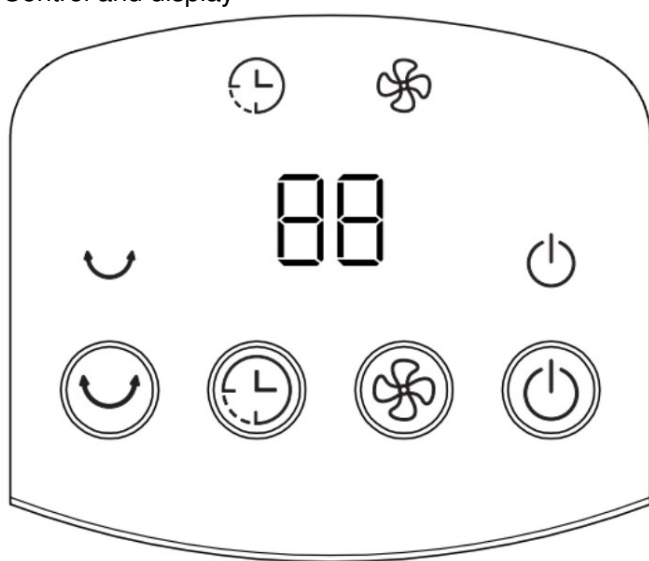

Remote control

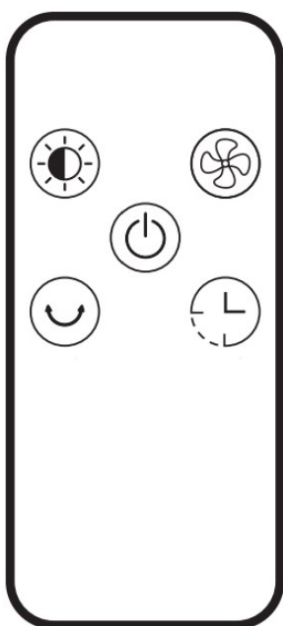 

  The remote control uses one button cell, model No. CR2025 (3V). It is recommended to use lithium type battery for longer use.

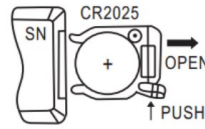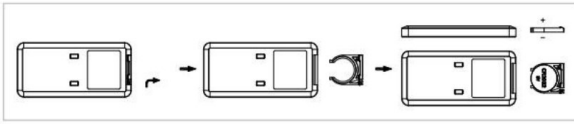

Note: Please follow battery disposal instructions on the packaging or contact your local council for safe disposal of batteries

CAUTION

1. Only use the voltage specified on the rating plate of the fan.
2. Do not repair or disassemble the appliance by yourself, it must be repaired by the manufacturer or qualified technician.
3. Do not operate the appliance with wet hands to avoid electrical hazards.
4. If the supply cord is damaged, it must be replaced with an identical cord from the manufacturer or its service agents.
5. Unplug the appliance when off.
6. Do not block air inlets or outlets. Occasionally check the openings for accumulated dust.
7. Do not use the appliance near explosive and combustible gas.
8. Use the appliance only on a flat surface.
9. Do not use outdoors.
10. Do not tip the appliance over. Unplug if toppled over and check if there is water in the body. Dry thoroughly before using.
11. Clean the appliance with a slightly damp cloth. Clean using neutral detergents. Do not rinse with water.
12. Do not place air outlets and inlets near the wall or curtain.
13. Do not knock or shake the body when using, otherwise it could stop.
14. Do not place the appliance directly below a socket outlet. The rating current of the socket should exceed 10A.
15. Do not use the appliance in the immediate surrounding of a bath, a shower or a swimming pool.
16. This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.

CLEANING AND MAINTENANCE

Clean with neutral detergents and a soft cloth.

Attention: Unplug before cleaning the appliance. Keep water away from the control panel.

ACCESSORY

Remote control

If you have any questions, please contact our customer care center.

Our contact details are below:

Tell: 0 0044-800-240-4004 Y4

E-mail: enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK LTD Unit 27, Perivale Park, Horsenden lane South Perivate, UB6 7RH MADE IN CHINA

Documents / Resources



[Homcom 824-058V70WT Table Desk Fan](#) [pdf] Instruction Manual
824-058V70WT, 824-058V90, 824-058V70WT Table Desk Fan, Table Desk Fan, Desk Fan, Fan

References

- [Aosom.pt | Loja online de mobiliário, jardim, escritório, esportes, brinquedos, puericultura, animais de estimação e muito mais](#)

[Manuals+](#).