



HOME HM-CM-C350B Crepe Chef Maker User Manual

[Home](#) » [home](#) » HOME HM-CM-C350B Crepe Chef Maker User Manual 

HOME HM-CM-C350B Crepe Chef Maker User Manual



Contents

- [1 SAFETY INFORMATION](#)
- [2 OVERVIEW](#)
- [3 SPECIFICATIONS](#)
- [4 USE](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 WARRANTY & SUPPORT](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

SAFETY INFORMATION



Please read this manual carefully before use and keep it for future reference. The manufacturer declines any liability for damage caused by improper use or failure to follow the instructions in this manual. Improper use or non-compliance with the instructions will void the warranty.

1. This appliance is intended for use by children 8 years of age and older and persons with reduced physical, sensory or with mental capabilities, or lack of experience and knowledge, provided they are under supervision

or have been given instruction concerning use of the appliance in a safe manner and understand the potential hazards.

2. Children must not play with the device.
3. Cleaning and user maintenance must not be done by children unless they are over 8 years of age and under supervision.
4. Children under the age of 8 must be kept out of the reach of the appliance and its power supply.
5. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a dangerous situation.




Attention: Hot surface.

6. The temperature of accessible surfaces may be higher when the appliance is in operation.
7. Wipe the heating surface with a soft, slightly dampened sponge. Wipe dry. Follow the instructions in this manual.
8. The appliance is not designed for operation using an external timer or remote control.
9. The appliance is designed for the preparation of pancakes and pancake batter and is intended for indoor use. Never use the appliance for purposes other than those for which it is intended. The appliance is not intended for commercial or industrial purposes.
10. Before connecting the appliance to the mains, make sure that the voltage indicated on the type plate corresponds to the mains voltage to which you will be connecting it. Connect the appliance only to a properly grounded socket. Do not use an extension cable. Fully unroll the power cable before use.
11. Check before each use that it is not damaged. Do not use the appliance if it shows signs of damage or if it fell.
12. Make sure it is folded correctly before each use.
13. Do not use the appliance in damp or dusty environments, in places with explosive or flammable substances.
14. Do not immerse the appliance, power cord or plug in water or other liquids. Otherwise, there is a risk of electric shock. If the appliance falls into the water, do not touch or touch the water.
15. Do not place heavy objects on the power cable. Make sure that the power cable does not hang over the edge of the table to avoid hot surfaces or sharp objects.
16. Do not touch the power cord or plug with wet or damp hands.
17. Only use the appliance on a flat, dry, clean and stable surface that is heat-resistant. Do not use the appliance standing on a metal surface, such as a sink drip tray, on a surface that is heat-sensitive or covered with a tablecloth, paper or other flammable material, near curtains and other flammable or heat-sensitive materials.
18. Do not place the appliance on the edge of a table or worktop. Place the appliance away from electric or gas cookers or other heat sources.
19. Do not use the appliance near a bathtub, sink, swimming pool or other source of water.
20. Make sure that a safe distance of at least 50 cm from the surface of flammable materials is maintained above the appliance in the direction of heat radiation and at least 10 cm in other directions around the appliance.
21. Make sure there is enough space around the appliance for air circulation, especially during operation.
22. Do not leave the appliance unattended when it is in operation or plugged in.
23. Use only the accessories supplied with the appliance. Do not use accessories that are not recommended or marked as suitable by the manufacturer.
24. Check the condition of the food regularly during operation. Do not place any objects on the appliance.
25. Do not cover or block the ventilation openings.
26. During use, the appliance heats up and remains hot for some time after use. Take extra care not to touch the heated surface. There is a risk of severe burns.

27. Switch off the appliance by turning the thermostat to position 0 (off), disconnect the power supply from the mains socket whenever you have finished cooking, when you leave the appliance unattended, when you are not going to use it and before cleaning, maintenance, moving or storing it.
28. Unplug the appliance by pulling on the plug, not the power cable. Otherwise, the power cable or outlet may be damaged.
29. Allow the appliance to cool completely before moving, cleaning, maintaining or storing it. Never move the appliance while it is in operation or until it has cooled down completely.
30. Check the appliance regularly for damage. Do not use it if it shows signs of damage, the grill plates are scratched, cracked or damaged, the power supply or the plug is damaged. The appliance does not contain parts repairable by the user. Have all repairs and maintenance other than routine serviced by an authorized service center.

OVERVIEW

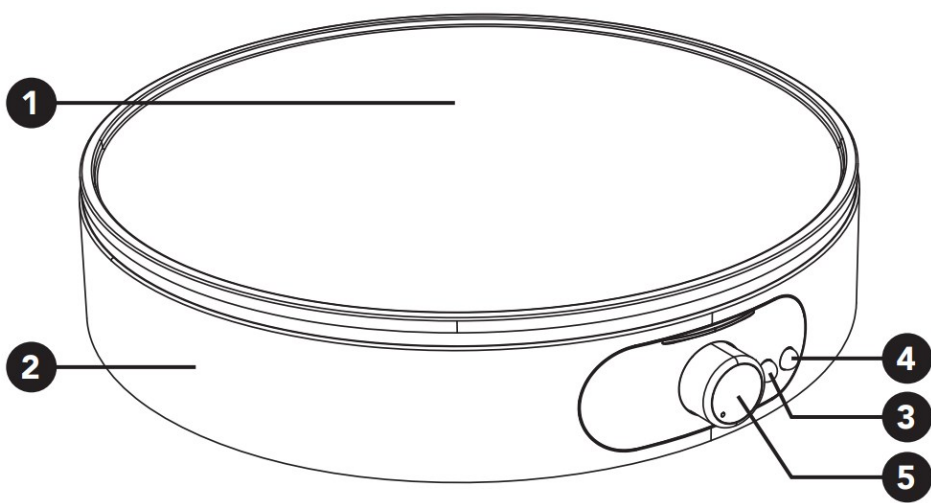

1. Heating plate
2. Base
3. Green ready indicator
4. Red power indicator
5. Rotary thermostat
6. Wooden spatula for spreading dough (not pictured, included)
7. Wooden turner (not pictured, included)

SPECIFICATIONS

Power	220–240 V~, 50/60 Hz
Power consumption	1,000 W
Dimensions	32 × 30.7 × 7.2 cm
Weight	1.39 kg
Plate diameter	30 cm
Length of power supply cable	80 cm

USE

Before first use

1. Remove the appliance from the packaging. Before disposing of the packaging, be sure to remove all components. Check the appliance for damage.
2. Remove all stickers and labels from the appliance.
3. Wipe the outer surface and the heating plate with a soft sponge slightly dampened with warm water. Wipe dry.

We recommend turning the appliance on at maximum power without the ingredients for about 5 minutes to allow the appliance to burn. During this time, you may experience faint smoke and an unpleasant odor. This is a normal thing that disappears with use. Allow the appliance to cool down and then clean again according to the instructions in the "Cleaning and Maintenance" section.

Use

1. Place the appliance on a dry, clean, solid and heat-resistant surface at a sufficient distance from the mains socket. Ensure that it is placed far enough away from heat sensitive and flammable materials and that safety instructions are followed.
2. Make sure the thermostat is in position 0 (off).
3. Fully unroll the power cable. Make sure that the power cord is positioned so that it does not touch the appliance, which heats up during use, or other heat sources such as an electric or gas stove.
4. Insert the power plug into the AC outlet and the red power light will light up. It will be on as long as the appliance is plugged in.
5. Turn the thermostat and set the desired temperature level from MIN to MAX, where "MAX" is the highest temperature and "MIN" is the lowest temperature.
6. When the green ready light comes on, the appliance is ready for use.
7. Pour a sufficient amount of dough onto the board and spread the dough over the entire surface using a wooden spatula. We recommend pouring the dough into the centre of the board and then using a circular motion of the spatula, spread the dough to the edges.
8. Check the browning status regularly and change the temperature setting as needed.
9. During operation, the green ready light will turn on and off, indicating that the appliance is warming up to operating temperature. Likewise, the green ready light will be on when you raise the temperature. In that case wait until the green indicator goes off.
10. Once the pancake is toasted on one side, use a flipper to flip it over and flip it over to toast the other side. Once the pancake is browned on the other side, remove it from the plate with a turner and repeat the process with the remaining batter. We recommend using protective kitchen gloves.
Warning: Use only the wooden flipper provided to flip pancakes or crepes. Do not use metal utensils, knives or forks, which can scratch the non-stick coating of the plate and irreparably damage it.
11. When you have finished cooking, turn the thermostat to position 0 (off) and disconnect the plug from the mains socket. Allow the appliance to cool down completely and then clean it according to the instructions in the "Cleaning and Maintenance" section.

Note: The warming plate is suitable for the preparation of pancakes, pancakes, fried eggs, egg omelettes, etc.

Warning: Do not handle the appliance when it is switched on, hot or the plug is plugged into a mains socket.

Warning: The appliance heats up during use and remains hot even after use. Do not touch the hot surface. There is a risk of severe burns.

CLEANING AND MAINTENANCE

Always switch off the appliance, disconnect the mains plug from the mains socket and allow it to cool down completely before cleaning or any maintenance.

Warning:

Never immerse the appliance, the power cable and plug in water or any other liquid.

Do not use plastic or metal scrapers, harsh cleaners, chemicals, petrol, solvents or other similar substances to clean parts of the appliance. The surface finish could be heavily damaged.

Wipe the outer surface and the heating plate with a soft sponge slightly dampened with warm water. Wipe dry. The hotplate will be easier to clean if it is lukewarm.

Storage

Make sure that the appliance is cool and clean before storing. Store the appliance in a dry and wellventilated place out of the reach of children or pets. Do not place any objects on the appliance.

WARRANTY & SUPPORT

The use of the WEEE Symbol indicates that this product should not be treated as household waste. By ensuring this product is disposed of correctly, you will help protect the environment.

For more detailed information about the recycling of this product, please contact your local authority, your household waste disposal service provider, or the shop where you purchased the item.

This product meets all of the related basic EU regulation requirements. The EU declaration of conformity is available on www.alzashop.com/doc.

This product sold in the European Union meet the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS).



Support

Alza.cz, a. s., Jankovcova
1522/53, 170 00 Prague 7,
Czech Republic
© 2022 Alza.cz, a. s.
All Rights Reserved.

· · H O M E · ·

  HM-CM-C350B Crepe Maker 	HOME HM-CM-C350B Crepe Chef Maker [pdf] User Manual HM-CM-C350B Crepe Chef Maker, Crepe Chef Maker, Crepe Chef, Chef Maker, Crepe, HM-C M-C350B
---	---