



HOME HM-HC-B200W Convactor Heater User Manual

[Home](#) » [home](#) » HOME HM-HC-B200W Convactor Heater User Manual 

Contents

- [1 HOME HM-HC-B200W Convactor Heater](#)
- [2 SAFETY INFORMATION](#)
- [3 OVERVIEW](#)
 - [3.1 USE](#)
- [4 CLEANING AND MAINTENANCE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

· | H O M E | ·

HOME HM-HC-B200W Convactor Heater



SAFETY INFORMATION

Please read this manual carefully before use and keep it for future reference. The manufacturer disclaims any liability for damages caused by improper use or failure to follow the instructions in this manual. Improper use or failure to follow instructions will void the warranty.


1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
3. It is forbidden to use the appliance with a damaged power cord. If the supply cord is damaged, contact an authorized service centre to have it replaced to avoid a hazardous situation.
WARNING: Do not cover. Do not cover the heater to prevent overheating.
4. The appliance must not be placed immediately below electricity outlet.
5. **WARNING:** The appliance must not be used if the panel is damaged.
6. Do not use this appliance in the immediate vicinity of a bath, shower, or swimming pool.
7. Children younger than 3 years of age should be prevented from accessing the appliance unless they are under constant supervision.
8. Children from 3 to 8 years of age must only turn this appliance on/off under the condition that it is located or installed in its intended normal operating position and that they are under supervision or were informed about the safe operation of the appliance and understand the potential hazards. Children from 3 to 8 years of age must not insert the plug into the power socket, regulate or clean the appliance or carry out maintenance performed by the user.

9. **ATTENTION:** Certain parts of this product may become very hot and cause burns. Special attention should be paid when children and handicapped people are present.
10. Do not use this appliance if it has been dropped.
11. Do not use this appliance if there are visible signs of damage.
12. Use this appliance only on a level and stable surface. When installing the appliance, follow the instructions in this user's manual precisely. Do not use the appliance attached to the wall.
13. **WARNING:** Do not use this appliance in a small room if it is occupied by people who are unable to leave this room on their own, unless permanent supervision is provided.
14. **WARNING:** To reduce the risk of fire, keep fabrics, curtains, or any other flammable material at least 1 m from the air outlet.
15. This appliance is intended for household use only as a portable heating source. Do not use it for commercial purposes or outside. Do not use it for any other purposes than it is intended for.
16. Before connecting the plug to the outlet, make sure that the voltage in your outlet corresponds to the voltage indicated on the type plate of the appliance.
17. Only connect the appliance to a properly grounded outlet. Do not connect it to an extension cord or two-way adapter.
18. Do not touch the power cord, its plug or the appliance with wet hands.
19. Do not use this appliance in a bathroom, laundry or in rooms with an elevated level of humidity. Do not expose it to dripping or splashing water.
20. Do not use the appliance in rooms with high dustiness, in locations where explosive or flammable substances/toxic fumes are used or stored, e.g., petrol, paints, aerosols, etc., or in industrial surroundings.
21. Do not place the appliance to a vicinity of open fire.
22. Do not place the appliance on inclining or unstable surfaces such as carpets with very long and thick fibres, couches, etc. Only place the appliance on a horizontal, dry, clean, smooth and stable surface.
23. Do not place any objects into the openings of the appliance. This could lead to an electrical short circuit, fire, or damage to the appliance.
24. During operation there needs to be sufficient free space around the appliance. Leave at least 1 m of free space in front of the appliance and leave at least 0.5 m free space on its sides.
25. We do not recommend using this appliance in a room measuring less than 6 m².
26. This appliance must not be used with a programming device, timer switch, a remote-control system or any other device which switches the appliance on automatically, because there is a danger of a fire if the appliance is covered or incorrectly located.
27. Pay increased attention and supervision when the appliance is used in the vicinity of animals.
28. The appliance must not be left without supervision when it is in operation. Do not leave the appliance in operation when feeling sleepy or during sleep.
29. Do not use the appliance for drying clothing.
30. To turn off the appliance, use the On/Off button, then set the main switch to the position I(off). Then disconnect the power cord from the power socket.
31. Always turn off the appliance and disconnect it from the power socket when not using it, when leaving it without supervision, before moving or cleaning it and before performing maintenance. Do not move the appliance during operation. Allow the appliance to cool down before moving it, cleaning it or before carrying out maintenance.
32. Keep the appliance clean. Clean it according to the instructions in chapter Cleaning and maintenance. Do not

perform any maintenance on the appliance apart from the cleaning procedure described in chapter Cleaning and maintenance.

33. To prevent potential injury by electrical shock, do not submerge this appliance or its power cord in water or in any other liquid.
34. Locate the power cord in such a way that it cannot be tripped over, that it is not in contact with a hot surface or sharp objects. Do not locate it under a carpet, carpet runner, etc.
35. Disconnect the appliance from the power socket by pulling the plug, not the power cord itself. Otherwise, this could damage the power cord or the socket.
36. Do not use the appliance when it is not functioning correctly or after it has fallen on the floor, been submerged in water or is damaged in any other way. Hand it over to an authorised service
37. centre for inspection or repair.
38. Never repair the appliance yourself or make any adjustments to it. To prevent a dangerous situation from arising, have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
39. The manufacturer is not responsible for any damages caused by the incorrect use of this appliance.

OVERVIEW

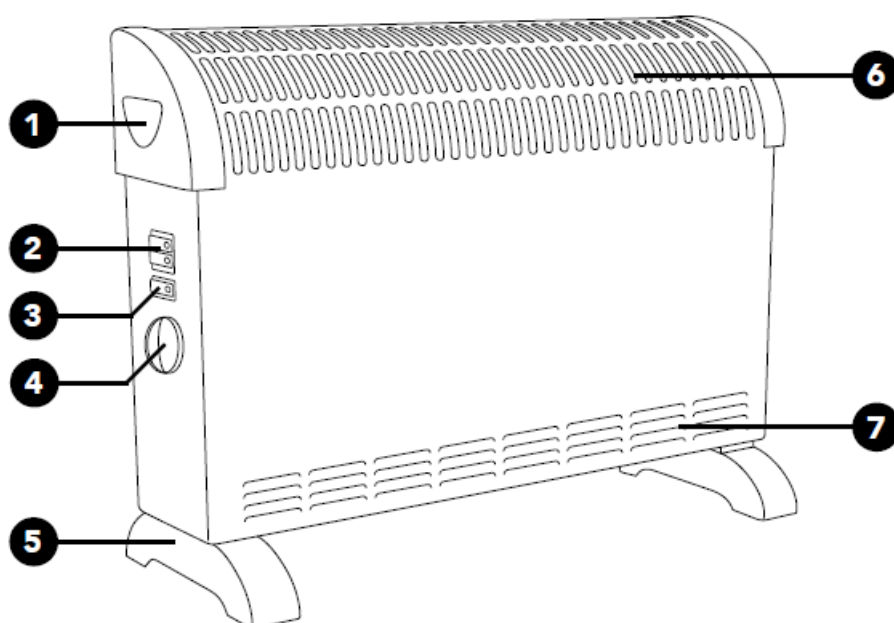

1. Handles (located on both sides)
2. Power switches
3. Main switch
4. Thermostat
5. Feet
6. Air outlet
7. Air inlet

SPECIFICATION

Power supply	220–240 V~, 50/60 Hz
Power consumption	2 000 W
Dimensions	53.5 × 20 × 38.6 cm
Weight	2 kg

USE

Before first use

Remove the appliance and its accessories from the packaging. Before disposing of the packaging, be sure to remove all components. Check that the appliance and any accessories are not damaged.

Wipe the outside of the appliance with a cloth slightly dampened in water. Wipe dry.

Feet installation

Put a blanket or another soft underlay on the floor. Then place the heater on this blanket.

On the underside of the heater there are holes on each side. Align these holes with the holes in the feet and using the supplied screws, fix them to the underside of the heater. Tighten securely. Ensure the feet are properly mounted to the heater and are not moving. Turn the heater over and place it carefully on the ground.

Using

1. Install the heater on the place where you want to use it.
2. Fully unwind the power cord and connect the plug to the power socket.
3. Set the main switch to position I (on). The heater enters the standby mode.
4. To set the heater power, press the switch 750 W (for 750 W power), switch 1250 W (for 1,250 W power), or both switches (for 2,000 W power).
5. Use the thermostat to set the temperature. Turn clockwise to increase the temperature, turn anticlockwise to decrease it.
6. When you need to set the maximum power of the heater, press both switches and turn the thermostat to MAX position.
7. Once the desired temperature has been reached, set lower power (750 W or 1250 W) and decrease the temperature by turning the thermostat.
8. After having finished using, turn both switches off and turn the thermostat to “0” symbol. To switch the heater off completely, set the main switch to position 0 (off) and disconnect the plug from the power socket.

Note: When you turn on the heater for the first time, or after a long time, you may notice slight smell, or see light smoke. This is a normal phenomenon that will disappear with use.

Overheating protection

- The appliance is equipped with a thermal fuse that automatically turns off when overheating.
- In such a situation, turn the appliance off and disconnect it from the power socket. Then allow it to cool down for at least 15 minutes.
- Before you put the appliance back into operation, check its vents are not blocked.
- If you are unsuccessful putting the appliance back into operation, please contact an authorised service centre.

CLEANING AND MAINTENANCE

- Before cleaning or any maintenance, always switch off the appliance, unplug the power cord from the outlet and allow it to cool down completely.

Warning

- Never immerse the appliance, the power cord or the plug in water or any other liquid.
- Do not use plastic or metal scrapers, harsh cleaners, chemicals, petrol, solvents or other similar substances to clean any parts of the appliance. The surface finish could be seriously damaged.

Outer surface


- Wipe the outside of the heater with a cloth slightly dampened in warm water and wipe dry with a clean cloth. Ensure no water or any liquid enters the interior.

Storage

- Before storing, make sure that the appliance and its accessories are cool and clean.
- Store the appliance and its accessories in a dry and well-ventilated place out of the reach of children or pets.
- Do not place any objects on the appliance.

Information requirements for local electric heaters

Model designation: HM-TT-B200W			
Data	Mark	Value	Unit
Heat output			
Nominal heat output	P _{nom}	2.0	kW
Minimum heat output (indicative)	P _{min}	0.75	kW
Maximum continuous heat output	P _{max,c}	2.0	kW
Auxiliary electricity			
At nominal heat output	e _{lmax}	0.000	kW
At minimum heat output	e _{lmin}	0.000	kW
In standby mode	e _{lSB}	0.000	kW
Type of heat input, for electric storage local space heaters only (select one)			
Manual heat charge control, with integrated thermostat			NO
Manual heat charge control with room and/or outdoor temperature feedback			NO
Electronic heat charge control with room and/or outdoor temperature feedback			NO
Fan assisted heat output			NO
Type of heat output/room temperature control (select one)			
Single stage heat output and no room temperature control			NO
Two or more manual stages, no room temperature control			NO
With mechanic thermostat room temperature control			YES
With electronic room temperature control			NO
Electronic room temperature control plus day timer			NO
Electronic room temperature control plus week timer			NO
Other control options (multiple selections possible)			
room temperature control, with presence detection			NO
room temperature control, with open window detection			NO
with distance control option			NO
with adaptive start control			NO
with working time limitation			NO
with black bulb sensor			NO
Contact details	Alza.cz, a.s., Jankovcova 1522/53, 170 00 Praha 7, Czech Republic		

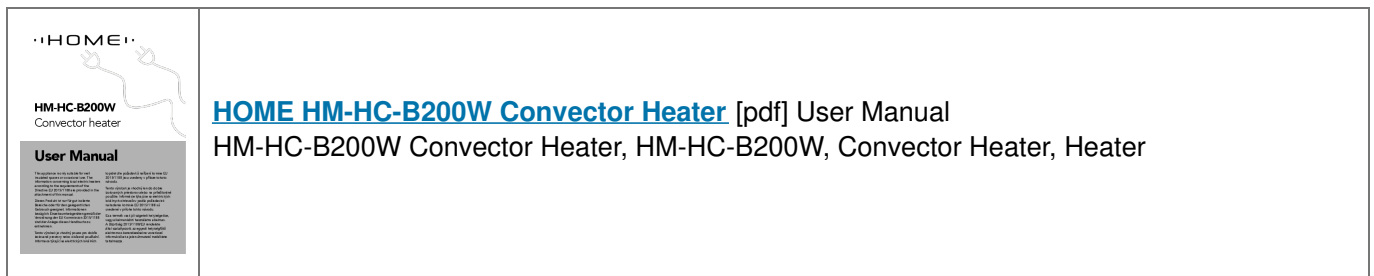

HM-HC-B200W
Convactor heater

User Manual

[HOME HM-HC-B200W Convector Heater](#) [pdf] User Manual
HM-HC-B200W Convector Heater, HM-HC-B200W, Convector Heater, Heater

References