



HOME HM-TT-A150B Simply Toast Toaster User Manual

[Home](#) » [home](#) » HOME HM-TT-A150B Simply Toast Toaster User Manual 

Contents

- [1 HOME HM-TT-A150B Simply Toast Toaster](#)
- [2 SAFETY INFORMATION](#)
- [3 OVERVIEW](#)
- [4 SPECIFICATIONS](#)
- [5 USE](#)
- [6 CLEANING AND MAINTENANCE](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

· | H O M E | ·

HOME HM-TT-A150B Simply Toast Toaster



SAFETY INFORMATION

Please read this manual carefully before use and keep it for future reference. The manufacturer declines any liability for damage caused by improper use or failure to follow the instructions in this manual. Improper use or non-compliance with the instructions will void the warranty.


1. This appliance can be used by children aged 8 years and over and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Cleaning and user maintenance shall not be done by children unless they are 8 years old and under supervision.
3. Children under the age of 8 must be kept out of the reach of the appliance and its power supply.
4. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a dangerous situation.
5. WARNING: Hot surface.
6. The temperature of accessible surfaces may be higher when the appliance is in operation.
7. Bread can catch fire. Therefore, do not use this appliance near or under flammable materials such as curtains.
8. Remove bread crumbs regularly. A removable tray is used to catch bread crumbs. When cleaning, follow the instructions in the "Cleaning and maintenance" section.
9. This appliance is not intended for outdoor use.
10. The appliance is not designed for operation using an external timer or remote control.
11. The appliance is intended for toasting bread at home. Do not use the appliance for purposes other than those for which it is intended. The appliance is not intended for commercial or industrial purposes.
12. Before connecting the appliance to the mains socket, make sure that the voltage indicated on the rating plate matches the electrical voltage of the socket into which you plug it. Only connect the appliance to a properly grounded outlet. Do not use an extension cable. Fully unroll the power cable before use.

13. Check before each use that it is not damaged. Do not use the appliance if it shows signs of damage or if it fell.
14. Before each use, make sure that the removable tray is inserted correctly in its place.
15. Do not use the appliance in a damp or dusty environment, in places with explosive or flammable substances.
16. Do not immerse the appliance, power cord or plug in water or other liquids. Otherwise, there is a risk of electric shock.
17. Do not place heavy objects on the power cable. Make sure that the power cable does not hang over the edge of the table to avoid hot surfaces or sharp objects.
18. Do not touch the power cord or plug with wet or damp hands.
19. Use the appliance only on a flat, dry, clean and stable surface that is heat resistant. Do not use the appliance on a metal surface, such as a sink drain board, on a surface that is sensitive to heat or covered by a tablecloth, paper or other flammable material, near curtains and other flammable or heat-sensitive materials.
20. Do not place the appliance on the edge of a table or worktop. Place the appliance at a sufficient distance from electric or gas stoves or other heat sources.
21. Do not use the appliance near a bathtub, sink, swimming pool or other water source.
22. Make sure there is enough space around the appliance for air circulation, especially during operation.
23. Do not leave the appliance unattended when it is in use or when it is plugged into the mains socket.
24. Do not insert excessively large pieces, bread wrapped in aluminum foil or metal objects into the bread slots.
There is a risk of fire or electric shock.
25. Do not toast the bread by placing it horizontally directly on the bread slots. This would disrupt the air circulation and could cause a fire.
26. Do not attempt to remove a jammed slice of bread, bun or other baked item with a knife or other metal object. It could lead to damage to the heating elements, serious malfunctions of the appliance, or electric shock. Allow the appliance to cool down, pull the mains cable out of the socket and carefully remove the blocked piece of pastry.
27. The appliance is intended only for use in the home and in premises and facilities such as:
 - kitchenettes for staff in shops, offices and other workplaces;
 - hotel or motel rooms and other residential quarters;
 - agricultural farms;
 - bed and breakfast residences.
28. When removing toasted slices of bread, be very careful not to burn yourself on them or on the hot surface around the slots. Take extra care when toasting small pieces of pastry (less than 8.5 cm), since smaller pieces toast faster.
29. Use only the accessories supplied with the appliance. Do not use accessories that are not recommended or marked as suitable by the manufacturer.
30. Regularly check the toasting status of the bread during operation. Do not place any objects on the appliance.
31. Do not cover or block the ventilation openings.
32. The appliance heats up during use and remains hot for some time after use. Take extra care not to touch the heated surface. There is a risk of severe burns.
33. Make sure the appliance is switched off, unplugged from the mains socket after use, when leaving the appliance unattended, when not in use and before cleaning, maintenance, moving or storage.
34. Unplug the appliance by pulling on the plug, not the power cable. Otherwise, there is a risk of damage to the power supply or socket.
35. Allow the appliance to cool completely before moving, cleaning, maintaining or storing it. Never move the

appliance while it is in operation or before it has completely cooled down.

36. Check the appliance regularly for damage. Do not use it if it shows signs of damage or the power cord or plug is damaged. The appliance does not contain parts repairable by the user. Have all repairs and maintenance other than routine done by an authorized service center.

OVERVIEW

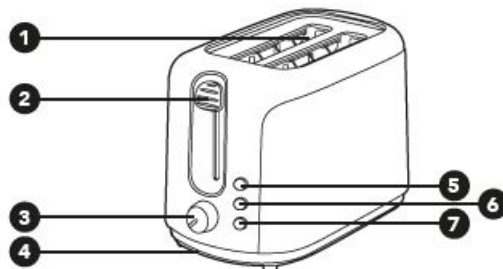

1. Toasting slots
2. Control lever
3. Browning level control
4. Removable crumb tray
5. Defrost button for toasting frozen pastries
6. Reheat button for reheating the pastry
7. Cancel button for immediate cancellation of operation

SPECIFICATIONS

Power	220-240 V ~ 50-60 Hz
Power consumption	700 W
Dimensions	17.9 × 15.4 × 26.3 cm
Weight	0.83 kg
Length of power supply cable	60 cm

USE

Before first use

Remove the toaster from packaging. Before disposing of the packaging, be sure to remove all components. Check for damage.

Wipe the outer surface with a slightly damp cloth. Wipe dry.

Remove the tray and wash it in warm water. Rinse with clean water and wipe dry. Reinstall it.

We recommend turning on the toaster to the maximum degree of browning without bread inserted in order to burn it off. During this time, you may notice faint smoke and an unpleasant smell. This is a normal phenomenon that will disappear with use.

Use

1. Place the toaster on a flat, dry and stable surface and at a sufficient distance from the mains socket.
2. Fully unfold the power cord and insert the plug into the mains socket.

3. Make sure the tray is inserted correctly.
4. Insert one slice of toasting bread, a slice of bread, half a bun, etc. into each slot. The slices of bread should not be too thick to block the holes, and they should not protrude from the holes when the control lever is locked in the down position. The slots are designed for regular slices of bread.

Warning: Do not put bread spread with butter, margarine, etc.

5. Use the control to set the browning level between 1 and 7, where setting 1 is the lowest browning level and 7 is the highest browning level. We recommend setting level 4 first. You can later adjust the settings as needed.
6. Push the control lever down to turn the toaster on. The bread toasting starts automatically. The CANCEL button lights up.

Note: If the toaster is not connected to the mains socket, it will not be possible to lock the control lever in the down position.

7. Once toasting is complete, the toaster automatically switches off and ejects the inserted pastry. Carefully remove the toasted pastry and repeat the above procedure for further toasting.

Note: To remove smaller pieces of pastry, lift the control lever all the way up.

Warning: Do not attempt to remove jammed bread or other baked goods with a knife or other metal object. This could result in electric shock or damage to the appliance. If the pastry gets stuck inside the toaster, turn it off, unplug it and let it cool down. Then carefully remove the jammed pastry.

8. During toasting, you can check the browning degree by lifting the control lever upwards. You can cancel toasting by pressing the CANCEL button.
9. Unplug the toaster and let it cool down after use.

Toasting frozen baked goods

1. Insert the frozen pastry in the slots, set the browning level and push the control lever down. Press the DEFROST button. It will light up.
2. Once toasting is complete, the toaster automatically switches off and ejects the inserted pastry. Carefully remove the toasted pastry and repeat the above procedure for further toasting.

Note: You can cancel toasting by pressing the CANCEL button.

Heating the baked goods

1. This function allows you to heat the pastry without toasting it. The heating time is factory preset and cannot be adjusted.
2. Insert the pastry into the slots and push the control lever down. Press the REHEAT button. It will light up.
3. Once toasting is complete, the toaster automatically switches off and ejects the inserted pastry. Carefully remove the toasted pastry and repeat the above procedure for further toasting.

Note: You can cancel toasting by pressing the CANCEL button.

Note: You cannot select the function of toasting frozen pastry and heating pastry at the same time.

Warning:

Do not handle the toaster when it is switched on, hot or plugged into the mains socket.

The toaster heats up during use and remains hot also after use. Do not touch the hot surface. There is a risk of severe burns.

If you notice smoke during toasting, press the CANCEL button immediately.

CLEANING AND MAINTENANCE

Before cleaning or any maintenance, always switch off the appliance, disconnect the plug from the power outlet and allow it to cool down completely.

Warning:

Never immerse the appliance, the power cable and plug in water or any other liquid.

Do not use plastic or metal scrapers, harsh cleaners, chemicals, petrol, solvents or other similar substances to clean any parts of the appliance. The surface finish could be seriously damaged.

Wipe the outer surface with a slightly damp cloth. Wipe dry.

Pull out the tray and empty the crumbs into the waste bin. Wipe it with a clean, dry cloth and return it to its place. We recommend cleaning the crumb tray after each use. Make sure that crumbs do not accumulate in it. They could catch fire.

To remove crumbs of baked goods from the interior, turn the toaster upside down and carefully shake out the crumbs over the waste bin.

Storage

Before storing, make sure that the appliance is cool and clean.

Store the appliance in a dry and well-ventilated place out of the reach of children or pets.

Do not place any objects on the appliance.


The use of the WEEE Symbol indicates that this product should not be treated as household waste. By ensuring this product is disposed of correctly, you will help protect the environment. For more detailed information about the recycling of this product, please contact your local authority, your household waste disposal service provider, or the shop where you purchased the item.

This product meets all of the related basic EU regulation requirements. The EU declaration of conformity is available on www.alzashop.com/doc.

This product sold in the European Union meet the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS).

Alza.cz, a. s., Jankovcova 1522/53, 170 00 Prague 7, Czech Republic © 2022 Alza.cz, a. s. All Rights Reserved.

Documents / Resources

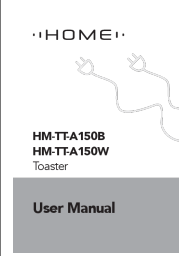	<p>HOME HM-TT-A150B Simply Toast Toaster [pdf] User Manual HM-TT-A150B, HM-TT-A150W, Simply Toast Toaster, Toast Toaster, Simply Toaster, Toaster</p>
---	--