

HOMEMATE HM-RC-01 Remote Control



HOMEMATE HM-RC-01 Remote Control Instructions

[Home](#) » [HomeMate](#) » HOMEMATE HM-RC-01 Remote Control Instructions 

Contents

- [1 HOMEMATE HM-RC-01 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 Two wire color light control remote control manual](#)
- [6 FCC Statement](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Homemate

HOMEMATE HM-RC-01 Remote Control



Product Information

Specifications:

- Product Name: Two Wire Color Light Control Remote Control
- Power Source: Battery
- Number of Keys: 23
- Color Options: Green, Red, Blue, White, Warm White, Orange, Yellow, Grass Green, Sky Blue, Purple, Pink, Cyan
- Modes: Single-color, Three-color Mixing, Two Light Combination, Wave, Colorful Gradient, Breathing, Colorful Flashing, Strobe, Random Messy Change, Blinking, Voice-activated

Product Usage Instructions

Power On and Code Keys:

Press the power on key to turn on the remote control. The code pair key is used for code matching.

Brightness Adjustment:

The remote control has brightness increase and decrease keys that can be used to adjust the brightness of the lights.

Single-color Light Keys:

The remote control has separate keys for green, red, and blue single-color lights. The default brightness for each light is 50%. Use the brightness increase and decrease keys to adjust the brightness.

White Light and Warm White Switching:

Press the white light and warm white switching key to switch between white light and warm white. The default setting is white light. Use the dimmer key to adjust the brightness.

Three-color Mixing Key:

Press the three-color mixing key to activate 8 modes of random color change. Each bulb will display a different color.

Two Light Combination Keys:

The remote control has multiple combination keys for two lights, including orange, yellow, grass green, sky blue, purple, pink, and cyan. Use the dimmer key to adjust the brightness.

Wave Button:

The wave button has 6 modes of color combinations. Each mode combines different colors such as red + blue, green + pink, blue + yellow, yellow + blue, cyan + red, and pink + green. Adjust the speed of embellishment or accents using the brightness key.

Colorful Gradient Key:

Press the colorful gradient key for automatic color change. Use the brightness key to adjust the speed of change.

Breathing Key:

The breathing key creates a colorful breathing effect. Adjust the speed of breathing using the brightness key.

Colorful Flashing Key:

Press the colorful flashing key for automatic color flashing.
Use the brightness key to adjust the flashing speed.

Strobe Button:

The strobe button allows for manual multi-combination alternating change. Match the speed of change with the brightness key.

Random Messy Change Key:

The random messy change key activates multiple color changes for each light. Adjust the speed of change using the brightness button.

Blinking Button:

The blinking button creates blinking effects using red, green, and blue lights. Combine with the brightness button to adjust the speed of change.

Voice-activated Buttons:

The voice-activated buttons change the lights according to the music rhythm. Adjust the voice-activated sensitivity using the brightness button.

Frequently Asked Questions

How do I pair the remote control?

To pair the remote control, follow these steps:

After the power-on self-test, within 10 seconds, long press the remote control 'ON' key for 2 seconds.

If pairing is successful, the mixed white light will flash 5 times.

How do I delete a pairing?

To delete a pairing, long press the remote control 'OFF' key for 2 seconds.

- If the deletion is successful, the white light will blink 3 times.

Two wire color light control remote control manual



- Off and Code Keys



- Power on key and code pair key



- Brightness increase, with other functions to adjust the increase key



- Brightness decrease, with other functions to adjust the decrease key



- Single color green light key, the default brightness 50%, with the brightness increase and decrease keys to adjust the brightness.



- Single color red light key, the default brightness of the upper machine 50%, with the brightness increase and decrease key to adjust the brightness.



- Single color blue light key, the default brightness of the upper machine 50%, with the brightness up and down keys to adjust the brightness.



- White light and warm white switching key, the default white light, press to switch to warm white, with the dimmer key, can adjust the brightness



- Three color mixing key, 8 modes of random color change, the color of each bulb is different.



- Two light combination key, orange button, with the dimmer key, can adjust the brightness



- Two light combination key, yellow button, with the dimmer key, can adjust the brightness



- Two light combination key, grass green button, with the dimmer key, can adjust the brightness



- Two light combinations, sky blue button, with dimmer button, adjustable brightness



- Two light combination key, purple color key, with dimmer key, can adjust the brightness



- Two light combinations, pink button, with dimmer button, adjustable brightness



- Two light combinations, Cyan button, Dimmer button, Adjustable brightness









- Wave button

6 modes:

- Red + blue (embellishment) can be adjusted according to the brightness key, adjust the speed of embellishment
- Green + pink (embellishment) can be adjusted according to the brightness key, adjust the embellishment speed
- Blue + yellow (embellishment) can be adjusted according to the brightness button, adjust the speed of embellishment
- Yellow+Blue (accents) can be adjusted by pressing the brightness button to adjust the speed of the accents.
- Cyan + Red (accents) can be adjusted according to the brightness buttons to adjust the speed of the accents.
- Pink + green (embellishment) can be adjusted according to the brightness of the key, adjust the embellishment speed



- Colorful gradient key, automatic change, according to the brightness of the key, adjust the speed of change

-  Breathing key, colorful breathing automatic change, according to the brightness of the key, adjust the speed of breathing
-  Colorful flashing key, automatic change, according to the brightness key, adjust the flashing speed
-  Strobe button, manual change, multi-combination alternating change. Match with the brightness key, adjust the speed of change
-  Random messy change key, multiple color changes for each light. Adjust the speed of change with the brightness button
-  Blinking button, red, green and blue blinking. Combine with the brightness button to adjust the speed of change
-  Voice-activated buttons, according to the music rhythm changes, combined with the brightness button, adjust the voice-activated sensitivity

Code matching function:

- Pairing time(Condition: After power-on self-test, within 10s Long press the remote control 'ON' key, 2s)
- Pairing
 - Success:Mixed white light flashes 5 times
 - Delete(by pairing) Long press the remote control OFF key:2s
 - Success: white light blinks 3 times.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement


The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

Documents / Resources

| | |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>HOME MATE HM-RC-01 Remote Control [pdf] Instructions ZRMHM-RC-01, ZRMHMR01, HM-RC-01, HM-RC-01 Remote Control, Remote Control, Contr ol</p> |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.