



# HOMEWERKS 75-107-AX LED Mirror with Alexa Built-In And Bluetooth Speakers Instruction Manual

[Home](#) » [HOMEWERKS](#) » HOMEWERKS 75-107-AX LED Mirror with Alexa Built-In And Bluetooth Speakers Instruction Manual 

## Contents

### [1 HOMEWERKS™ 75-107-AX LED Mirror with Alexa Built-In And Bluetooth Speakers Instruction Manual](#)

- [1.1 PACKAGE CONTENTS](#)
- [1.2 HARDWARE INCLUDED](#)
- [1.3 FCC Compliance](#)
- [1.4 SAFETY INFORMATION](#)
- [1.5 PREPARATION](#)
- [1.6 WIRING DIAGRAM](#)
- [1.7 INSTALLATION INSTRUCTIONS](#)
- [1.8 CONTROL PANEL OPERATION](#)
- [1.9 SETTING UP AND PAIRING YOUR ALEXA MIRROR TO THE HOMEWERKS CONNECT APP](#)
- [1.10 OPERATING THE MIRROR USING ALEXA COMMANDS](#)
- [1.11 CONNECTING YOUR BLUETOOTH® DEVICE TO THE MIRROR SPEAKER](#)
- [1.12 SPOTIFY CONNECT](#)
- [1.13 CARE AND CLEANING](#)
- [1.14 ROUGH-IN](#)
- [1.15 REPLACEMENT PARTS](#)
- [1.16 TROUBLESHOOTING](#)
- [1.17 BLUETOOTH® SPEAKER – ONE YEAR LIMITED WARRANTY](#)
- [1.18 LED MIRROR – TWO YEAR LIMITED WARRANTY](#)
- [1.19 AMAZON ALEXA – LIMITED 1-YEAR WARRANTY](#)


### [2 Documents / Resources](#)

#### [2.1 References](#)

### [3 Related Posts](#)

**HOMEWERKS™ 75-107-AX LED Mirror with Alexa Built-In And Bluetooth Speakers Instruction Manual**

MODELS 75-105-AX, 75-106-AX, 75-107-AX

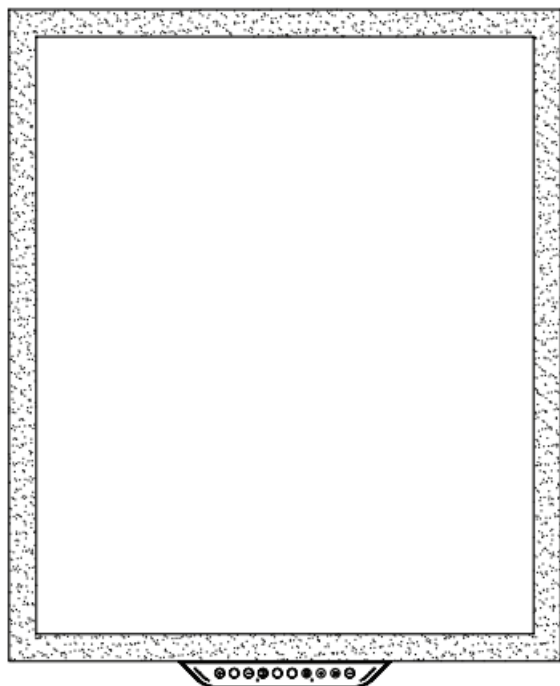

Conforms to UL Standard 962

### ATTACH YOUR RECEIPT HERE

Serial Number \_\_\_\_\_  
Purchase Date \_\_\_\_\_



**Questions, problems, missing parts?** Before returning to the store, call our customer service department at 1-877-319-3757, 7:30 a.m. – 4:30 p.m., CST, Monday – Friday.

### READ AND SAVE THESE INSTRUCTIONS

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.


The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. Other third-party brands and names are the property of their respective owners.

Homewerks, Homewerks Worldwide, the Homewerks house design, and all related logos are trademarks owned by Homewerks Worldwide, LLC

U.S. Pat. No. 9,398,357

Homewerks.com 06/2021


### PACKAGE CONTENTS

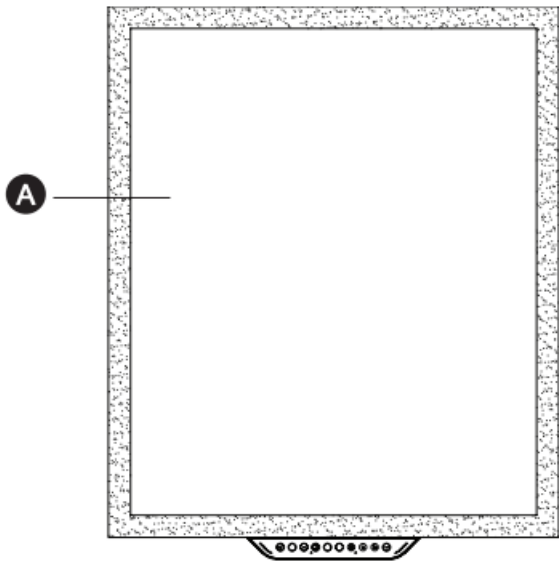

PART	DESCRIPTION	QUANTITY
A	LED mirror	1

### HARDWARE INCLUDED

(not shown actual size)

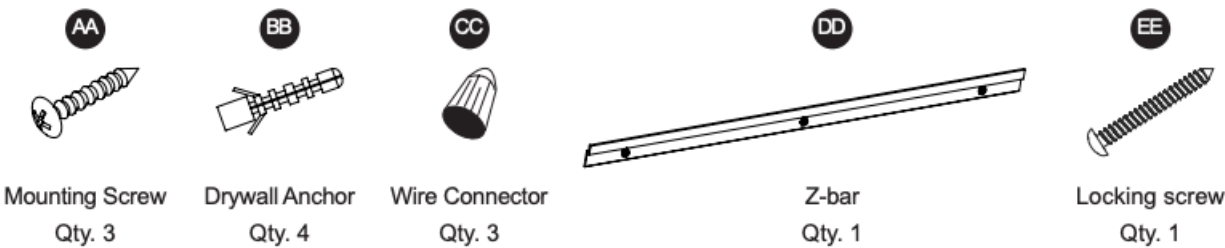

### FCC Compliance

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user’s authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## SAFETY INFORMATION



Please read and understand this entire manual before attempting to assemble, operate or install the product.

1. Always disconnect the power supply prior to installing, servicing or removing the LED mirror.
2. Installation work and electrical wiring must be done by a qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
3. Follow all local building, safety and electrical codes as well as NEC (National Electrical Code) and OSHA (Occupational Safety and Health Act).
4. Electric service supply must be 120 volts, 60 hertz.
5. This product must properly connect to the grounding conductor of the supply circuit.
6. Do not bend or kink the power wires.
7. When cutting or drilling into the wall or ceiling, do not damage electrical wiring and other hidden utilities.
8. Avoid putting sharp or hard objects against mirror surface. Damage and/or injury may occur if punctured.
9. Turn off product during storms or power surge situations to avoid damage to internal components.

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package and hardware contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.


**Estimated Installation Time: 30 minutes**

Tools Required for Assembly (not included): Tape Measure, Phillips Screwdriver, Hammer, Electric Drill, Drill Bits, Level, and Pencil.

Please follow all local electrical codes and consult an electrician when wiring this product.

**IMPORTANT:** 2.4 GHz Wi-Fi connection and Amazon Alexa account are required for full functionality.

## WIRING DIAGRAM

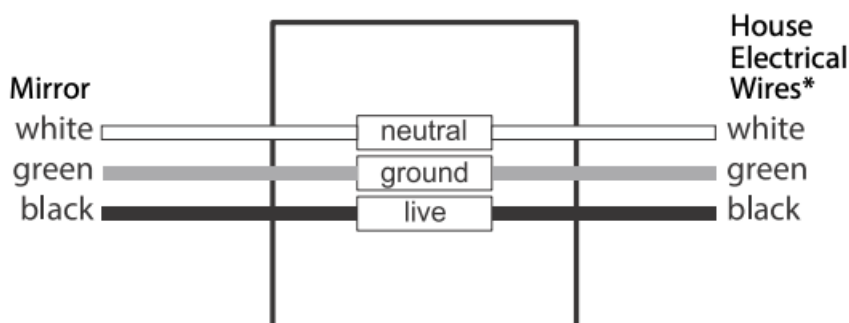

Installation may vary depending on how the previous mirror was installed and the presence of the power source. Supplies necessary for installation of your new mirror are not all included; however, most are available at your local home improvement or hardware store.

\* House wires may vary in color. Please be sure to verify actual house wires with a certified electrician before installation.

## INSTALLATION INSTRUCTIONS



**WARNING: Turn off power at circuit breaker or remove fuse before attempting installation.**

1. Determine the midpoint of where the mirror will be installed and mark with a pencil. Place the Z-bar (DD) on the wall with the middle hole of the Z-bar (DD) positioned over the midpoint.

### Hardware Used


DD

Z-bar



x 1

1

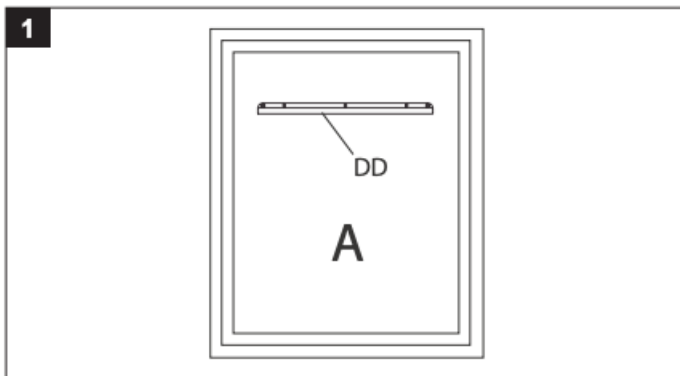

2. Using a level, make sure the Z-bar (DD) is straight and mark the other two holes on the Z-bar (DD) located to the right and left sides. Remove the Z-bar (DD).

### Hardware Used


DD

Z-bar



x 1

2

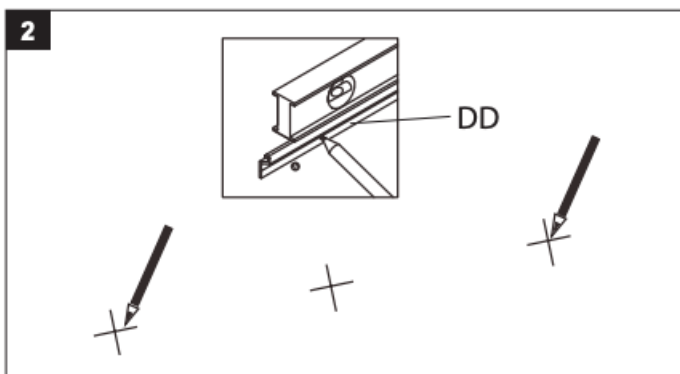


3. Using a 7/32 in. drill bit (not included), drill holes in the wall where marked and insert drywall anchors (BB).


### Hardware Used

 BB

Drywall anchor





x 3

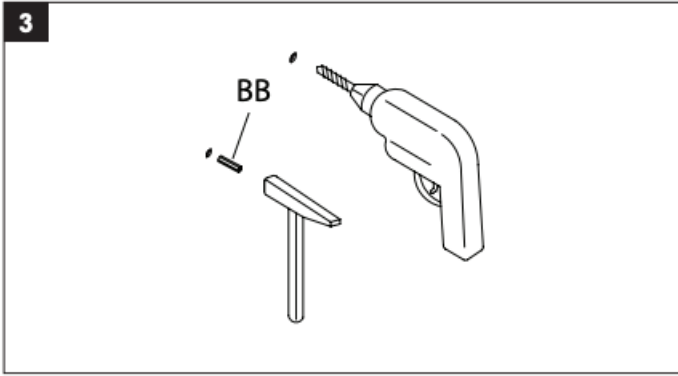


4. Place the Z-bar (DD) on the wall and insert the mounting screws (AA) through the Z-bar (DD) and into the drywall anchors (BB). Tighten the mounting screws (AA) until the z-bar (DD) is securely attached to the wall.

**Hardware Used**

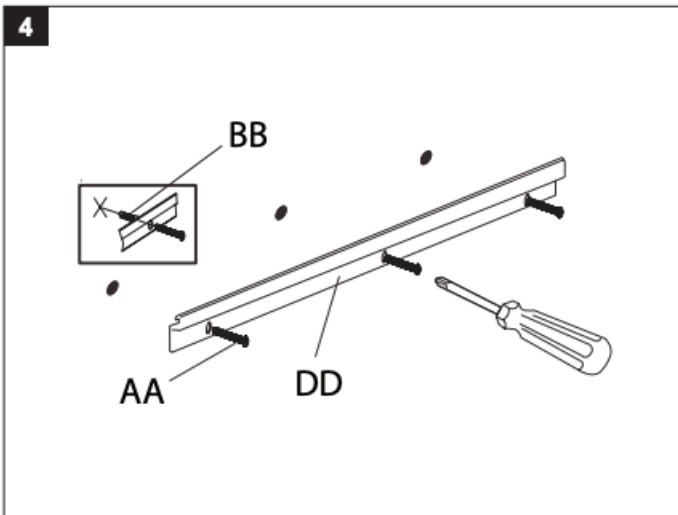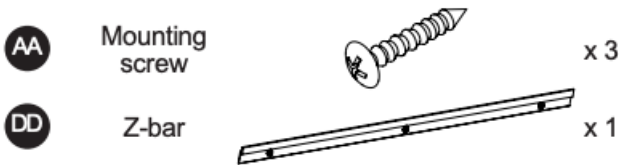


5. Using a level, mark the appropriate distance down from the center of the Z-bar (DD) depending on the size of the mirror. Drill a 7/32 in. hole at this location and insert a drywall anchor (BB).

**Hardware Used**


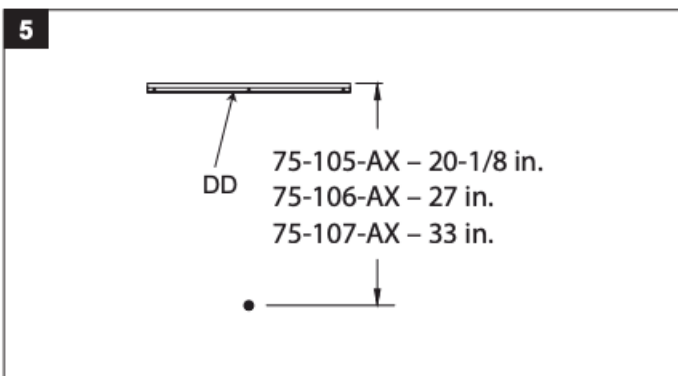


6. Drive the locking screw (EE) into the lower drywall anchor (BB), leaving 1/2 in. exposed.

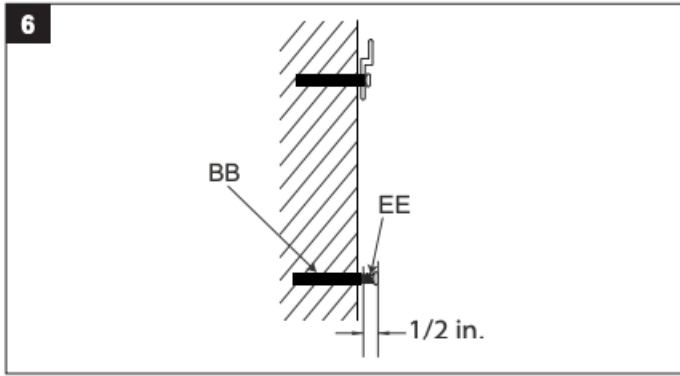


7. Connect the white wire from the mirror (A) to the white wire from the electrical box. Connect the black wire from the mirror (A) to the black wire from the electrical box. Connect the green ground wire from the mirror (A) to the ground wire from the electrical box. Cover and secure each wire connection with a wire connector (CC).

#### **Hardware Used**

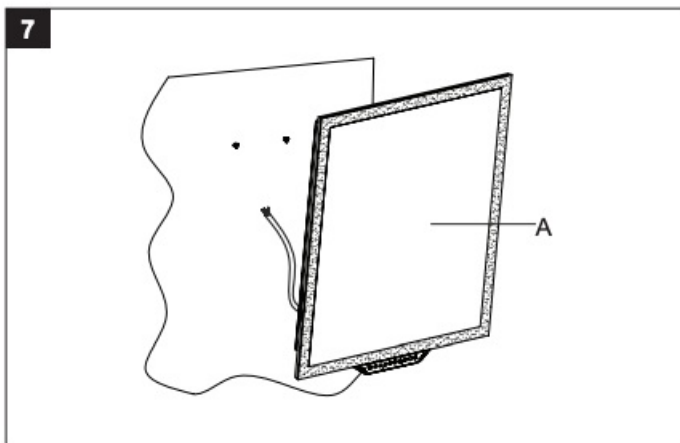 

8. Carefully attach the mirror (A) to the z-bar (DD), centering it and ensuring it is secure. The locking screw (EE) will align with the keyhole bracket on the back of mirror. Once the locking screw (EE) is aligned through the keyhole slot, move the mirror slightly to either side to lock it in place. Once the mirror (A) is securely in place on the Z-bar (DD), turn on the power at the circuit breaker or reinsert the fuse.



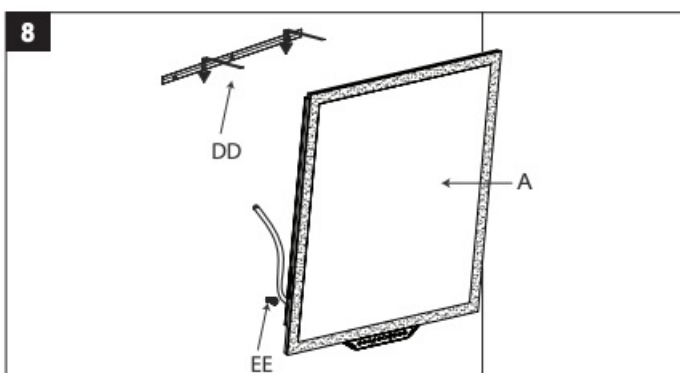









#### **Hardware Used**



## CONTROL PANEL OPERATION




1. When power is off, there is no light on the control panel. When power is on, it will be dimly lit. When the control panel is in use, it will be fully lit.
2. When the mirror is powered up, it will search for the Wi-Fi connection automatically. If the mirror finds a new Wi-Fi connection, use the Homewerks app to connect to the new Wi-Fi connection.

BUTTON	DESCRIPTION	ACTION
	Light ON/OFF	<ul style="list-style-type: none"><li>• Short press to turn light ON/OFF. The default color temperature will be 4000K cool white at 1000 lumens brightness.</li><li>• The light will retain the last CCT and brightness settings when turned off and back on.</li></ul>
	Increase brightness	<ul style="list-style-type: none"><li>• Short press to increase the brightness of the light. The light increases in brightness by 10% each time this button is pressed.</li><li>• The light will retain the last brightness setting when turned off and back on.</li></ul>
	Decrease brightness	<ul style="list-style-type: none"><li>• Short press to decrease the brightness of the light. The light decreases in brightness by 10% each time this button is pressed, until it reaches a low of 10% of the light output.</li><li>• The light will retain the last brightness setting when turned off and back on.</li></ul>
	Light color	<ul style="list-style-type: none"><li>• Short press to change the color temperature of the light. There are 4 color temperatures: 5000K daylight, 4000K cool white (default), 3000K soft white, and 2700K warm white.</li><li>• The light will retain the last color temperature when turned off and back on.</li></ul>
	Night light ON/OFF	<ul style="list-style-type: none"><li>• Short press to turn night light ON/OFF.</li></ul>
	Microphone	<ul style="list-style-type: none"><li>• Short press to activate Alexa.</li><li>• Long press for 5 seconds to enable WPS or restart the Wi-Fi pairing process.</li></ul>
	Mute	<ul style="list-style-type: none"><li>• Short press to mute Alexa microphone ON/OFF.</li><li>• Long press for 5 seconds to activate BLUETOOTH pairing.</li></ul>
	Speaker ON/OFF	<ul style="list-style-type: none"><li>• Short press to turn speaker ON/OFF.</li></ul>
	Increase volume	<ul style="list-style-type: none"><li>• Short press to increase speaker volume.</li></ul>
	Decrease volume	<ul style="list-style-type: none"><li>• Short press to decrease speaker volume.</li></ul>
	Wake up light	<ul style="list-style-type: none"><li>• The wake up light is activated during setup and when Alexa is actively engaged.</li></ul>
	Reset	<ul style="list-style-type: none"><li>• Long press for 8 seconds to activate a factory reset.</li></ul>


## SETTING UP AND PAIRING YOUR ALEXA MIRROR TO THE HOMEWERKS CONNECT APP

Occasionally, there are updates to the app which may change the steps below. If you are having any difficulty with the steps below, please go to [HomewerksConnect.com/Mirror](https://HomewerksConnect.com/Mirror) to check for updates.



1. Connect your phone or smart device to a steady 2.4 GHz Wi-Fi connection that can be accessed where your mirror will be installed.
2. Download the Homewerks Connect app from your smart device compatible app store. If you don't have an Amazon Alexa account, download the Amazon Alexa app from the app store and choose "Create a new account".
3. If using IOS, open the Amazon Alexa app and log in to your Amazon Alexa account with your User ID and Password, then click "Sign In". IMPORTANT: If using Android, this step is not needed.
4. Long press the microphone button. The mirror wake up light will turn on.
5. The mirror speaker will say "Now in set-up mode". If you do not hear "Now in set-up mode", long press the (  ) button on the mirror control panel for 5 seconds to enter set-up mode.
6. Open the Homewerks Connect app on your smart device and follow the instructions provided in the app.
7. In the Homewerks Connect app, select "Add device", select "Mirror" and then click "Next."
8. If you have connected power to the mirror, click "Next". If you have not connected power to the mirror, please connect the power supply to the mirror.
9. Click "Indicator is Blinking" and the app will search for the mirror. Once the app has discovered the mirror, identified as MIRROR, click "Set up this device".
10. Set up Wi-Fi for the mirror by entering the password for the same 2.4 GHz Wi-Fi signal your smart device is connected to and click "Next". The app will then connect the mirror to Wi-Fi. Once the mirror is connected to Wi-Fi, click "Next".
11. The Homewerks Connect app will now search for and install the latest version of the firmware. Please be patient while the firmware is updated to provide you with the best experience.
12. Now the Homewerks Connect app will need you to log in to your Amazon Alexa account. Click "Get Started," then enter the User ID and Password for your Amazon account. Select "Keep me signed in" and then click "Sign In".
13. After logging in to Amazon, choose your preferred language.
14. When the next Amazon Alexa screen says "Alexa is ready", click "Next" and then "Next" again to initiate the pairing process.
15. After pairing the mirror to the app, the commands in this step will activate the special skills needed to control functions of the MIRROR light. Click "Connect" on the next screen. Connect the Homewerks mirror skills by clicking "Link". Then click "Link" again. To finish the process, click "Done" and "Done" again. IMPORTANT FOR ANDROID USERS: After clicking "Connect" and "Link", the app will need you to log in to your Amazon Alexa account again.
16. A list of available names will appear in the app and MIRROR will be selected as the default setting. Click "Next" in the upper right corner of the app screen.

You have successfully completed the set-up process and your Homewerks mirror is ready for use. You can now speak your commands or questions to Alexa, control the mirror via the Homewerks Connect app, or use the included control panel!

**IMPORTANT:** To operate the mirror using standard Alexa commands, Step 14 must be completed successfully. To activate the special skills needed to control additional functions of the mirror, please complete all steps. If the set-up process fails for any reason after Step 14, click the Gear icon (  ) next to MIRROR in the Homewerks Connect app. Then click "Amazon Alexa Settings" and select "Link skill". Continue to pair the Homewerks Connect app to your Amazon Alexa. Please follow the Homewerks Connect app instructions until the Amazon log in and pairing process are complete.

## OPERATING THE MIRROR USING ALEXA COMMANDS

The following commands can be used with Alexa in your mirror:



- Alexa, turn on MIRROR light.
- Alexa, turn off MIRROR light.
- Alexa, dim MIRROR light.
- Alexa, brighten MIRROR light.
- Alexa, change MIRROR light to daylight.
- Alexa, change MIRROR light to cool white.
- Alexa, change MIRROR light to soft white.
- Alexa, change MIRROR light to warm white.
- Alexa, change the MIRROR light color.
- Alexa, change the MIRROR light CCT.
- Alexa, turn on MIRROR night light.
- Alexa, turn off MIRROR night light.

**IMPORTANT:** If you rename the mirror from MIRROR to a custom name, your Alexa commands will need to be directed to the new name. For example, if you renamed the mirror as LED, your command would be “Alexa, turn on the LED light” or “Alexa, turn off the LED light”.

**You can also ask Alexa to do other things for you in addition to operating the mirror. Examples include:**

- Alexa, play music.
- Alexa, play Amazon music.
- Alexa, play Spotify.
- Alexa, turn up the volume.
- Alexa, turn down the volume.
- Alexa, order more shampoo.
- Alexa, what is the traffic on the way to work?
- Alexa, what is the temperature outside?
- Alexa, play Jeopardy!®.
- Alexa, play news.

## CONNECTING YOUR BLUETOOTH® DEVICE TO THE MIRROR SPEAKER

1. To play your personal music files, you need a wireless BLUETOOTH device. After the firmware upgrade is completed during the initial set-up and pairing, you will be able to connect your BLUETOOTH device directly to the mirror speaker.
2. Set your device to a midrange volume level before connecting to the mirror speakers.
  - The optimal volume setting for the BLUETOOTH speakers is 70% or lower. Settings higher than 70% may cause sound distortion.
3. Long press the (  ) button on the control panel to activate BLUETOOTH (  ).
4. From the Home screen on your smart device, choose Settings > BLUETOOTH, to search for MIRROR.

**NOTE:** While your device can maintain multiple pairing records, it can only connect to one accessory at a time.

This prevents your device from sending your data to the wrong BLUETOOTH accessory.


5. Select MIRROR from the list of available BLUETOOTH device options. If MIRROR does not appear on the list, speak "Alexa, BLUETOOTH Mode" and then "MIRROR".
6. When pairing is complete, use the mirror's BLUETOOTH speakers to play audio from your device.
7. If preferred, you can also connect to your BLUETOOTH device via the Homewerks Connect app. Download and open the Homewerks Connect app and follow the steps in the prior section to pair your Alexa mirror to the Homewerks Connect app.
8. To switch to a Wi-Fi connection, just speak "Alexa....." and the device will automatically switch back to a Wi-Fi connection.
9. To switch back from a Wi-Fi connection to BLUETOOTH, press play from your BLUETOOTH device.

## SPOTIFY CONNECT



Use your phone, tablet, or computer as a remote control for Spotify. Go to [spotify.com/connect](https://spotify.com/connect) to learn how.

To enable and link Spotify:


1. Open the Amazon Alexa app and click (  ). Select "Skills & Games." Search for "Spotify" and click "Enable the skill".
2. Follow the pop-up page to enter your Spotify user name and password to link it to your Amazon account.

After completing these two steps, you can speak the command "Alexa, play music on Spotify".


## CARE AND CLEANING

Clean periodically with a soft cloth and glass cleaner. Avoid spraying glass cleaner directly onto mirror. Avoid abrasive cleaners and harsh chemicals as they may damage the surface of the product.


## ROUGH-IN

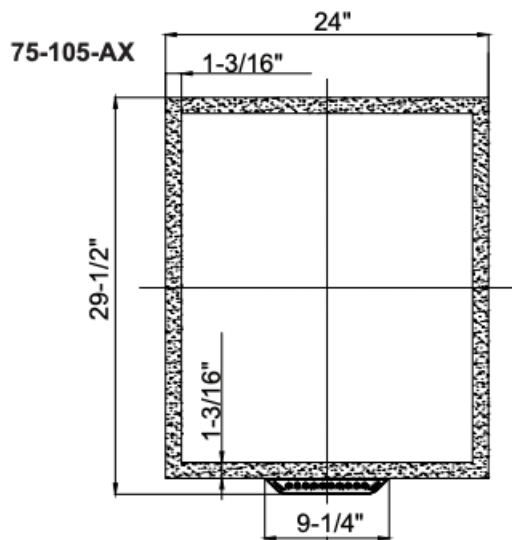


Front View

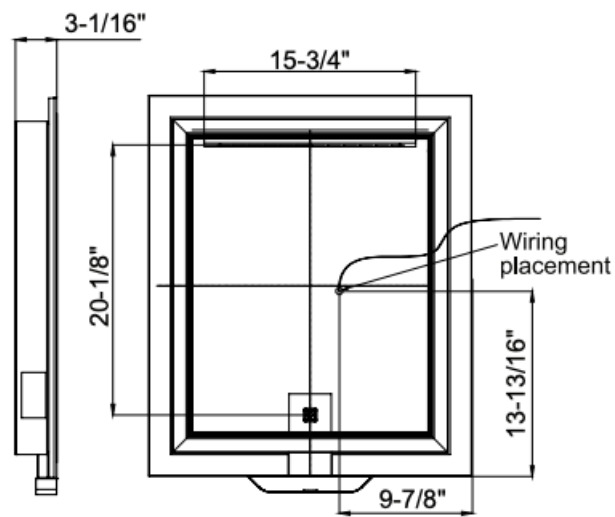


Back View

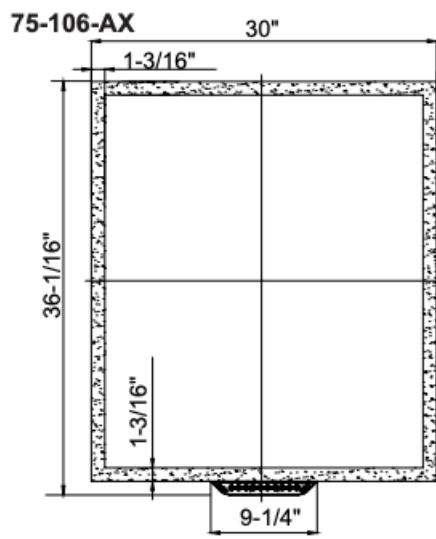


Front View

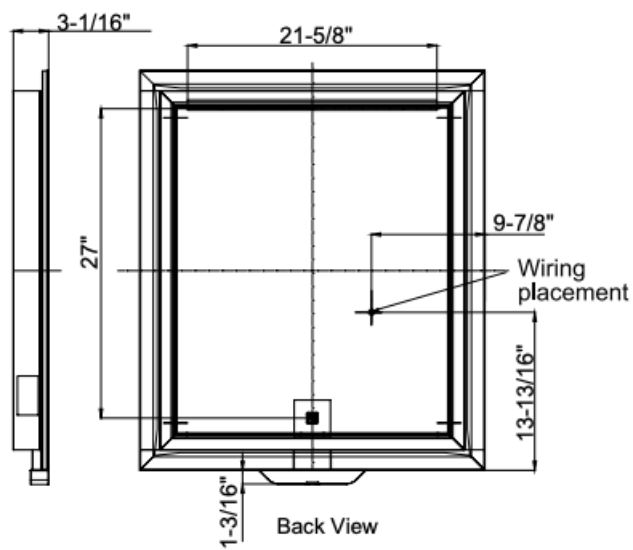

Back View

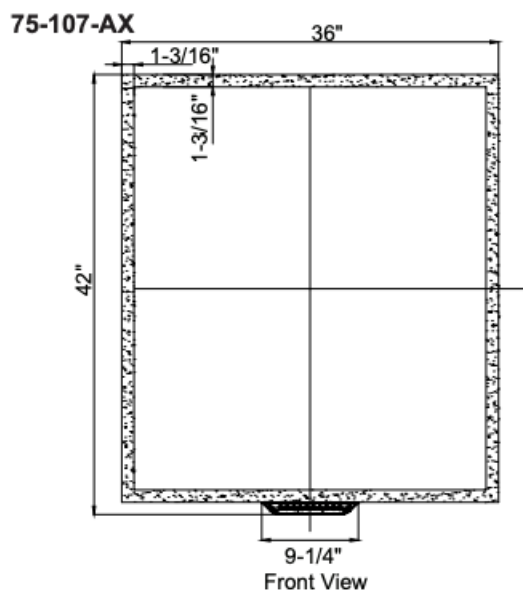


Front View

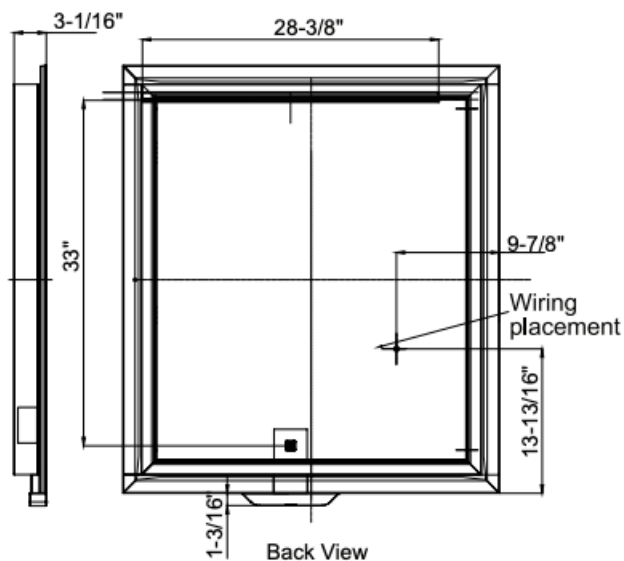


 
 
 
Back View


## REPLACEMENT PARTS

PART	DESCRIPTION	PART #		
		75-105-AX	75-106-AX	75-107-AX
1	Mounting screw (set of 4)	MP-005	MP-005	MP-005
2	Drywall anchor (set of 4)	MP-001A	MP-001A	MP-001A
3	Wire connector (set of 3)	MP-006	MP-006	MP-006
4	Z-bar	MP-003	MP-011	MP-017
5	Locking screw	MP-004	MP-004	MP-004

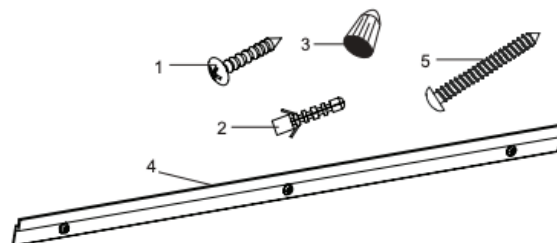

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
BLUETOOTH® device will not pair with the mirror.	Another device is already paired.	Make sure BLUETOOTH signal is turned off on other devices.
The Homewerks mirror cannot be discovered by the Homewerks Connect app.	The mirror is not in set-up mode.	Long press the (  ) button on the mirror control panel for 5 seconds to enter set-up mode. The mirror speaker will say "Now in set-up mode". Follow the steps in the Pairing your Alexa Mirror to the Homewerks Connect App section on page 7.
	The mirror and the mobile device are not connected to the same Wi-Fi network.	Ensure that your mobile device is connected to the same Wi-Fi network that the mirror was configured on.
Alexa is not responding to your commands.	The microphone on the mirror is muted.	If the red LED indicator is illuminated on the mirror, the microphone is muted. Press the (  ) button on the mirror control panel to unmute the microphone. The red LED indicator on the mirror will turn off.
	The mirror may have lost the Wi-Fi signal or the mirror is not paired to your Amazon account or to the Homewerks Connect app.	Follow all of the steps in the Pairing your Alexa Mirror to the Homewerks Connect App section on page 7.
	The Amazon Alexa and Homewerks Connect apps are logged into different accounts.	Sign out of the Amazon Alexa and Homewerks Connect apps. Sign into each again using the same account.
	You are installing two or more Homewerks LED mirrors with Alexa built-in at the same time.	<p>Fully power down both mirrors. Once both units are OFF, take the following steps:</p> <ul style="list-style-type: none"> <li>- Turn on the first mirror.</li> <li>- Long press the (  ) for 8 seconds to initiate the pairing process to the mirror.</li> <li>- Long press the (  ) button for 8 seconds until you hear "Now in set up mode." Open the Homewerks Connect app and go through the pairing process.</li> <li>- Once the first mirror has been set-up and all commands are working properly, turn OFF the first mirror. Then turn ON the second mirror.</li> <li>- Complete the steps above to set up the second mirror, but during the pairing process change the name of the second mirror from MIRROR to a different name.</li> <li>- Once both mirrors have been set-up, you can turn ON the power to the first mirror. Both mirrors should work independently.</li> </ul>

PROBLEM	POSSIBLE CAUSE	SOLUTION
There is no sound coming from the speaker.	A software problem has occurred.	Perform a factory reset by pressing the Reset (  ) button for 8 seconds. NOTE: This will delete all user settings. After the factory reset, the speaker will need to be set up again. Follow the instructions on page 7.
	Volume is turned down or off.	Turn up or turn on the volume.
The mirror is having Wi-Fi connectivity issues.	There is an unsteady network connection.	Make sure that your mirror is within range of your Wi-Fi router and has a strong and stable connection.
	Other devices are causing interference.	Check that your mirror is away from any other devices that cause interference, such as microwaves, baby monitors, or other electronic devices.
	Wi-Fi is not connected because the password was entered incorrectly.	Verify you have the correct Wi-Fi password. If your Wi-Fi password recently changed, update your device's Wi-Fi settings.
	Network congestion is causing poor signal strength.	If you have several devices connected to your Wi-Fi network, try removing some of them to reduce congestion.
	No Wi-Fi signal is being received.	The mirror is 2.4GHz Wi-Fi compatible. Please make sure your smart device and mirror are connected to 2.4GHz.

## BLUETOOTH® SPEAKER – ONE YEAR LIMITED WARRANTY

If the BLUETOOTH speaker fails due to a defect in materials or workmanship at any time during the first year of ownership, the manufacturer will replace it free of charge, postage-paid at their option. This warranty does not cover products that have been abused, altered, damaged, misused, cut or worn. This warranty does not cover use in commercial applications. Use only manufacturer-supplied genuine warranty repair replacement parts to repair this mirror. Use of non-genuine repair parts will void your warranty. The manufacturer DISCLAIMS all other implied or express warranties including all warranties of merchantability and/or fitness for a particular purpose. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

This warranty is limited to the replacement of defective parts only. Labor charges and/or damage incurred during installation, repair, replacement as well as incidental and consequential damages connected with the above are excluded. Any damage to this product as a result of neglect, misuse, accident, improper installation or use other than the purpose SHALL VOID THIS WARRANTY.

Shipping costs for return product as part of a claim on the warranty must be paid for by the customer.

Inquiries regarding warranty claims can be directed to 1-877-319-3757, 7:30 a.m. – 4:30 p.m., CST, Monday – Friday.

## LED MIRROR – TWO YEAR LIMITED WARRANTY

If the mirror fails due to a defect in materials or workmanship at any time during the first TWO years of ownership, the manufacturer will replace it free of charge, postage-paid at their option. This warranty does not cover products that have been abused, altered, damaged, misused, cut or worn. This warranty does not cover use in commercial applications. Use only manufacturer-supplied genuine warranty repair replacement parts to repair this mirror. Use of non-genuine repair parts will void your warranty. The manufacturer DISCLAIMS all other implied or express warranties including all warranties of merchantability and/or fitness for a particular purpose. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

This warranty is limited to the replacement of defective parts only. Labor charges and/or damage incurred during installation, repair, replacement as well as incidental and consequential damages connected with the above are excluded. Any damage to this product as a result of neglect, misuse, accident, improper installation or use other



than the purpose SHALL VOID THIS WARRANTY.

Shipping costs for return product as part of a claim on the warranty must be paid for by the customer.

Inquiries regarding warranty claims can be directed to 1-877-319-3757, 7:30 a.m. – 4:30 p.m., Monday – Friday.

## **AMAZON ALEXA – LIMITED 1-YEAR WARRANTY**

Products covered by this warranty are identified at <https://www.amazon.com/devicewarranty>

If you purchased your Amazon Device or Accessory (the “Device”) from Amazon.com or from authorized resellers located in the United States, the Warranty for the Device is provided by Amazon.com Services LLC, 410 Terry Ave. North, Seattle, WA 98109-5210, United States. If you purchased your Device from any other Amazon website or from authorized resellers located in other countries, the warranty for the Device is provided by the entity identified at <https://www.amazon.com/devicewarrantyprovider>. The provider of this warranty is sometimes referred to herein as “we.”

When you purchase a new or Certified Refurbished Device , we warrant the Device against defects in materials and workmanship under ordinary consumer use for one year from the date of original retail purchase. During this warranty period, if a defect arises in the Device, and you follow the instructions for returning the Device, we will at our option, to the extent permitted by law, either (i) repair the Device using either new or refurbished parts, (ii) replace the Device with a new or refurbished Device that is equivalent to the Device to be replaced, or (iii) refund to you all or part of the purchase price of the Device. This limited warranty applies, to the extent permitted by law, to any repair, replacement part or replacement device for the remainder of the original warranty period or for ninety days, whichever period is longer. All replaced parts and Devices for which a refund is given shall become our property. This limited warranty applies only to hardware components of the Device that are not subject to accident, misuse, neglect, fire or damage from other external causes, alteration, repair, or commercial use.

**INSTRUCTIONS:** For specific instructions about how to obtain warranty service for your Device, please contact Customer Service using the contact information on the left side of this page. In general, you will need to deliver your Device in either its original packaging or in equally protective packaging to the address specified by Customer Service. Before you deliver your Device for warranty service, it is your responsibility to remove any removable storage media and back up any data, software, or other materials you may have stored or preserved on your Device. It is possible that such storage media, data, software or other materials will be destroyed, lost or reformatted during service, and we will not be responsible for any such damage or loss.


**LIMITATION:** TO THE EXTENT PERMITTED BY LAW, THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES, AND WE SPECIFICALLY DISCLAIM ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND AGAINST HIDDEN OR LATENT DEFECTS. IF WE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY AND TO REPAIR OR REPLACEMENT SERVICE.

SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG A STATUTORY OR IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. WE ARE NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY. IN SOME JURISDICTIONS THE FOREGOING LIMITATION DOES NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS “LIMITATIONS” SECTION DOES NOT APPLY TO CUSTOMERS IN THE EUROPEAN UNION.

This limited warranty gives you specific rights. You may have additional rights under applicable law, and this limited warranty does not affect such rights.

You can find the Customer Service contact information and other applicable terms and Device information (including in other languages) at <https://www.amazon.com/devicesupport>.

## Documents / Resources

	<p><a href="#">HOMWERKS 75-107-AX LED Mirror with Alexa Built-In And Bluetooth Speakers</a> [pdf] Instruction Manual</p> <p>75-105-AX, 75-106-AX, 75-107-AX, LED Mirror with Alexa Built-In And Bluetooth Speakers, 75-107-AX LED Mirror with Alexa Built-In And Bluetooth Speakers</p>
---	---

## References

- [Amazon.com. Spend less. Smile more.](#)
- [Bathroom and Kitchen Innovations That Keep Your Home Flowing | Homewerks Worldwide](#)
- [HomewerksConnect.com/Mirror](#)
- [amjs60885 - \( \)](#)
- [Spotify - Connect](#)
- [Amazon Digital Services and Device Support - Amazon Customer Service](#)
- [Amazon Device Warranty - Amazon Customer Service](#)
- [Amazon Device Warranty Provider - Amazon Customer Service](#)