



## Honeywell 1361 Transformer Wiring for Shared Installation Guide

[Home](#) » [Honeywell](#) » Honeywell 1361 Transformer Wiring for Shared Installation Guide 

### Contents

- [1 Honeywell 1361 Transformer Wiring for Shared](#)
- [2 Honeywell 1361 Transformer](#)
- [3 Product Usage Instructions](#)
- [4 INTRODUCTION](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

# Honeywell

## Honeywell 1361 Transformer Wiring for Shared



## Honeywell 1361 Transformer

- **Model:** 1361

### Specifications:

- **Input Voltage:** 110 VAC
- **Output Voltage:** 16.5 VAC
- **Power Rating:** 40VA

### Product Usage Instructions

1. If the control panel and/or communicator is already powered, remove AC power, then disconnect the battery on each unit.
2. Wire the Honeywell 1361 Transformer as shown below:

#### Transformer Wiring Diagram

3. At the control panel, plug the transformer in.
4. Reconnect the battery at the control panel and the communicator.

Please refer to the [online support](#) for further assistance or troubleshooting.

### Warranty Information

For the latest warranty information, please visit <http://www.security.honeywell.com/hsc/resources/wa/>

### Contact Information:

**Phone:** 800-08251

**Address:** 2 Corporate Center Drive, Suite 100 P.O. Box 9040, Melville, NY 11747

**Website:** <http://www.honeywell.com/security>

## INTRODUCTION


This guide shows how to wire the Honeywell 1361 Transformer (16.5VAC, 40VA) when it is desired to power both the control panel and the communicator (such as; GSMV, GSMV4G, IGSMV, and IGSMV4G) from one transformer.

### IMPORTANT:

- You must use the Honeywell 1361 Transformer.
- This configuration **ONLY** applies to the VISTA-10P, VISTA-15P, VISTA-20P control panels when used with the GSMV, GSMV4G, IGSMV, and IGSMV4G communicators.
- **DO NOT** use this configuration with any other control panel.
- **DO NOT** use this configuration if using two-way voice.
- This configuration has not been evaluated by UL.

To wire the transformer, perform the following steps:

- If the control panel and/or communicator is already powered, remove AC power, then disconnect the battery on each unit.
- Wire the Honeywell 1361 Transformer as shown below.

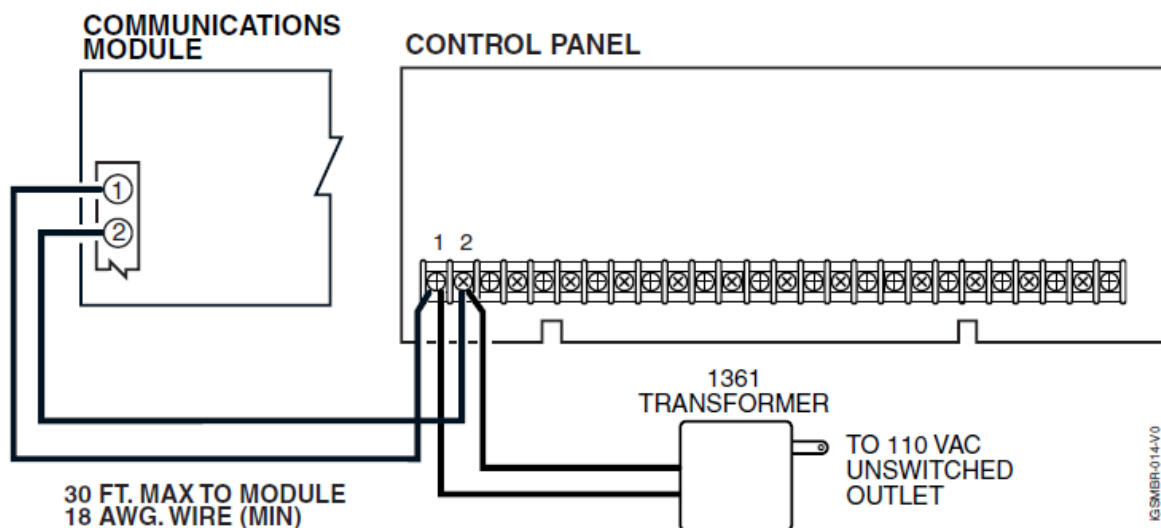

- At the control panel, plug the transformer in.
- Reconnect the battery at the control panel and the communicator.


**WARRANTY:** For the latest warranty information go to: <http://www.security.honeywell.com/hsc/resources/wa/>

2 Corporate Center Drive, Suite 100  
P.O. Box 9040, Melville, NY 11747

Copyright

2011 Honeywell International Inc. [www.honeywell.com/security](http://www.honeywell.com/security)

Documents / Resources

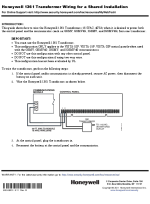	<p><a href="#">Honeywell 1361 Transformer Wiring for Shared</a> [pdf] Installation Guide 1361, 1361 Transformer Wiring for Shared, Transformer Wiring for Shared, Wiring for Shared, Shared</p>
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [H Commercial Real Estate | Honeywell](#)
- [H Security | Honeywell Building Technologies](#)
- [H Security | Honeywell Building Technologies](#)