

 


# Honeywell DX-MAXXT IntelliDoX Docking Module User Guide

[Home](#) » [Honeywell](#) » Honeywell DX-MAXXT IntelliDoX Docking Module User Guide 

# Honeywell

THE POWER OF CONNECTED  
IntelliDoX™  
Docking Module

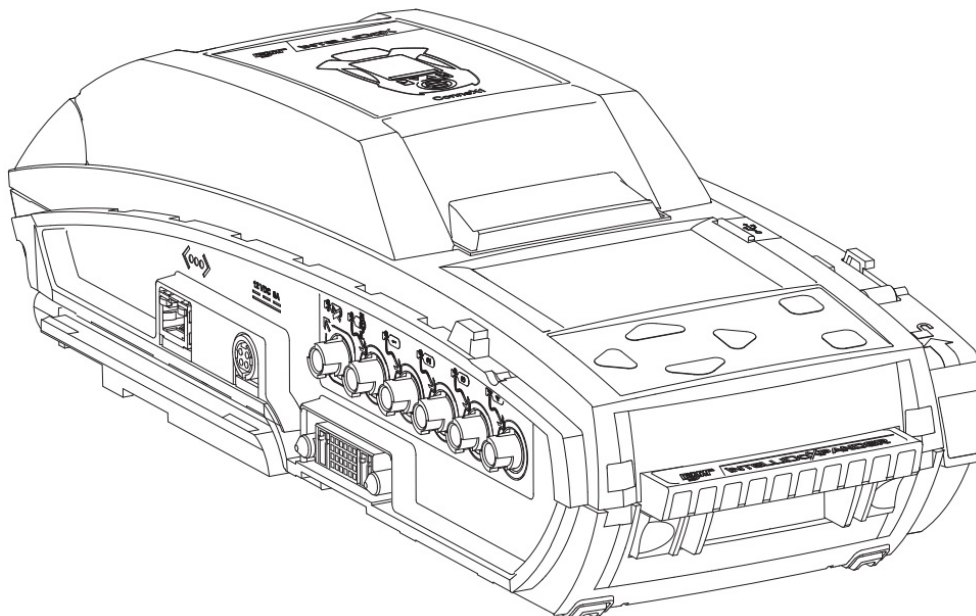

**Quick Reference Guide**

## About this Publication

This publication is a quick-start reference guide to assembling the IntelliDoX Docking Module and preparing it for first use. Ensure that you are familiar with the use of personal gas detection devices and accessories, and take appropriate action in the event of an alarm condition.

For additional information regarding IntelliDoX installation, configuration, operation, and maintenance refer to the IntelliDoX User Manual at <https://www.honeywellanalytics.com/en/products/IntelliDox>

## About the IntelliDoX Docking Module

The IntelliDoX Docking Module ('IntelliDoX' or 'IntelliDoX module') is an automatic bump test and calibration docking station for use with portable gas detectors manufactured by Honeywell. The IntelliDoX automatically performs essential procedures including sensor identification, bump tests, calibrations, alarm tests, and data transfers. It also retains a cumulative record of detector data logs that are transferred to its onboard memory. The IntelliDoX can be used on a tabletop or other flat surfaces. A built-in retractable stand can be deployed to hold the IntelliDoX upright at an angle that is suitable for routine use. IntelliDoX modules can also be mounted on a wall or other flat surfaces. For additional information, refer to the User Manual.

## Contents

- [1 What's in the Box](#)
- [2 Symbol Definitions](#)
- [3 At a Glance](#)
- [4 NOTICE](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

## What's in the Box

### IntelliDoX Docking Module

Each IntelliDoX Docking Module package contains one IntelliDoX module with a factory-installed nest. The power adapter, power cord, calibration gas tubing, and exhaust tubing, are packaged separately as the IntelliDoX Enabler Kit. One Enabler Kit is required for each stand-alone IntelliDoX module.

If the IntelliDoX module is damaged or if parts are missing, contact Honeywell or an authorized distributor immediately.

### IntelliDoX Enabler Kit

One IntelliDoX Enabler Kit is required for each stand-alone IntelliDoX module. Each Enabler Kit contains:

- Power supply and AC power cord appropriate to shipping destination.
- Ethernet cable.
- Calibration gas and purge gas tubing, cut to 1 meter (3.3 feet).
- Quick connect fittings.
- Exhaust tubing, cut to 4.57 meters (15 feet).
- Inlet (purge) filter assembly.
- IntelliDoX end plate.
- Download PC Configuration software that supports your product from the Honeywell Analytics website.

<https://www.honeywellanalytics.com/en/products/IntelliDox>

If Enabler Kit parts are damaged or missing, or if additional Enabler Kits are required, contact Honeywell or an authorized distributor immediately.

### Copyright, Notices, Trademarks

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

IntelliDoX is a trademark of Honeywell. Other brands or product names are trademarks of their respective owners.




## Configuration Software

Please download PC configuration software on the IntelliDoX product page under the software tab on the Honeywell Analytics website. [www.honeywellanalytics.com](http://www.honeywellanalytics.com)

Product	Configuration Software
IntelliDoX BWClip	Fleet Manager/SafetySuit DC
IntelliDoX BW MicroClip	Fleet Manager/SafetySuit DC
IntelliDoX BW Clip4	Fleet Manager/SafetySuit DC
IntelliDoX BW Ultra	Fleet Manager/SafetySuit DC
IntelliDoX BW Solo	SafetySuit DC

## Symbol Definitions

This manual uses the following signal words, as defined by ANSI Z535.4-1998.

Signal Word	Description
 <b>DANGER</b>	A hazardous situation that, if not avoided, will result in death or serious injury. This symbol identifies the most extreme hazardous situations.
 <b>WARNING</b>	A hazardous situation that, if not avoided, could result in death or serious injury.
 <b>CAUTION</b>	A hazardous situation that, if not avoided, may result in moderate or minor injury.
<b>NOTICE</b>	Situations that, if not avoided, may result in property damage.

## Important Safety Information: Read First

- To ensure personal safety, read Safety Information and Warnings before using the IntelliDoX.
- Use the IntelliDoX only as specified by the manufacturer. Failure to do so may impair the protection provided by IntelliDoX.
- The safety and security of any system or network incorporating the IntelliDoX and its accessory components is the responsibility of the assembler of the system.
- Follow all required National Electric Codes (NEC) and safety standards.

## Prepare for First Use

To ensure that the IntelliDoX module is ready for safe operation, you must attach the endplate, attach the purge inlet filter assembly, and connect the exhaust tubing before you connect power or attach a gas cylinder.

### Attach the Endplate

 
Each IntelliDoX Enabler Kit contains one endplate. To prevent gas leaks, the end plate must be attached and locked with the lock latch arm before connecting the power supply or connecting gas cylinders. The end plate must remain securely latched at all times during operation. If the end plate is detached during operation, disconnect power and replace the end plate immediately.

- Unhook and lift latch arm.
- Attach end plate.
- Lower and lock latch arm.







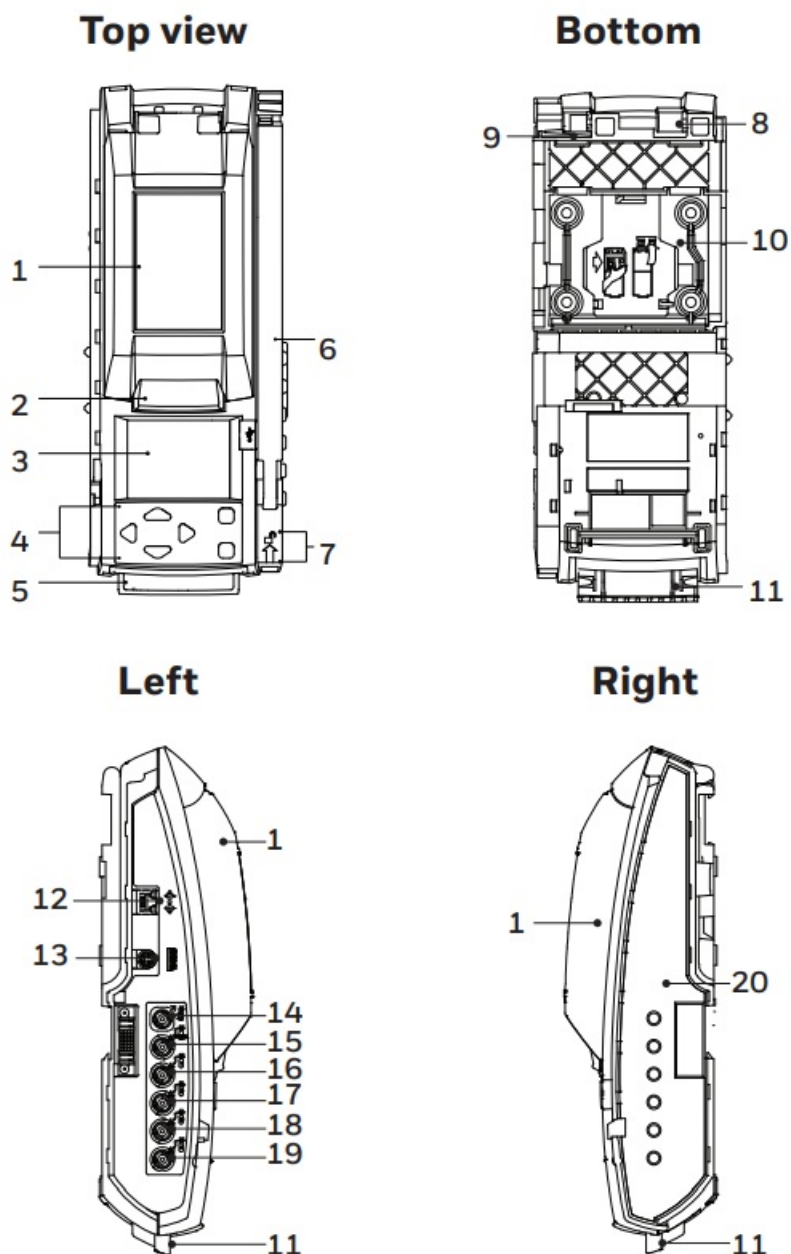

■ This symbol indicates that the product must not be disposed of as general industrial or domestic waste. This product should be disposed of through suitable WEEE disposal facilities. For more information about the disposal of this product, contact your local authority, distributor, or manufacturer.

## At a Glance



## Touchpad and buttons

Button	Action
	Move right
	Move left
	Move up
	Move down
	Select menu item Save changes
	Close menu item Return to the previous screen Cancel changes

## LCD Backlight

Backlight Color	Status
Gray	Idle
Blue	Prompt for user action
Yellow Green	Activity in progress
Green	Activity successful
Red	Warning Activity Failed

Part	Num
Lid	1
Lid button	2
View screen	3
Navigation buttons	4
Gas module	5
Arm	6
Arm unlock	7
Hinge	8
Panel latch	9
Detachable back panel	10
Expansion module	11
Network connection	12
Power connection	13
Exhaust outlet	14
Purge inlet	15
Gas inlet 1	16
Gas inlet 2	17
Gas inlet 3	18
Gas inlet 4	19
End plate	20

### Connect the Purge Inlet Filter Assembly

Each IntelliDoX Enabler Kit contains one purge inlet filter assembly.

Unless otherwise specified, the purge inlet is configured to use ambient air in a fresh air environment with a normal atmosphere of 20.9% O<sub>2</sub> that is free of hazardous gas. Ensure that the purge inlet filter assembly is attached before using the IntelliDoX module. You may attach an extension tubing to the filter assembly to draw ambient air from an adjacent fresh air environment.

1. Ensure that the filter assembly is free of obstructions and defects.
2. Connect the filter assembly to the purge inlet.
3. If necessary, attach an extension tubing to the filter assembly to draw ambient air from an adjacent fresh air environment.

### Connect the Exhaust Tubing

Each IntelliDoX Enabler Kit includes one exhaust tubing that is 4.57 meters (15 feet) long.

1. Inspect the exhaust tubing to ensure that it is free of obstructions and defects.

2. Connect the exhaust tubing to the exhaust outlet.
3. Ensure that the exhaust tubing is not connected to a negative pressure system, or obstructed in any way.

### **Connect the Power**

Each IntelliDoX Enabler Kit contains one power supply and an AC power cord. Use only the power supply provided in the Enabler Kit to connect the IntelliDoX

Docking Module to an appropriate electrical power outlet. When the power is connected, the IntelliDoX activates and a self-test is performed.

1. Connect the AC power cord to the power supply
2. Connect the power supply to the IntelliDoX power port.
3. Plug the AC power cord into a suitable wall outlet.
4. When the power is connected, the IntelliDoX LCD activates and a self-test is performed.

### **NOTICE**

To prevent the corruption or loss of data and/or software and/or firmware, do not deactivate the equipment while performing datalog transfers, bump tests, calibrations, or other operations.

### **Charge a Detector**

Use the IntelliDoX to charge detectors fitted with rechargeable batteries. For more information on battery maintenance, refer to the detector manual.

1. Charge only in a normal environment that is 20.9% O<sub>2</sub> and free of hazardous gas. Do not operate the docking module in a hazardous area. Failure to adhere to this guideline can result in possible personal injury and/or property damage.
2. Deactivate the detector.
3. Insert the detector into the IntelliDoX module.
4. Battery charging begins immediately. Battery charging is disabled during bump tests and calibration procedures.

Once tests and other routines are completed, you may leave the detector in the module for charging. If the detector is activated, the module will deactivate it after 10 minutes of inactivity. When charging is complete, remove the detector. Do not store the detector in the module.

### **Prepare for Bump Tests and Calibrations**

The IntelliDoX module is factory-configured for use with portable gas detectors. Gas inlets are configured at the factory. Inlet configurations cannot be altered. The IntelliDoX Enabler Kit includes quick connect fittings and calibration tubing cut to the minimum recommended length of 1 meter (39 inches). Use only tubing that is between 1 meter (39 inches) and 10 meters (33 feet) in length when you connect gas cylinders to an IntelliDoX module.

 
### **Connect Calibration Gas**

1. Connect a demand flow regulator to the calibration gas cylinder.
2. Use the quick connect fittings and calibration gas tubing to connect the calibration gas cylinder to the gas.




### **Bump Test**

A bump test is a procedure that confirms a detector's ability to respond to target gases by exposing the detector

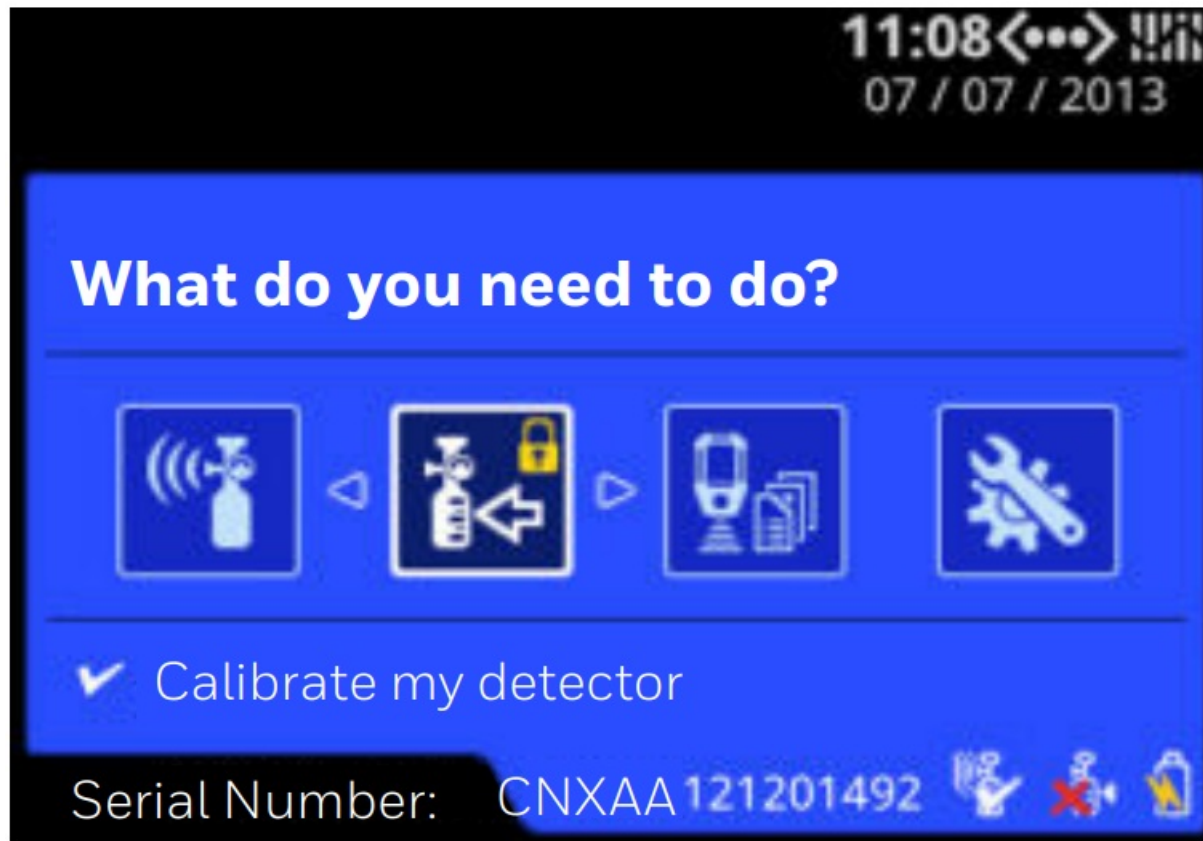to gas concentrations that exceed its alarm setpoints.




If AutoBump on Insertion is set using PC configuration software, then the bump test starts automatically when IntelliDoX recognizes the detector. If AutoCal is on. Overdue Sensors are enabled and if calibration is also due, then no bump test is performed. Instead, calibration starts automatically when the detector is recognized. Bump test my detector Serial Number: CNXAA

1. Insert a detector.
2. Press  on  the keypad to move to Bump test my detector on the IntelliDoX user menu.
3. Press  to select Bump Test. The LCD screen background changes to yellow and the bump test progress screen is displayed.
4. The bump test begins. Test sequence progress screens are displayed while the tests are performed.
5. If AutoDownload Datalog is set using PC configuration software, detector data logs are automatically transferred to IntelliDoX.

### **Bump Test Pass**

 When the bump test is successful, the LCD screen background changes to green, and the Bump test passed message is displayed. Alarm response and sensor response test items are checked. Bump test passed Alarm response: Acoustic Visual Vibrator Sensor response:




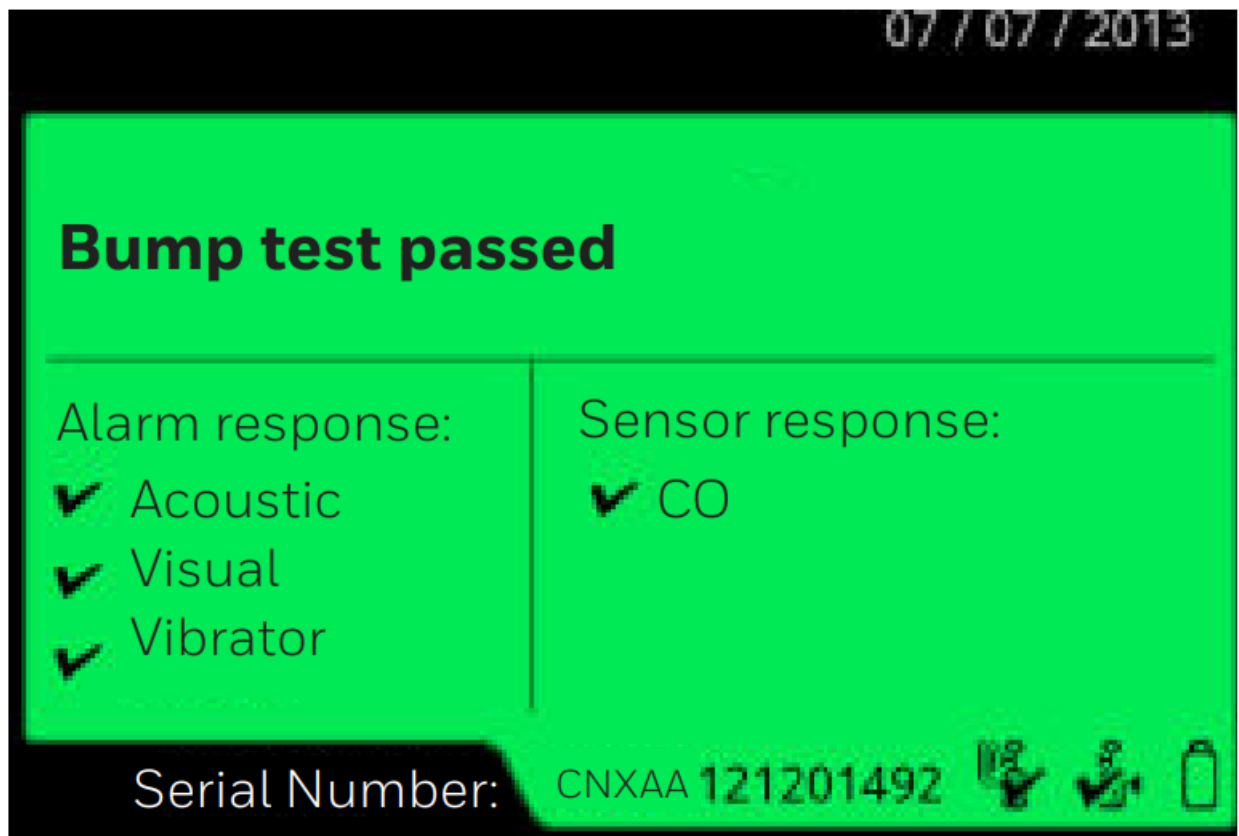

Press ✓ to return to the IntelliDoX user menu.

#### Bump Test Fail

 When the bump test fails, the LCD screen background changes to red and the Bump test failed message is displayed. Failed alarm response and/or sensor response test items are marked with **X**.

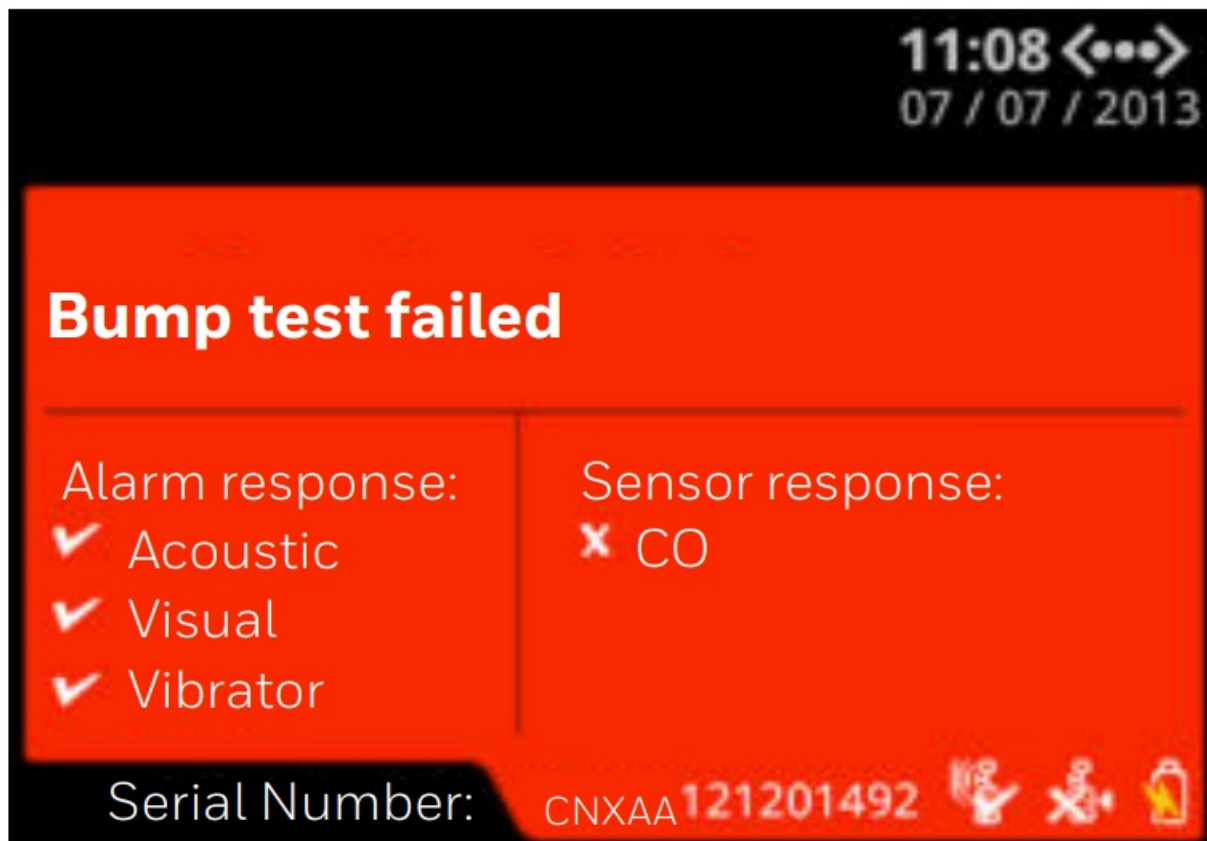

If the AutoCal on Failed Bump is set using PC configuration software, calibration automatically begins.

## **Calibration**

 
Calibration is a two-step procedure that determines the measurement scale for the detector's response to gas. In the first step, a baseline reading is taken in a clean, uncontaminated environment. In the second step, the sensors are exposed to known concentrations of gas. The detector uses the baseline and known gas concentrations to determine the measurement scale.

## **Calibration Guidelines**

1. Calibrate only in a normal environment that is 20.9% O<sub>2</sub> and free of hazardous gas. Do not operate the docking module in a hazardous area. Failure to adhere to this guideline can result in possible personal injury and/or property damage.
2. Use only premium grade calibration gases and cylinders that are approved by Honeywell, and supplied by Honeywell or an authorized distributor. The calibration gases must meet the accuracy of the detector. For more information, refer to the User Manual.
3. Do not use a gas cylinder beyond its expiration date.
4. All calibration cylinders must be used with a demand flow regulator and must meet these maximum inlet pressure specifications. Disposable cylinders: 000 psig/70 bar, refillable cylinders: 03000 psig/207 bar
5. Do not calibrate the detector during charging or immediately after charging.
6. Calibrate the sensor if ambient gas readings vary during startup.
7. Calibrate a new sensor before use. Allow the sensor to stabilize before starting calibration.
8. Used sensor: wait 60 seconds
9. New sensor: wait 5 minutes
10. When calibrating the same gas detector multiple times, wait 10 minutes between calibrations to allow the sensor to stabilize.
11. If a certified calibration is required, contact Honeywell or an authorized distributor.

## **Calibrate a Detector**


If AutoCal on Overdue Sensors is set using PC configuration software and sensors are overdue, then calibration starts automatically once IntelliDoX recognizes the detector.

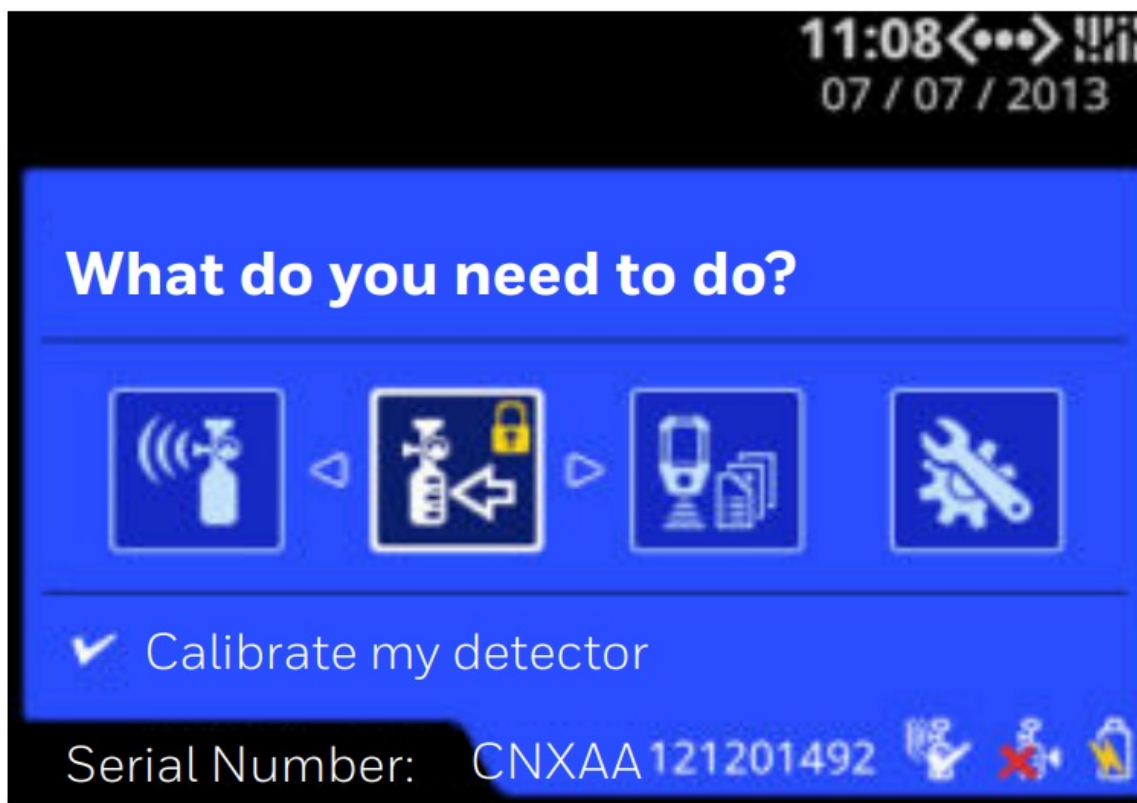

1. Insert a detector.
2. Use ◀ and ▶ move to Calibrate my detector on the IntelliDoX user menu.
3. Press ✓ to select Calibrate my detector. The LCD screen background changes to yellow and the calibration progress screen is displayed.
4. Calibration begins. Progress screens are displayed while the tests are performed.
5. If AutoDownload Datalog is set using PC configuration software, detector data logs are automatically transferred to IntelliDoX.

#### **Calibration Pass**

 When the calibration is successful, the LCD screen background changes to green, and Calibration passed is displayed. Alarm response and sensor response test items are checked. Press ✓ to return to the IntelliDoX user menu.

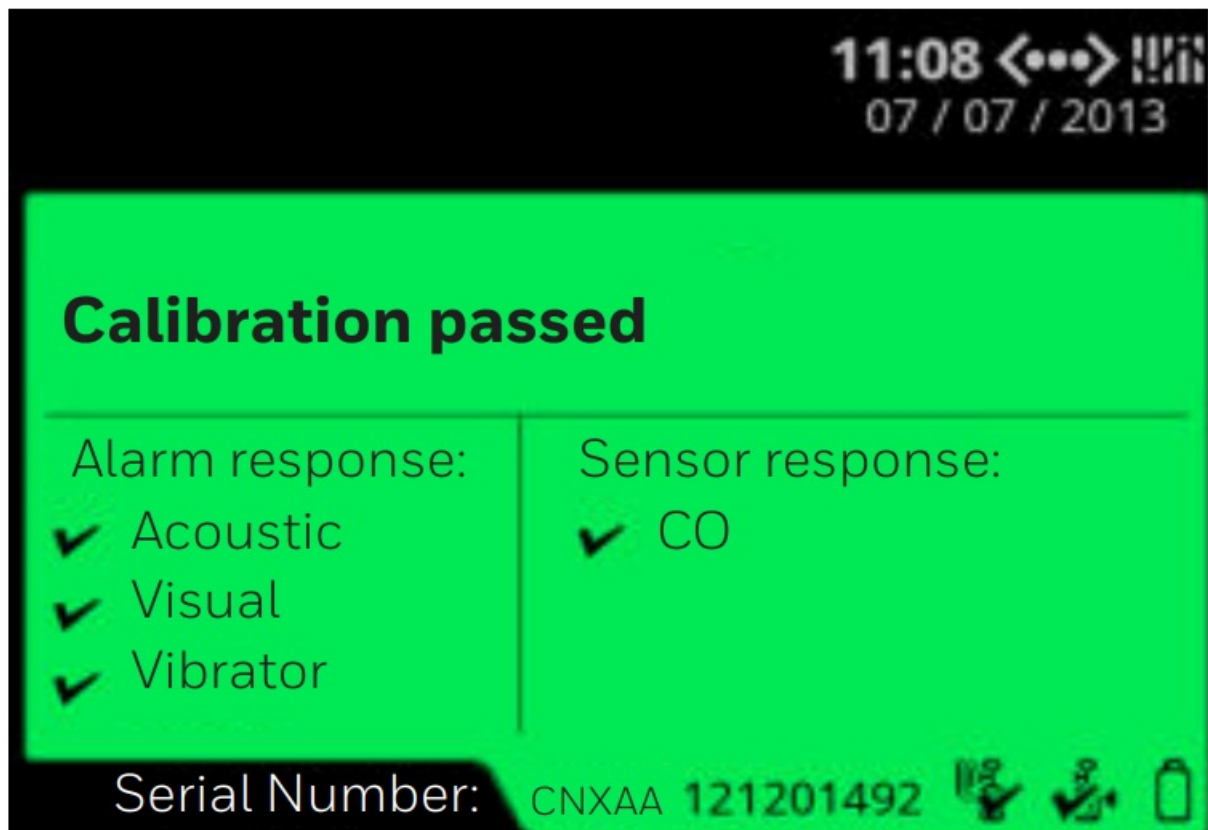

#### Calibration Fail

When the calibration fails, the LCD screen background changes to red, and Calibration failed is displayed. Failed alarm response and/or sensor response test items are marked with **X**.

#### Intended Use

Unless otherwise specified at time of purchase, IntelliDoX modules shipped from Honeywell.

- Are factory configured for use with portable gas detectors.
- Operate as stand-alone bump test and calibration stations.
- May be connected to a network via Ethernet cable for enhanced access to and control of administrative and maintenance tasks.
- Are compatible with PC Configuration software.
- If the IntelliDoX module or any of its parts are damaged or missing, contact Honeywell or an authorized distributor immediately.

#### Normal Operating Conditions

The IntelliDoX is designed to be safe under the following conditions:

- Indoor use only
- Normal atmosphere (20.9% O<sub>2</sub>) that is free of hazardous gas
- Temperature range of +10°C to +35°C
- Relative humidity of 0% to 50%

If the intended operating environment does not match these criteria, Honeywell recommends that you consult a qualified professional specialist prior to installing and using any IntelliDoX modules.

This equipment uses potentially harmful gas for calibrations. The IntelliDoX must be attached to a venting system or be used in a well-ventilated area.



Suite 110 4411-6 Street SE

Calgary, Alberta

Canada, T2G 4E8

5010 4991-166 EN-B4

©2018 Honeywell. All rights reserved.

Toll-free: 1-888-749-8878

[www.honeywellanalytics.com](http://www.honeywellanalytics.com)


## Documents / Resources



[Honeywell DX-MAXXT IntelliDoX Docking Module](#) [pdf] User Guide

DX-MAXXT, IntelliDoX Docking Module, IntelliDoX, DX-MAXXT, Docking Module

## References

-  [TCPDF](#)
-  [IntelliDoX | Honeywell](#)
-  [Honeywell Analytics](#)

Manuals+.