



## Honeywell ERM5220R Equipment Remote Module Installation Guide

[Home](#) » [Honeywell](#) » Honeywell ERM5220R Equipment Remote Module Installation Guide 

### Honeywell ERM5220R Equipment Remote Module Installation Guide



#### **CAUTION**

Read these installation instructions completely and follow them carefully.

Installation must be performed by a qualified service technician and must comply with local codes. Disconnect power to all relevant devices before installing or servicing the ERM.

Failure to connect the device according to these instructions may result in damage to the device, the controls, and/or personal injury.

## Contents

- [1 About the ERM5220R](#)
- [2 Installation Checklist](#)
- [3 TOOLS NEEDED \(NOT SUPPLIED\)](#)
- [4 INSTALLATION](#)
- [5 Wiring](#)
- [6 Checkout](#)
- [7 TROUBLESHOOTING](#)
- [8 SPECIFICATIONS](#)
- [9 SEPARABLE PARTS](#)
- [10 FCC REGULATIONS](#)
- [11 IC REGULATIONS](#)
- [12 FCC WARNING](#)
- [13 5 YEAR WARRANTY](#)
- [14 Documents / Resources](#)
- [15 Related Posts](#)

## About the ERM5220R


- Wireless RedLink™ communication between condensing unit/ compressor or boiler and thermostat.
- Eliminates the need to run additional wires to your equipment, for example, during a heat pump upgrade.
- Suitable for outdoor use.
- Temperature sensor terminals for outdoor temp sensors or indoor freeze protection.
- LEDs for easy installation checkout.
- May reduce damage to homes since wiring/drilling is eliminated.

**NOTE: The ERM5220R is compatible with updated models THX9421R5021, TH8321R1001, TH8320R1003, and TH8110R1008.**

**THM5421R1021 EIM is also required with THX9421R5021. Optional with other models.**

## Installation Checklist


### MATERIALS SUPPLIED

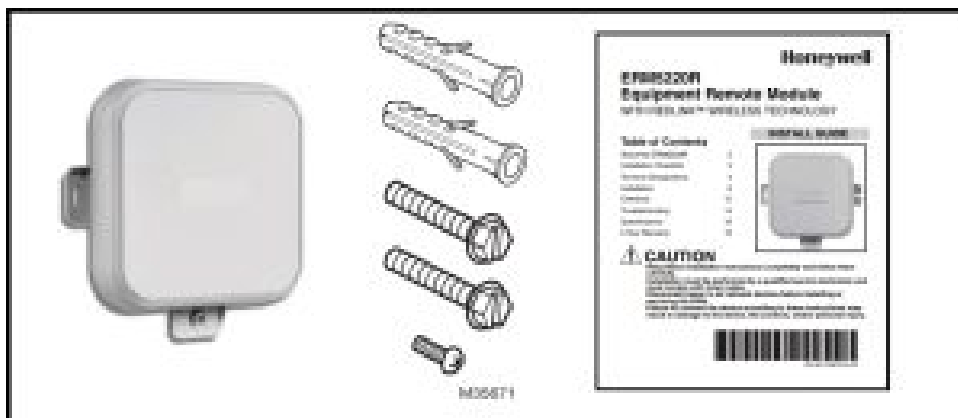

- ERM5220R
- Wall Anchors (x2) and Mounting Screws (x2)

- Extra Cover Screw (optional)
- Installation Instructions

## TOOLS NEEDED (NOT SUPPLIED)

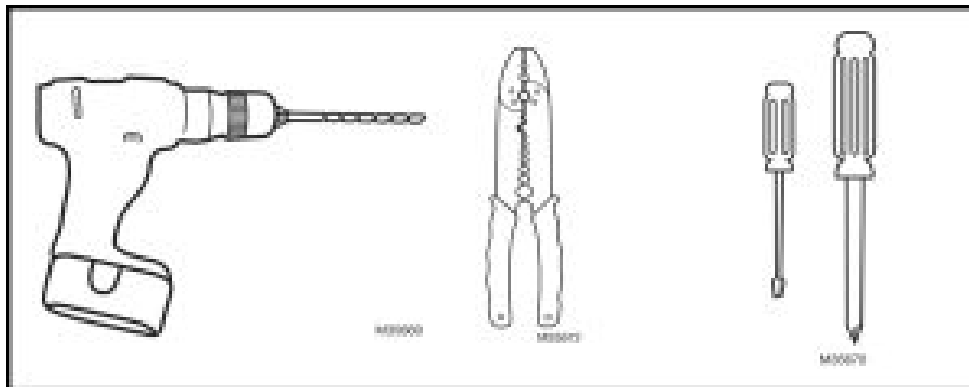

- Drill
- Nut Driver Attachment for Drill
- Wire Stripper
- Small Flathead Screwdriver
- Phillips Screwdriver
- 120/240 V to 24 V Transformer (optional)

## Terminal Designations

### TERMINAL DESIGNATIONS FOR COMPRESSOR

S1	}	TERMINALS FOR 18K OHM TEMPERATURE SENSOR. CAN BE USED TO SENSE OUTDOOR TEMPERATURES WHICH WILL BE DISPLAYED ON A COMPATIBLE PHILIPK THERMOSTAT.
S1		
L	—	COMPRESSOR LINE FAULT TERMINAL. FAULT OCCURRENCE WILL BE COMMUNICATED TO COMPATIBLE PHILIPK THERMOSTAT.
D	—	COMPRESSOR DEFROST TERMINAL. DEFROST OCCURRENCE WILL BE COMMUNICATED TO COMPATIBLE PHILIPK THERMOSTAT. ⚠
O	—	O/V TERMINAL FOR REVERSING VALVE OR HEAT PUMP.
Y	—	SECOND STAGE OF TWO-STAGE COMPRESSOR.
Y	—	FIRST STAGE OF TWO STAGE COMPRESSOR.
C	}	TERMINALS FOR 24VAC POWER.
R		
J	—	TERMINAL FOR JUMPER. JUMPER BETWEEN J AND R SHOULD BE IN PLACE FOR COMPRESSOR USE.

⚠ THE "O" TERMINAL OPERATES AS AN INPUT FOR DEFROST. ACTIVE INPUT ON "O" TERMINAL WILL POWER-UP. IF "O" TO A/C? IS NOT DESIRED, DO NOT CONNECT "O" TERMINAL TO THE EXPANSION. THIS FEATURE IS ONLY ACTIVE WHEN THE THE COMPRESSOR IS CONFIGURED FOR USE WITH A COMPRESSOR.

400000

### TERMINAL DESIGNATIONS FOR BOILER



NOTE: ERM WILL NOT SUPPORT SERVOED OPERATION WHEN CONFIGURED AS A BOILER. THE Y RELAY SHALL BE OFF AT ALL TIMES.


## INSTALLATION

### IMPORTANT

- The ERM is not compatible with RedLink Zone boards.
- To ensure that the ERM will receive a wireless signal at the desired installation location, follow steps 1 to 5 in the Wiring section.
- If your location has metal siding, the ERM's signal may be affected. If there is no communication or poor signal strength, consider a different location.
- A Prestige (with EIM) or VisionPRO (with or without EIM) will only allow one of the following configurations:
  1. Enrolled with a single boiler configured ERM;
  2. Enrolled with a single compressor configured ERM;
  3. Enrolled with a single boiler configured ERM and enrolled with a single compressor configured ERM.

### Wiring

1. Make sure power to compressor/boiler is off.
2. Remove the front cover by loosening the cover screw and lifting up from the bottom of the ERM.
3. Remove 3 to 4 inches of the cable's outer sheathing, then remove 3/8 to 1/2 inch of insulation from each wire.
  - **Cable prepared for wiring.**

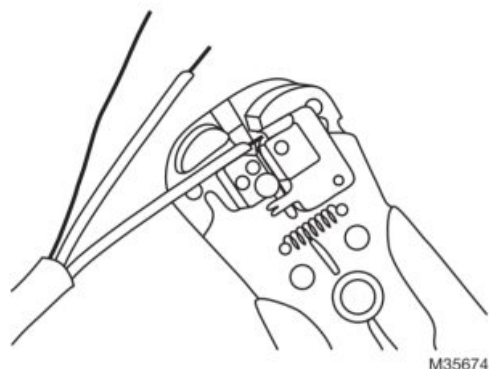


M35674


4. **For compressor applications:** Leave the jumper between terminals J and R in place.

**For boiler applications:** Remove the jumper between terminals J and R.

- **Terminal Designations showing the jumper between J and R terminals.**

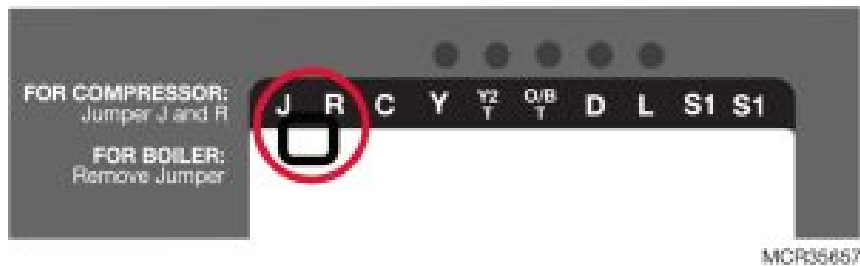


5. For compressors and boilers: Connect a 24 VAC power source to the R and C terminals on the ERM.

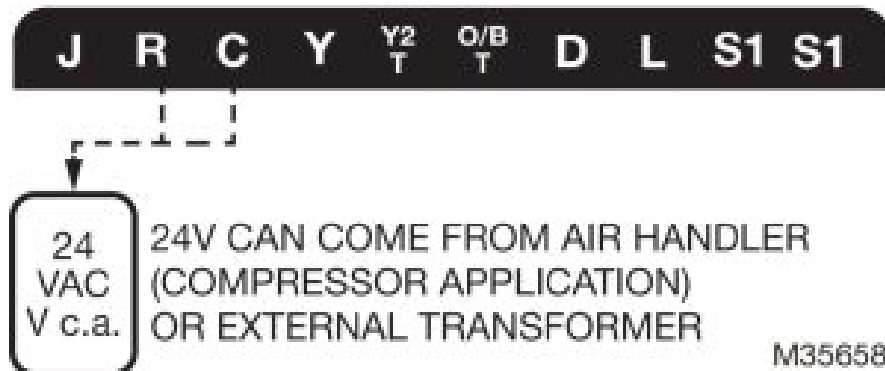


6. Connect terminals from the ERM to the appropriate terminals on the compressor/boiler control board.

#### COMPRESSOR

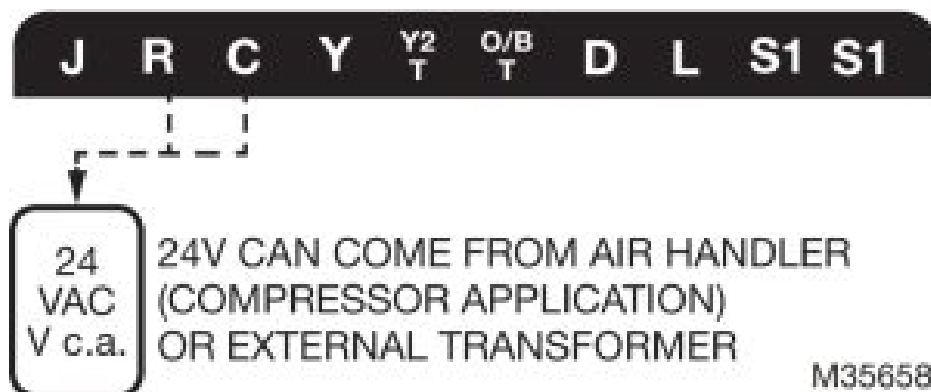

#### BOILER

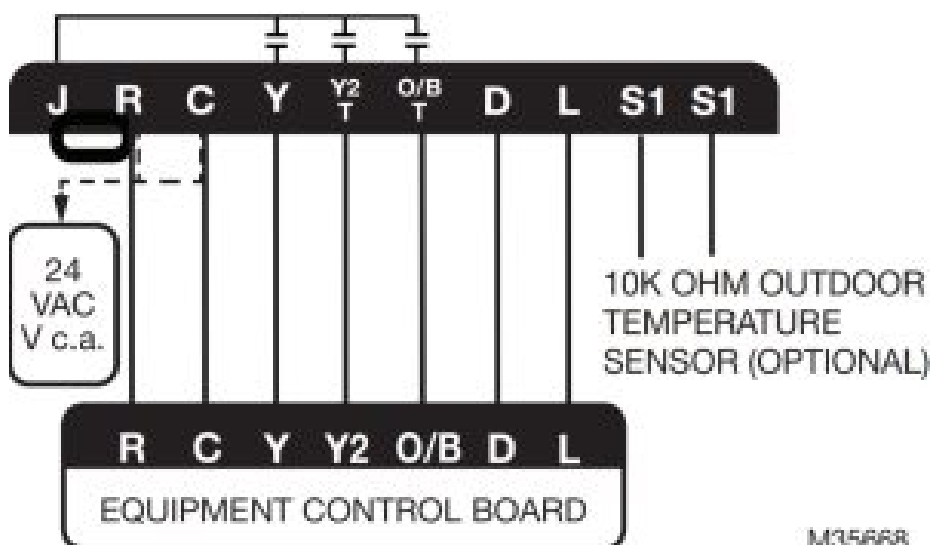

#### IMPORTANT

If the ERM was previously used with a compressor and will now be used with a boiler:

1. un-enroll the ERM at the thermostat;
2. remove the jumper on the ERM;
3. designate Radiant Heat for Heating System Type (ISU 2000) in your thermostat.

Once power is connected, the “Compressor” (or “Boiler”) LED should illuminate green. (Fig. 9)



OR



#### 7. For compressors and boilers:

Put the thermostat in pairing mode.

**New thermostat installation:** When going through the initial setup the thermostat display will ask “TSTAT CONTROLS AN EQUIP MODULE”.

This refers to an EIM, not an ERM. See note below. The next screen says “connect RedLINK Accessories?” The ERM is an accessory, so select “yes”, and then “next”.

Existing thermostat installation: Select menu – installer options – wireless manager – add device. See thermostat installation guide for assistance.

8. Once the thermostat is in pairing mode, press and quickly release the “Connect” button on the ERM.

When the ERM is connected to the system, the ERM’s “Connected” LED will be solid green and the thermostat will show “ERM” in its Wireless Manager. (Fig. 10)



OR




#### Mounting ERM

9. Use two screws and wall anchors to attach the ERM to the exterior wall near the compressor. The location

should be at least 3 feet above ground and oriented with the two wire exits facing downward. See Figs. 11 and 12.

10. Attach cover and secure with bottom screw (Fig. 13).

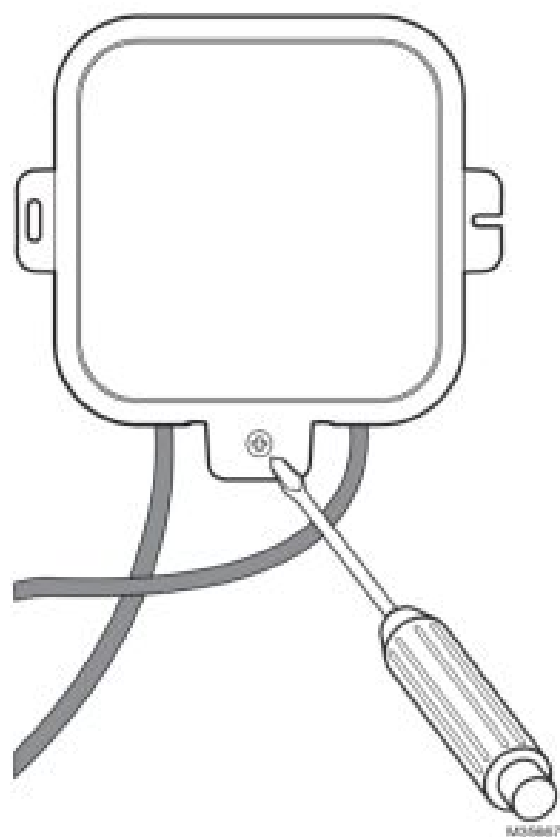

## Checkout

Power the system on. Use the thermostat to start a cooling or heating cycle, testing the ERM.

1. Restore power to the compressor/boiler as well as your RedLink system.
2. Raise/lower the set point on the zone thermostat to initiate a call for heat/cooling.
3. Observe all control devices to ensure operation and heat/cooling is active.
4. Lower/raise the set point on the thermostat to suspend the call for heat/cooling.
5. If outdoor temperature sensor is used, check thermostat to see the readings are active and accurate.
6. Be sure to set thermostat to the desired settings when checkout is complete.



## TROUBLESHOOTING

**NOTE: Disconnect RedLink™ when making changes to the device.**

### RESET PROCEDURE:

Hold down the "Connect" button on the ERM for 10 seconds. The "Connection" LED should appear red for a few seconds and go out. This indicates the unit is reset.



Symptom	Possible Cause	Action
Relays don't switch as expected	Incorrect jumper configuration	Check jumper configuration. If incorrect, unenroll from system, change jumper, then re-enroll with system.
Connected LED is red	Loss of communication with system	Verify thermostat and/or Equipment Interface Module are powered and functioning correctly.
Connected LED is off	Device is not enrolled with system	Enroll with system.
No LEDs are on	No power to device	Verify 24 VAC at R/C terminals.
No outdoor temperature shown on thermostat	No wired outdoor temperature sensor or connected to ERM, or device configured as boiler	Connect outdoor temperature sensor to S1/S1 terminals. Device only reports outdoor temperature when configured as compressor.
Thermostat shows "—" for outdoor temperature	Wired outdoor temperature sensor failed	Check sensor for short circuit or open circuit.
Outdoor temperature reading at the thermostat is too high	Sun load on sensor	Verify outdoor temperature sensor is not in direct sunlight. May need to use longer wire to mount in ideal location.
Compressor doesn't turn on, "Y" LED is blinking	5-minute compressor lockout after power cycle	Wait 5 minutes, compressor will turn on after safety timeout.
Emergency backup control doesn't function (if configured as boiler)	No valid indoor temperature sensor	Check sensor for short circuit or open circuit, or install indoor temperature sensor on S1/S1 terminals.

## SPECIFICATIONS

### Operating Ambient Temperature Range:

Compressor: -40 to +155 °F (-40 to +68 °C)


Boiler: 30 to +130 °F (-1 to +54 °C)

### Operating Relative Humidity Range: 0 – 99 %

**Electrical:** 24 VAC, 50/60 Hz.

**Dimensions:** 175 mm x 168 mm x 38 mm

**Wireless capability via RedLink™ technology**

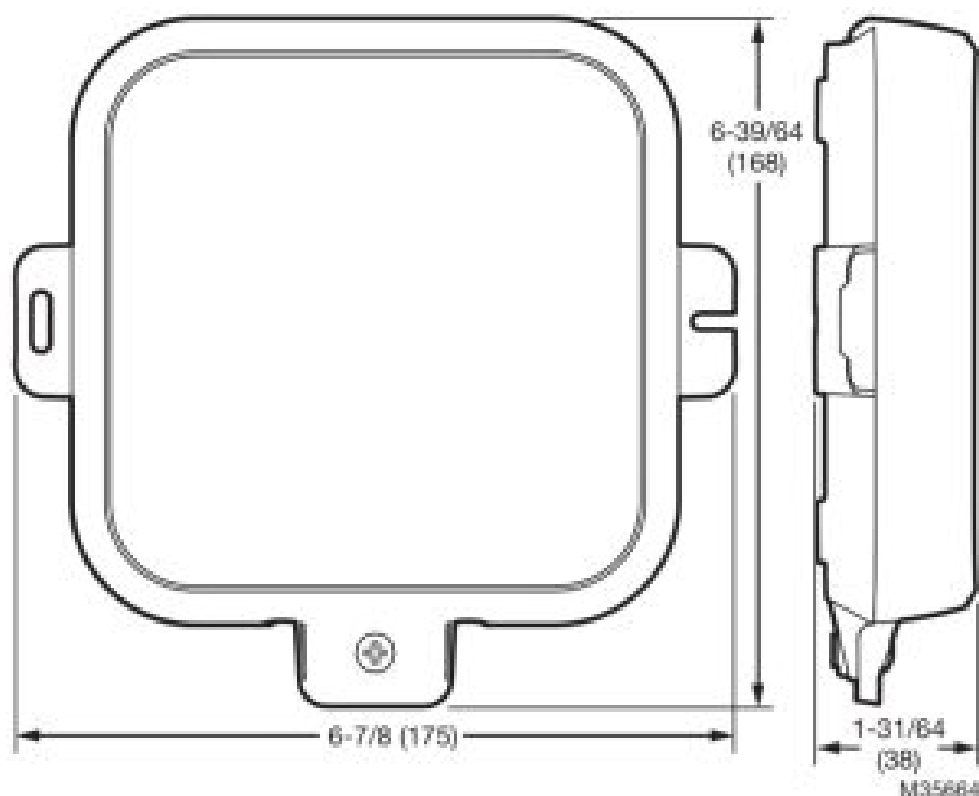

## SEPARABLE PARTS

ERM with TH8321R1001/U: YERM5220R8321

ERM with TH8321R1001/U and THM5421R1021: YERM5220RVPEIM

## FCC REGULATIONS

§ 15.19 (A)(3)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

## IC REGULATIONS

### RSS-GEN

This device complies with Industry Canada's licence-exempt RSSs.

Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

## FCC WARNING

(§15.21) (USA ONLY)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## 5 YEAR WARRANTY

Resideo warrants this product, excluding battery, to be free from defects in workmanship or materials, under normal use and service, for a period of five (5) years from the date of first purchase by the original purchaser. If at any time during the warranty period the product is determined to be defective due to workmanship or materials, Resideo shall repair or replace it (at Resideo's option).

If the product is defective, (i) return it, with a bill of sale or other dated proof of purchase, to the place from which you purchased it; or (ii) call Resideo Customer Care at 1-800-633-3991. Customer Care will make the determination whether the product should be returned to the following address: Resideo Return Goods, 1985 Douglas Dr. N., Golden Valley, MN 55422, or whether a replacement product can be sent to you.

This warranty does not cover removal or reinstallation costs. This warranty shall not apply if it is shown by Resideo that the defect was caused by damage which occurred while the product was in the possession of a consumer.

Resideo's sole responsibility shall be to repair or replace the product within the terms stated above. RESIDEO SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY, FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

THIS WARRANTY IS THE ONLY EXPRESS WARRANTY RESIDEO MAKES ON THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE FIVE YEAR DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. If you have any questions concerning this warranty, please write Resideo Customer Care, 1985 Douglas Dr, Golden Valley, MN 55422 or call **1-800-633-3991**.



Resideo Technologies, Inc.  
1985 Douglas Drive North, Golden Valley, MN 55422  
1-800-468-1502  
33-00135EFS—09 M.S. Rev. 02-20 | Printed in United States

© 2020 Resideo Technologies, Inc. All rights reserved.  
The Honeywell Home trademark is used under license from Honeywell International, Inc.  
This product is manufactured by Resideo Technologies, Inc. and its affiliates.



## [Honeywell ERM5220R Equipment Remote Module](#) [pdf] Installation Guide ERM5220R, Equipment Remote Module, REDLINK WIRELESS TECHNOLOGY