



Honeywell HTF210 Series Quietset Slim Oscillating Table Fan Owner's Manual

[Home](#) » [Honeywell](#) » Honeywell HTF210 Series Quietset Slim Oscillating Table Fan Owner's Manual 

Contents

- [1 Honeywell HTF210 Series Quietset Slim Oscillating Table Fan](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 OPERATING INSTRUCTION](#)
- [4 CLEANING AND STORAGE](#)
- [5 CONSUMER RELATIONS](#)
- [6 THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES](#)
- [7 1 YEAR LIMITED WARRANTY](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Honeywell

Honeywell HTF210 Series Quietset Slim Oscillating Table Fan



IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS FAN

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


1. Use this fan only as described in this manual. Other use not recommended as it may cause fire, electric shock or injury to persons.
2. This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
3. To protect against electric shock, do not place fan in window, immerse unit, power adapter plug or cord in water or spray with liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Turn the fan OFF and unplug the power adapter from the outlet and unit when not in use, when moving the fan from one location to another and before cleaning.
6. To disconnect the fan, first turn the unit OFF, grip the power adapter plug and pull it from the wall outlet, and grip the barrel connector and pull it from the unit. Never pull the adapter plug or barrel connector by the cord.
7. Do not operate the fan in the presence of explosive and/or flammable fumes.
8. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
9. Do not operate the fan with a damaged power adapter cord or plug or if the the product malfunctions, is dropped or damaged in any manner (see warranty).
10. Avoid contact with moving fan parts.
11. The use of attachments not recommended by the manufacturer may be hazardous.

12. Place the fan on a dry level surface.
13. Do not hang or mount fan on a wall or ceiling.
14. Do not operate if the fan housing is damaged.
15. A loose fit between the AC outlet (receptacle) and power adapter plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
16. Do not operate any fan with a damaged power adapter cord or plug. Discard any damaged fan, return the fan to the retailer where the fan was purchased, or request a return authorization to return to Kaz USA, Inc. for examination and/or repair.
17. Do not run power adapter cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic areas and where it will not be tripped over.

WARNING: To Reduce The Risk of Fire or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device, other than the one supplied. Use only the original adapter supplied with the unit. Using any other adapter may cause the fan to fail. Improper use of the fan will void the warranty.

Honeywell is a trademark of Honeywell International Inc., used under license by Helen of Troy Limited. Honeywell International Inc. makes no representation or warranties with respect to this product.

OPERATING INSTRUCTION

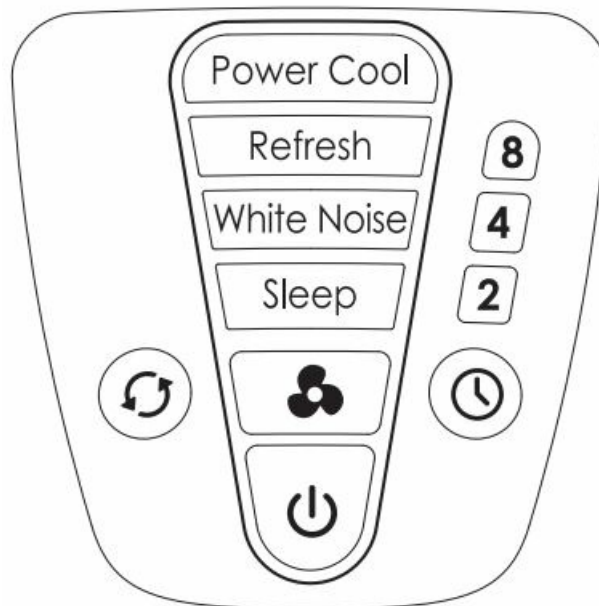

On/Off:

To turn fan on, press the Power button.



Oscillation:

To activate press the Oscillation button once. Press again to turn off.



Sound Level/Speed Control:

Press the Fan button repeatedly to increase the level.



Auto-off Timer:

This setting will automatically turn your fan off after 2, 4, or 8 hrs.

- 2 hours: Press one time
- 4 hours: Press two times
- 8 hours: Press three times
- Turn Timer off: Press four times or press the power button

CLEANING AND STORAGE

- Ensure the fan is turned off and unplugged.
- Use only a soft cloth to gently wipe the outer surfaces of the fan clean.
- To clean between the grills and fan blade area, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove the dust.
- To clean the rear grill use a soft dry cloth.
- DO NOT immerse the fan in water and never allow water to drip into the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled and covered to protect it from dust. Store the fan in a cool, dry place.

CONSUMER RELATIONS

Mail questions or comments to: Kaz USA, Inc. Consumer Relations Dept. 250 Turnpike Road Southborough, MA 01772 Call us toll-free at: 1-800-477-0457 E-mail: consumerrelations@kaz.com Or visit our website at: www.kaz.com

Please be sure to specify a model number.

Write your model number here for future reference You can find this on the label on the bottom of the fan or on the bottom right corner of the front panel of the package.

NOTE: IF YOU EXPERIENCE A PROBLEM, PLEASE CONTACT CONSUMER RELATIONS FIRST OR SEE YOUR WARRANTY. DO NOT RETURN TO THE ORIGINAL PLACE OF PURCHASE. DO NOT ATTEMPT TO OPEN THE MOTOR HOUSING YOURSELF, DOING SO MAY VOID YOUR WARRANTY AND CAUSE DAMAGE TO THE FAN OR PERSONAL INJURY.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance and could void the user's authority to operate the equipment.

1 YEAR LIMITED WARRANTY

You should first read all instructions before attempting to use this product.

- This 1 year limited warranty applies to repair or replacement of products found to be defective in material or workmanship. This warranty does not apply to damage resulting from commercial, abusive, unreasonable use or supplemental damage. Defects that are the result of normal wear and tear will not be considered manufacturing defects under this warranty. KAZ USA, INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction. This warranty applies only to the original purchaser of this product from the original date of purchase.
- At its option, Kaz will repair or replace this product if it is found to be defective in material or workmanship. Defective product should be returned to the place of purchase in accordance with store policy. Thereafter, while within the warranty period defective product may be returned to Kaz.
- This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with the instruction manual.
- Return defective product to Kaz USA, Inc. with a brief description of the problem. Include proof of purchase and a \$10 US/\$15.50 CAN check or money order for handling, return packing and shipping charges. Please include your name, address and a daytime phone number. All returns should have their assigned Return Authorization number clearly marked. You must prepay shipping charges.

Send to:

In U.S.A.:

Helen Of Troy Attn: Returns Department 1 Helen Of Troy Plaza El Paso, TX 79912 USA

In Canada:

Kaz Canada, Inc. Attn: Returns Department 510 Bronte Street South Milton, ON L9T 2X6 Canada

Please go to www.kaz.com and register your product under the Customer Care Center and receive product information updates and new promotional offers.

- For Responsible recycling, please visit: www.1800recycling.com

Documents / Resources



[Honeywell HTF210 Series Quietset Slim Oscillating Table Fan](#) [pdf] Owner's Manual
HTF210 Series Quietset Slim Oscillating Table Fan, HTF210 Series, Quietset Slim Oscillating T
able Fan, Slim Oscillating Table Fan, Oscillating Table Fan, Table Fan, Fan

References

- [RecycleNation – Search. Find. Recycle.](#)