



Honeywell PROSiXCT Door Window Sensor Instructions

[Home](#) » [Honeywell](#) » Honeywell PROSiXCT Door Window Sensor Instructions 

Honeywell PROSiXCT Door Window Sensor Instructions




Contents

- 1 Description
- 2 Preparation
- 3 Parts Required
- 4 Instructions
- 5 Documents / Resources
 - 5.1 References
- 6 Related Posts

Description

This page shows battery replacement for a Door/Window Sensors model Honeywell PROSiXCT. The larger of the two pieces is the sensor and the smaller is the magnet.

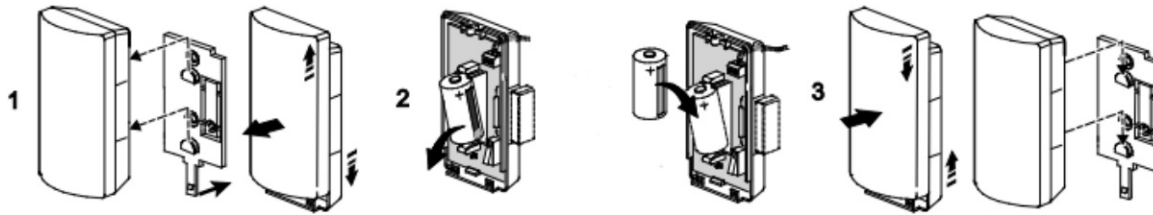

Because there are many different versions of window/door sensors, it is important to remove the sensor cover first to determine what kind of batteries are required for your equipment. We advise you to check before purchasing batteries.

Preparation

IMPORTANT customers who use myadt.ca*** Before removing the sensor, place the panel on test mode through myadt.ca. After logging in:

1. Tap [Home]
2. Tap [Place on Test]
3. Enter your expiration date and time
4. Enter your password
5. Tap [Yes-Proceed]

Parts Required


- One CR123A lithium battery

Instructions

1. Remove the sensor from the back plate by sliding it up or down, depending on how it's positioned
2. The alarm panel may begin to beep, you may choose to silence the alarm by entering your code
3. Remove the old battery and replace with a new one
4. Position the sensor cover slightly above the backplate and slide it down into place, you should hear a click
5. Arm and disarm the alarm to clear panel alert

If the low battery alert does not clear or if the panel shows sensor tamper, walk through the steps above once more. It could be either the batteries or sensor cover are not on properly

Documents / Resources

	Honeywell PROSiXCT Door Window Sensor [pdf] Instructions PROSiXCT Door Window Sensor, PROSiXCT, Door Window Sensor, Window Sensor, Sensor
---	--

References

- [🌐 Welcome to MyADT.ca || MyADT.ca](#)
- [🌐 Self Service Account Management Login](#)
- [User Manual](#)