



# Honeywell RT10W Rugged Tablet with Windows 10 IoT User Guide

[Home](#) » [Honeywell](#) » Honeywell RT10W Rugged Tablet with Windows 10 IoT User Guide 

## Yealink UVC40 USB Video Conferencing Endpoint User Guide



### Contents

- 1 Out of the Box
- 2 Memory Card Specifications
- 3 Tablet Features
- 4 Install a Micro SIM Card
- 5 Install a microSD Card (Optional)
- 6 Install the Battery
- 7 Charge the Tablet
- 8 Set Up the Tablet for the First Time
- 9 Turn the Power On or Off
- 10 Battery Replacement
  - 10.1 Hot Swap
- 11 Sleep Mode
- 12 Adjust the Display Sleep Time
- 13 About the Home Screen
  - 13.1 Hottab Utility
- 14 Navigation and Function Buttons
- 15 Scan a Barcode
- 16 Restart the Tablet
- 17 Support
- 18 Documentation
- 19 Limited Warranty
- 20 Trademarks
- 21 Patents
- 22 Disclaimer
- 23 Documents / Resources
- 24 Related Posts

## Out of the Box

Make sure that your shipping box contains these items:

- RT10W rugged tablet  
(Model RT10WL00 or RT10WL10)
- Rechargeable 7 VDC Li-polymer battery
- Power supply (power cord sold separately)
- Stylus
- Product Documentation

 
 
 
If you ordered accessories for your tablet, verify that they are also included with the order. Be sure to keep the original packaging in case you need to return the tablet for service.

**Note:** *RT10WL00 models do not include a WWAN radio.*

## Memory Card Specifications

Honeywell recommends the use of Single Level Cell (SLC) industrial- grade microSD™ or microSDXC™ memory cards with RT10 tablets for maximum performance and durability. Contact a Honeywell sales representative for additional information on qualified memory card options.

## Tablet Features


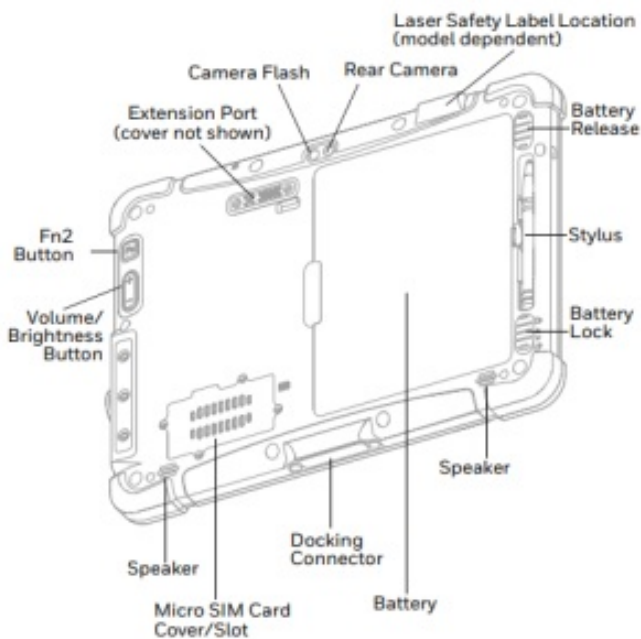
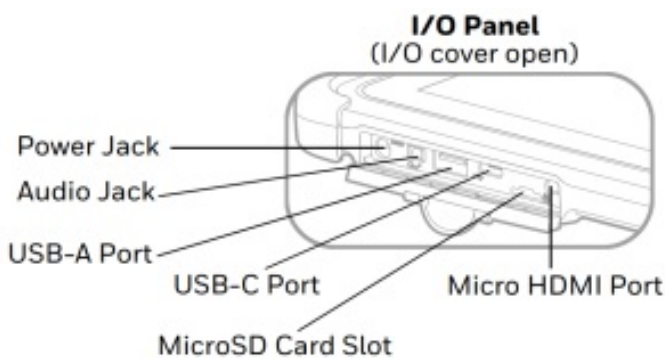
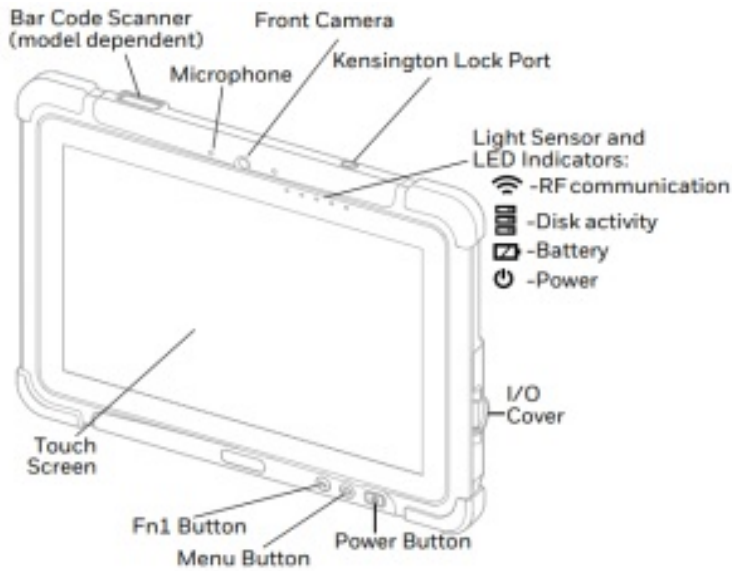






## Install a Micro SIM Card



Only RT10WL10 (WWAN) models support micro SIM card use for cellular phone features.



          **Do not squeeze or disconnect cables when removing or inserting the 3G/LTE module.**

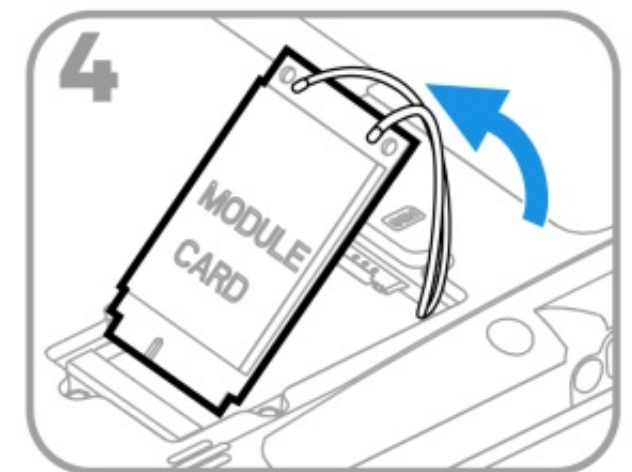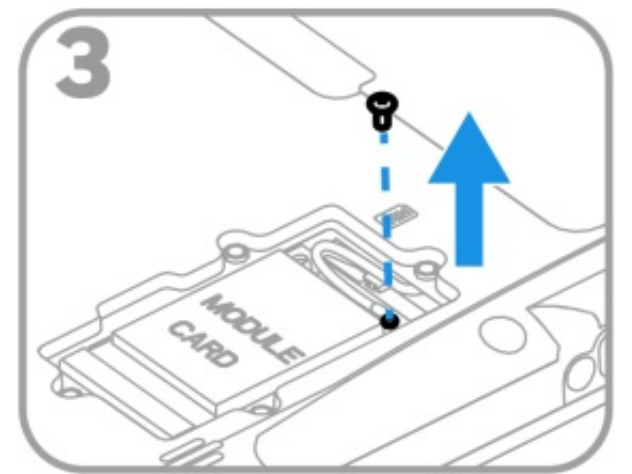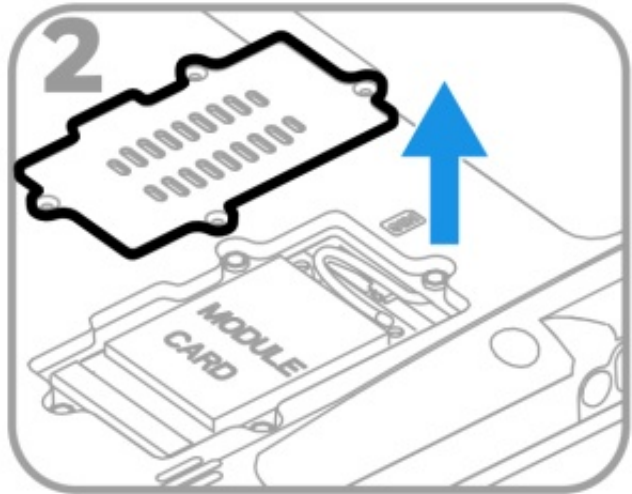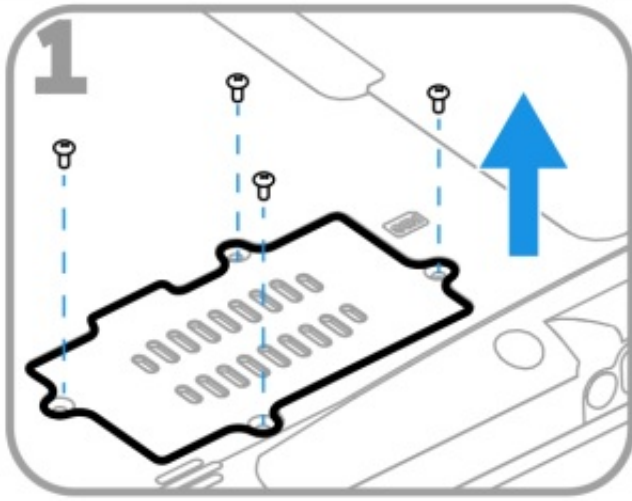

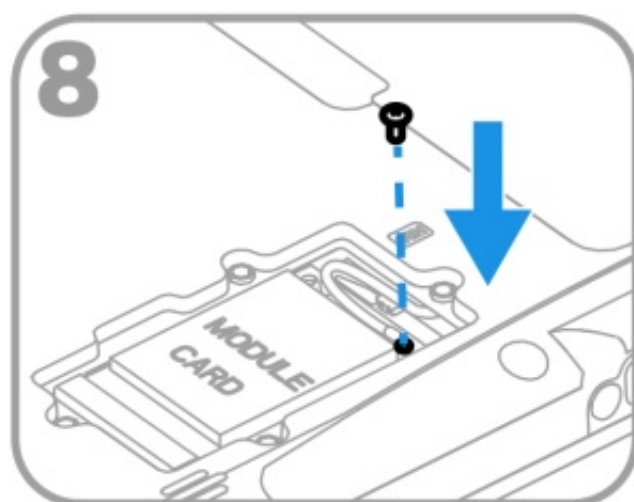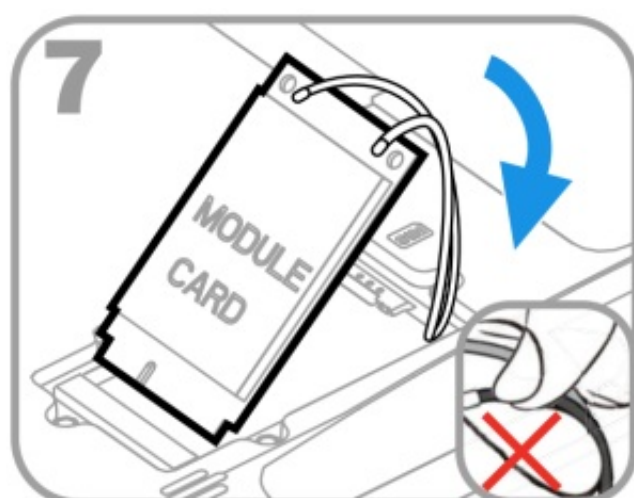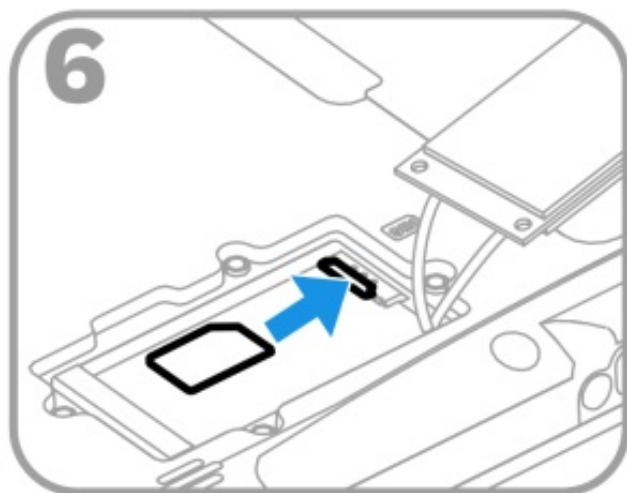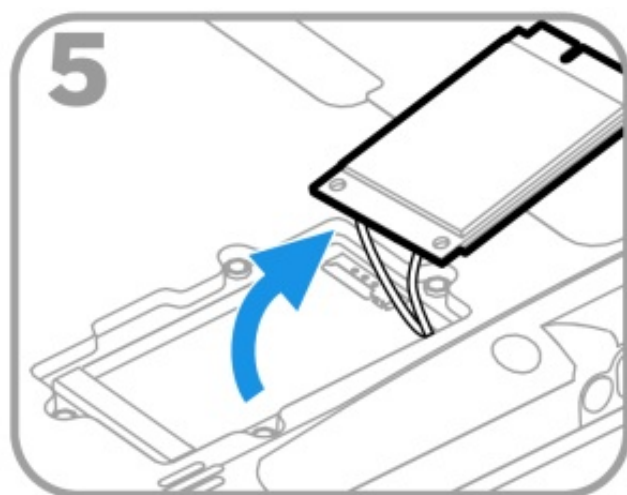


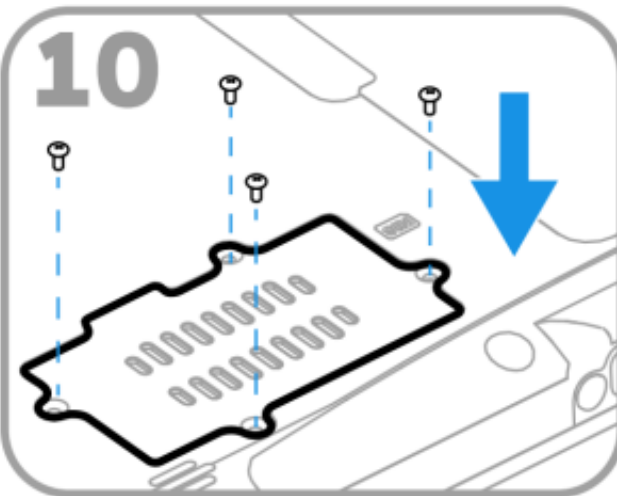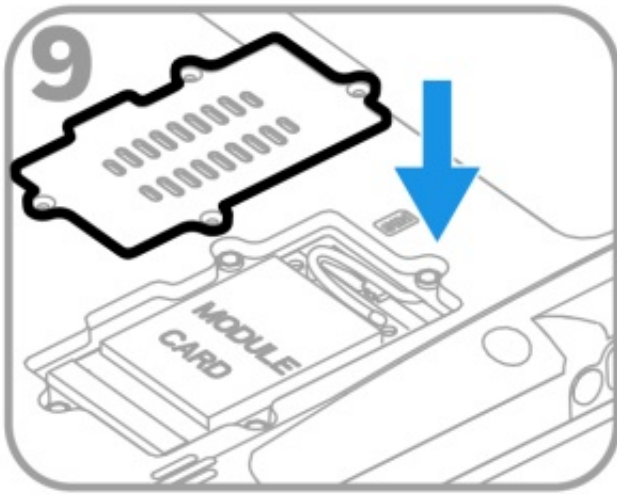

**Note:** Always power off the tablet before attempting to install or remove a card

### Install a microSD Card (Optional)

 
**Note:** Format the microSD card before initial use.

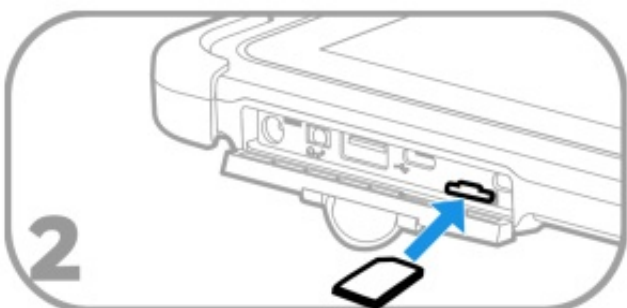

**Note:** Always power off the tablet before attempting to install or remove a card.


## Install the Battery

 The RT10W ships with a Li-poly 7.7 VDC, 45.43 watt-hour battery manufactured for Honeywell International Inc.

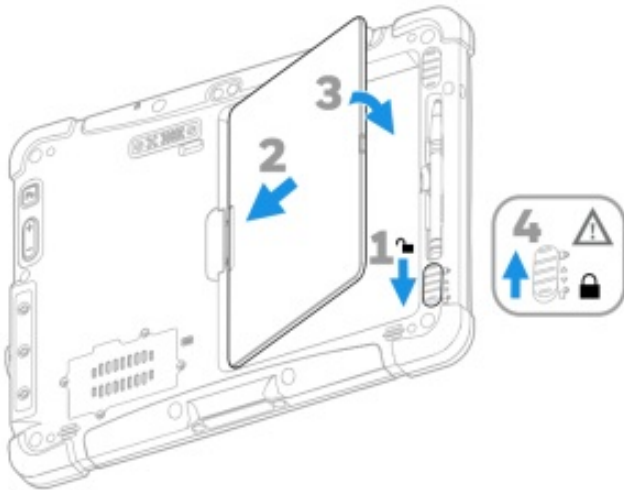


## Charge the Tablet

The RT10 rugged tablet ships with a partially charged battery. Charge the battery for a minimum of 6 hours. We recommend using AC power when you start the tablet for the first time.

 **We recommend use of Honeywell Li-poly or Li-ion battery packs. Use of any non-Honeywell battery may result in damage not covered by the warranty.**  
**Ensure all components are dry prior to placing the battery in the computer. Mating wet components may cause damage not covered by the warranty.**



## Set Up the Tablet for the First Time

 **If a power interruption occurs during Windows set up, access the Recovery menu by pressing the Fn1 button.**

The first time you power on the tablet, a Welcome screen appears. Once setup is complete, the Welcome screen no longer displays on startup.

1. Press and hold the **Power** button for approximately 3 seconds until the blue LED power indicator lights up.

2. Using your finger or the stylus, select your region and then touch **Yes**.
3. Follow the on-screen prompts to finish setting up the table.

## Turn the Power On or Off

To turn the tablet on:

- Press and hold the **Power** button for approximately 3 seconds until the blue LED power indicator lights





**Do not press the power button repeatedly.**



**Do not attempt to connect or disconnect the AC adapter or press the tablet's screen, buttons or external keyboard/mouse until the Disk Activity indicator turns off.**



To turn the tablet off:

1. Touch .
2. Touch .
3. Touch **Shut Down**

## Battery Replacement

### Hot Swap

The RT10W Tablet has an internal backup battery that is charged with the main battery. This battery cannot be removed and requires adequate power for main battery hot swapping. When the backup battery is fully charged, the tablet can sustain up to 5 minutes of runtime for battery hot-swapping.

1. Press the Menu button or double-tap  to open the Hottab
2. Touch  **Setting** to check the power level of the backup
3. If the backup battery level is at least medium, remove the main battery. Otherwise, charge the tablet until the backup battery level is medium or higher before removing the main battery.
4. Insert a new, fully charged battery into the battery



**Charge the built-in backup battery every two months to maintain battery health and prevent possible issues from battery over discharge.**

## Sleep Mode

Sleep mode automatically turns the touch panel display off and locks the tablet to save battery power when the tablet is inactive for a programmed period of time.



1. Press and hold the **Power** button to wake the



2. Swipe up from the bottom of the screen to unlock the tablet.

## Adjust the Display Sleep Time

To adjust the amount of time before the display sleeps after inactivity;

1. Touch .
2. Touch .
3. Touch **Personalization** and then **Lock screen**.
4. Scroll down and touch **Screen timeout settings**.
5. Select an amount of time from the drop-down
6. Close the window to return to the Home



## About the Home Screen


To learn how to customize the Home screen, see the user guide.






## Hottab Utility

Use Hottab to control all main functions of your tablet. When Windows starts up Hottab runs in the background.




To display the Hottab interface, press the  button or double-tap  on the Home screen. The Hottab interface will display on the right side of the Home screen.


 
Icon	Description
	Configure short cuts to quickly access progremes.

Icon	Description
	Take a picture, record a video, or adjust camera settings.
	Enable/disable hardware functions such as Wi-Fi, WWAN (3G/4G/LTE), GPS, Bluetooth, camera, LED indicators, barcode reader, RFID reader, and GPS antenna outputting.
	Display battery status and device settings such as power management and function key mapping.

## Navigation and Function Buttons

For button locations, see Table Features.


Button	Name	Description
	Fn1	Programmable shortcut button. (The default is the web browser.)
	Menu	Display or hides the Hottab interface.
	Power	See page 8

 
Button	Name	Description
	Fn2	Programmable shortcut button. (The default is the camera app.)
	Volume/ Brightness	Raise or lower the volume or brightness

## Scan a Barcode

For optimum performance, avoid reflections by scanning the barcode at a slight angle.

1. Press  or double-tap  to open the Hottab
2. Touch  **Device ON/OFF.**

3. If the  **Barcode** icon is white, touch it to enable the barcode (If the icon is orange, it is already enabled.)
4. Point the tablet at the
5. Press the Fn2 button. Center the aiming beam over the
6. Release the Fn2 button

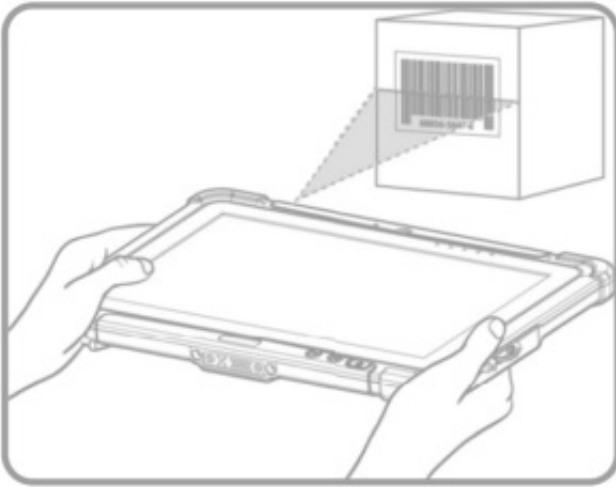

## Restart the Tablet

You may need to restart the tablet to correct conditions where an application stops responding to the system or the tablet seems to be locked up.

- Press and hold the **Power** button for 6 seconds or

## Support

To search our knowledge base for a solution or to log into the Technical Support portal and report a problem, go to [www.hsmcontactsupport.com](http://www.hsmcontactsupport.com).

## Documentation

Product documentation is available at [www.honeywellaidc.com](http://www.honeywellaidc.com).

## Limited Warranty

For warranty information, go to [www.honeywellaidc.com](http://www.honeywellaidc.com) and click **Resources > Product Warranty**.

## Trademarks

Microsoft, Windows and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/ or other countries.

## Patents

For patent information, see [www.hsmpats.com](http://www.hsmpats.com).


## Disclaimer

Honeywell International Inc. (“HII”) reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all Honeywell International Inc. (“HII”) reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made.

Copyright @ 2020 Honeywell International Inc. All rights reserved.



**Documents / Resources**

	<p><a href="#">Honeywell RT10W Rugged Tablet with Windows 10 IoT</a> [pdf] User Guide RT10W, Rugged Tablet with Windows 10 IoT</p>
---	--