



Honeywell RTH9600WF Touchscreen Programmable Thermostat User Guide

[Home](#) » [Honeywell](#) » Honeywell RTH9600WF Touchscreen Programmable Thermostat User Guide 

Contents

1 Honeywell RTH9600WF Touchscreen Programmable Thermostat User Guide

1.1 Install your thermostat

- 1.1.1 Switch OFF power to your heating/cooling system
- 1.1.2 Remove old thermostat faceplate and leave wires connected
- 1.1.3 Label wires
- 1.1.4 Remove wallplate
- 1.1.5 Mount wallplate for thermostat
- 1.1.6 Connect wires
- 1.1.7 Attach thermostat to wallplate
- 1.1.8 Switch heating/cooling system ON
- 1.1.9 Select setup

1.2 Connect to your Wi-Fi network

- 1.2.1 Connect the Wi-Fi network

1.3 Register online for remote access

- 1.3.1 Open the Total Connect Comfort web site
- 1.3.2 Login or create an account
- 1.3.3 Register your thermostat

2 Documents / Resources

2.1 References

3 Related Posts


Honeywell RTH9600WF Touchscreen Programmable Thermostat User Guide

Honeywell Home



Quick Start Guide

Smart Color Touchscreen Programmable Thermostat

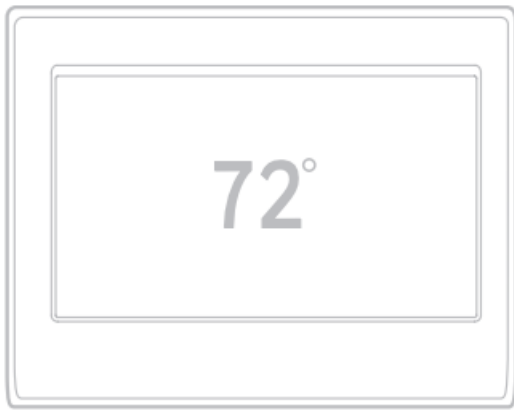

Search for local rebates: [HoneywellHome.com/Rebates](https://www.honeywellhome.com/Rebates)

Welcome

Getting set up and ready is simple. Read before installing.

Before you begin



View the installation video
at [wifithermostat.com/
support](https://wifithermostat.com/support)



You will need your
camera to take a
picture of your old wire
connections.



You will also need:


- Small screw driver
- Pen
- Thermostat ID card
- Your home Wi-Fi network password

Install your thermostat

Switch OFF power to your heating/cooling system

1.1a **Important!** To protect your equipment, switch OFF the power to your heating/ cooling system at the breaker box or the system switch.

1.1b Confirm power is OFF. Try to turn on heating/ cooling equipment by changing temperature on your old thermostat. Your power is OFF if your system does not turn ON.

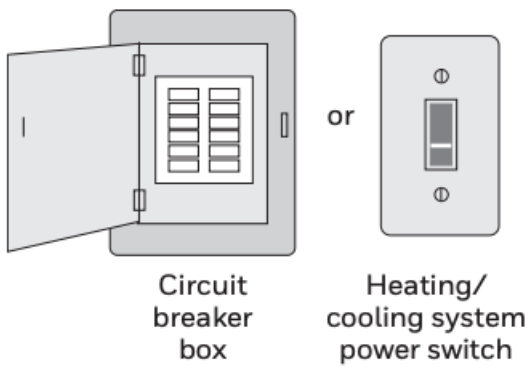

! *This thermostat works with common 24 volt systems such as forced air, hydronic, heat pump, oil, gas, and electric. It will not work with millivolt systems, such as a gas fireplace, or with 120/240 volt systems such as baseboard electric heat.*

Remove old thermostat faceplate and leave wires connected



1.2a Take a picture of the wire connections for later reference.




1.2b If no wire is connected to a terminal labeled C or no C terminal exists on the old thermostat, view the Alternate Wiring videos at wifithermostat.com/videos

Important! C wire is required and is the power source for your thermostat. Without a C wire, your thermostat will not power up.



Note: You will need a picture of your wire connections to wire the new thermostat.

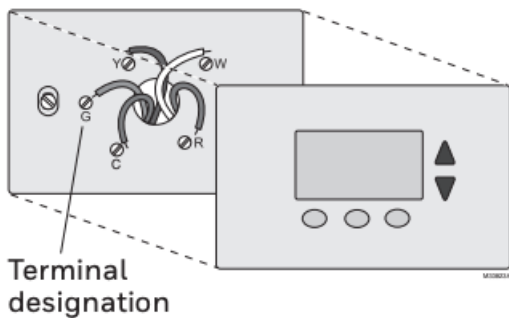

If you have an older thermostat with a sealed mercury tube, see warning page for proper disposal instructions.


Label wires

Do **not** label by wire color.

Use the supplied sticky tags to label each wire as you disconnect it. Label wires according to old thermostat terminal designations, **not** by wire color.

Note: If no tag matches a terminal designation, write the appropriate letter on a blank sticky tag.

Note: Wrap the wires around a pencil to prevent them from falling back into the wall.

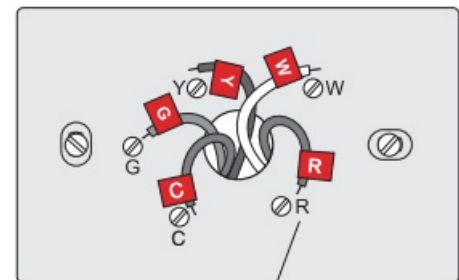

Remove wallplate

Remove the old wallplate from the wall after all wires are labeled and disconnected.


Mount wallplate for thermostat

Mount your new wallplate using screws and anchors included with the thermostat.

If necessary:

- Drill 3/16-in holes for drywall
- Drill 7/32-in holes for plaster

Note: You may be able to use your existing wall anchors. Hold the wallplate up to the existing anchors to check for alignment.

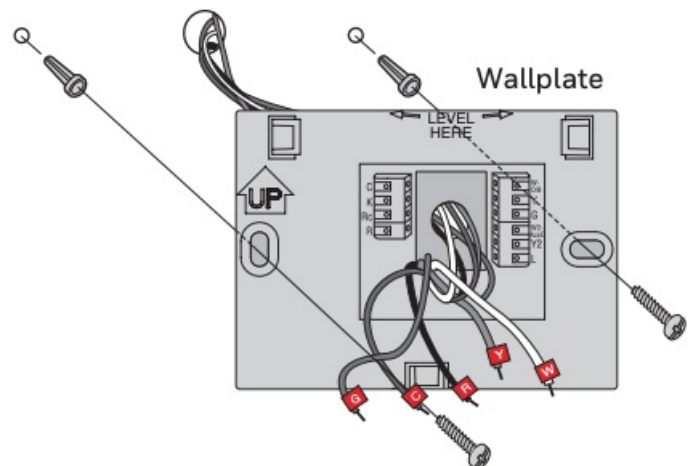

Electrical Ratings

Terminal	Voltage (50/60Hz)	Max. Current Rating
W-O/B	20-30 Vac	1.0 A
W2 (Aux/E)	20-30 Vac	1.0 A
Y Cooling	20-30 Vac	1.0 A
Y2 Cooling	20-30 Vac	1.0 A
G Fan	20-30 Vac	0.5 A

Connect wires

Important! C wire is required and is the power source. Without a C wire, your thermostat will not power up. See the **C Wire Addendum** document for more information.



View the Alternate Wiring videos at wifithermostat.com/videos

1.6a Starting with the C Wire, match the sticky tag on the wire to the terminal labels.


1.6b Straighten wire and gently slide into terminal hole until it clicks into place. (If you need to remove a wire, use a pen tip to press the terminal release and then pull the wire out.)

Note: Refer to the wiring picture you took in Step 1.2.

Tip: To make it easier to slide the wire into place, use a pen tip to hold down the terminal release.

Note: The wiring for your application might be different than the wiring shown below.

Terminal release

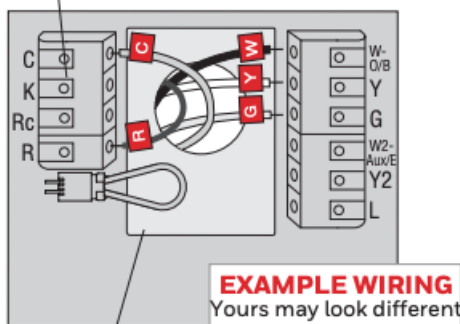

Remove jumper loop **ONLY** if you have both **R** and **Rc** wires.



Labels don't match or have heat pump system?

See *User Guide*.

1.6c In the image on the right, check the box next to each connection. You will use this checklist in Step 1.9.

1.6d Verify wire is firmly secured by gently pulling on wire.

1.6e Repeat steps a–d for all other wires.

1.6f Push any excess wire back into the wall opening after all wires are installed.

Note: The **L** terminal on the lower right is used only for Heat Pump systems.

Note: If the old thermostat for Heat Pump System has separate wires on **Aux** and **E**, use a wire nut to attach both wires to a separate wire. Slide this third wire into the **W2-Aux/E** terminal.

Important!

Check the box for each wire you connect. You will need this information in Step 1.9.

C	<input type="checkbox"/>	<input type="checkbox"/>	W-O/B
K	<input type="checkbox"/>	<input type="checkbox"/>	Y
Rc	<input type="checkbox"/>	<input type="checkbox"/>	G
R	<input type="checkbox"/>	<input type="checkbox"/>	W2-Aux/E
		<input type="checkbox"/>	Y2
		<input type="checkbox"/>	L




Labels don't match or have heat pump system?

See *User Guide*.

Attach thermostat to wallplate

Align the thermostat with wallplate and snap into place.

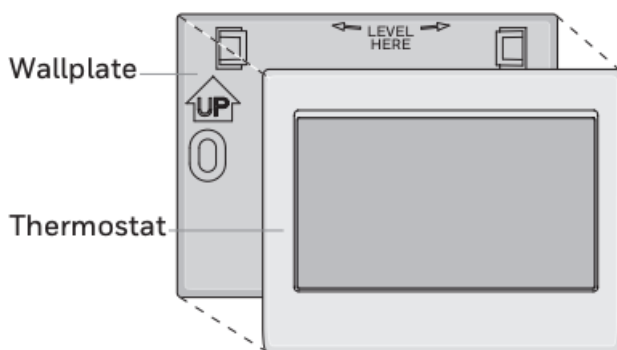


Switch heating/cooling system ON

Important!

1.8a Verify that the C wire is connected at the thermostat and at the heating/cooling system.

1.8b Make sure the heating/ cooling system door is firmly secured.


1.8c Switch power back ON for your heating/cooling system at the breaker box or its power switch.

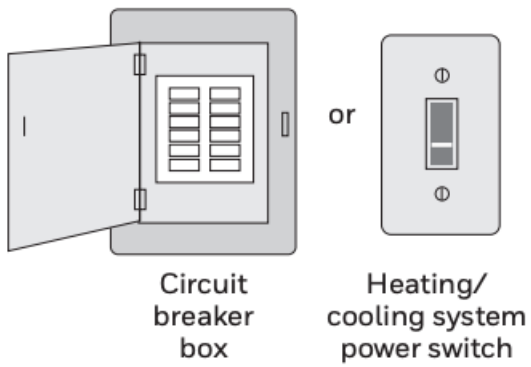

Turn over ►

Need help?

Visit honeywellhome.com/wifi-thermostat or call 1-855-733-5465 for assistance before returning the thermostat to the store.

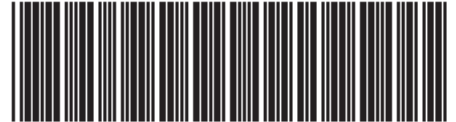

33-00595-02



resideo

www.resideo.com

Resideo Technologies, Inc.
1985 Douglas Drive North, Golden Valley, MN 55422

33-00595—02 M.S. 09-21 | Printed in Mexico

© 2021 Resideo Technologies, Inc. All rights reserved. The Honeywell Home trademark is used under license from Honeywell International, Inc. This product is manufactured by Resideo Technologies, Inc. and its affiliates.

Select setup

Before connecting to your Wi-Fi network, you need to set initial thermostat options to define your heating/cooling system:

- Language
- Home or business

Follow prompts on the screen to select appropriate options.

1.9a Touch the language you want the thermostat to display, then touch **Next**.






1.9b Select Home or Business application, then touch **Next**.

1.9c Touch **Next** or name the thermostat location—touch THERMOSTAT and follow the rest of the instructions.

1.9d Select what your thermostat will control and touch **Next**.

1.9e Select your system type and touch **Next**. The system type determines other selection for completing initial setup. Use the checklist from Step 1.6 when making selections.

1.9f Touch **Next** after making selections on each screen.

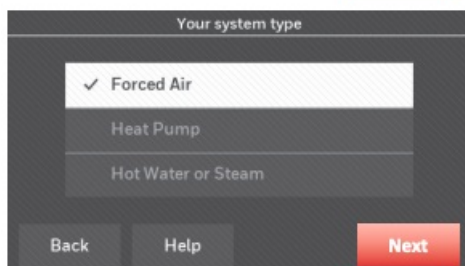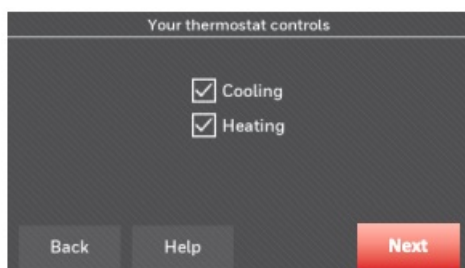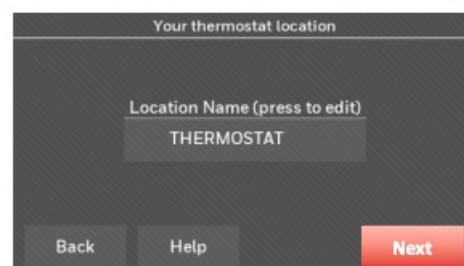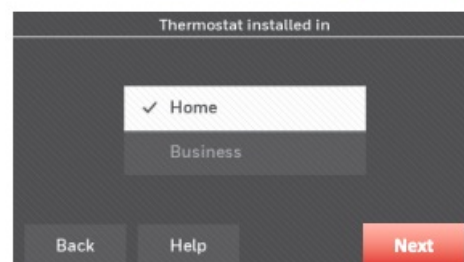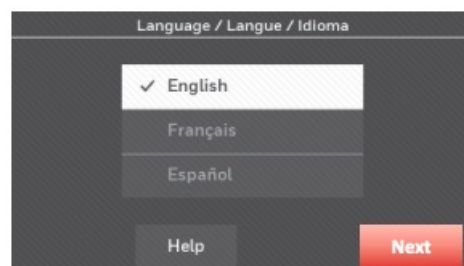

1.9g Touch **Done** on the last screen. The thermostat displays an option to connect to your Wi-Fi network.

Connect to your Wi-Fi network

Connect the Wi-Fi network

After touching **Done** on the final screen of the initial set up (Step 1.9g), the thermostat displays an option to connect to your Wi-Fi network.

2.1a Touch **Yes** to connect the thermostat to your Wi-Fi network. The screen displays the message “Searching for wireless networks. Please wait...” after which it displays a list of all Wi-Fi networks it can find.



Note: If you cannot complete this step now, touch **I'll do it later**. The thermostat will display the home screen. Complete this process by selecting **MENU > Wi-Fi Setup**. Continue with Step 2.1b.



2.1b Touch the name of the network you want to use. The thermostat displays a password page.

2.1c Using the keyboard, touch the characters that spell out your home network password.

2.1d Touch **Done**. The thermostat displays “Connecting to your network. Please wait...” then shows a “Connection Successful” screen.

Note: If your home network is not shown on the list, touch **Rescan**.

2.1e Touch **OK** to display the registration information screen.

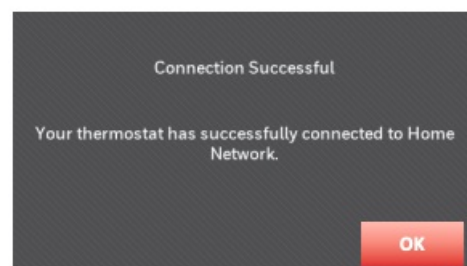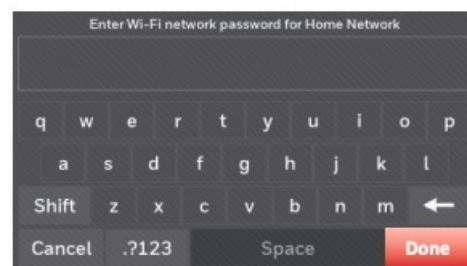

Getting Help

If you get stuck...

At any point in the Wi-Fi connection process, restart the thermostat by removing the thermostat from the wallplate, wait for 5 seconds, and snap it back into place. From the home screen, touch **SETTINGS** > **Wi-Fi Setup** > **Choose a Network**. Continue with Step 2.1b.

Need more help?

Find additional information in the *User Guide*.



Register online for remote access

To register your thermostat, follow the instructions on Step 3.1.

Note: The Register Online screen remains active until you complete registration and/or touch **Done**.

Note: If you touch **Done** before you register online, your home screen displays an orange alert button telling you to register. Touching that button displays registration information and an option to snooze the task.

To view and set your thermostat remotely, you must have a Total Connect Comfort account. Follow the instructions below.

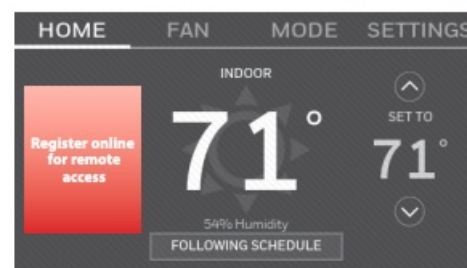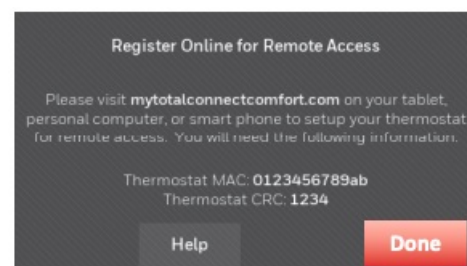

View the Thermostat Registration video at honeywellhome.com/wifi-thermostat

Open the Total Connect Comfort web site

Go to www.mytotalconnectcomfort.com



Login or create an account

If you have an account, click **Login**

— or —

click **Create An Account**.

3.2a Follow the instructions on the screen.

3.2b **Check your email** for a response from My Total Connect Comfort. This may take several minutes.

Note: If you do not receive a response, check your junk mailbox or use an alternate e-mail address.

3.2c **Follow activation instructions** in the email.

3.2d Log in.


Register your thermostat



After you are logged in to your Total Connect Comfort account, register your thermostat.


3.3a Follow the instructions on the screen. After adding your thermostat location you must enter your thermostat's unique identifiers:

- MAC ID
- MAC CRC

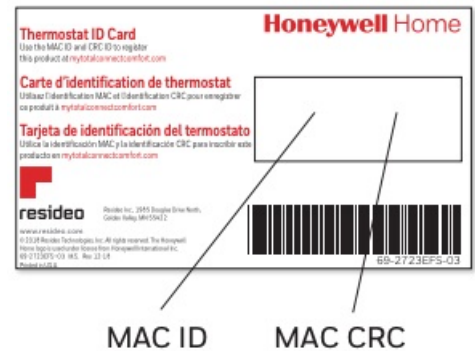

Note: These IDs are listed on the Thermostat ID Card included in the thermostat package. The IDs are not case sensitive.

3.3b Notice that when the thermostat is successfully registered, the Total Connect Comfort registration screen will display a SUCCESS message.

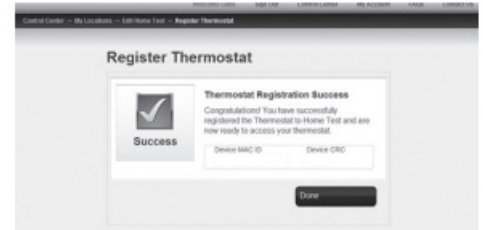

You can now control your thermostat from anywhere through your laptop, tablet, or smartphone.



Total Connect Comfort free app is available for Apple® iPhone®, iPad® and iPod touch® devices at iTunes® or at Google Play® for all Android™ devices.



This thermostat works with common 24 volt systems such as forced air, hydronic, heat pump, oil, gas, and electric. It will not work with millivolt systems, such as a gas fireplace, or with 120/240 volt systems such as baseboard electric heat.



CAUTION: MERCURY NOTICE If this product is replacing a control that contains mercury in a sealed tube, do not place the old control in the trash. Contact your local waste management authority for instructions regarding recycling and proper disposal.




NOTICE: To avoid possible compressor damage, do not run air conditioner if the outside temperature drops below 50°F (10°C).



CAUTION: ELECTRONIC WASTE NOTICE The product should not be disposed of with other household waste. Check for the nearest authorized collection centers or authorized recyclers. The correct disposal of end-of-life equipment will help prevent negative consequences for the environment and human health.

The operation of this equipment is subject to the following two conditions: (1) this equipment or device may not cause harmful interference, and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

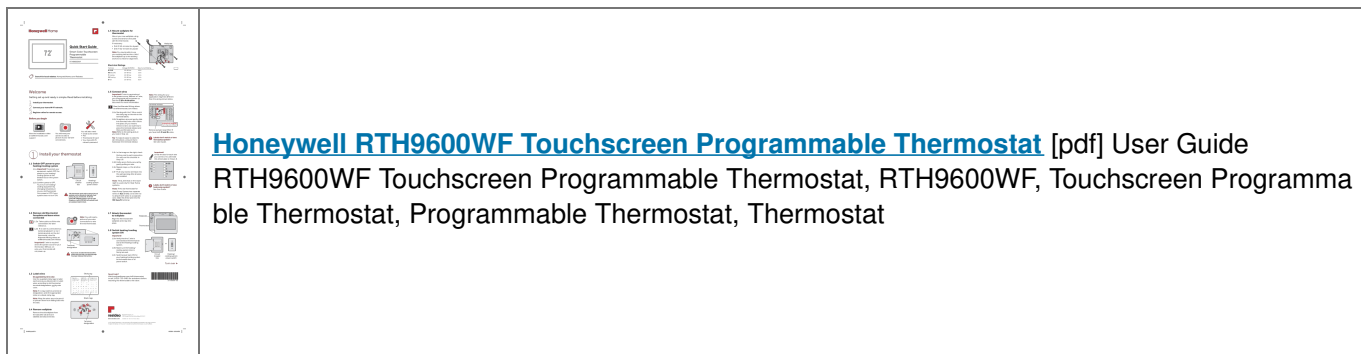

References

- [H Utility Rewards Programs](#)
- [H WiFi Thermostats | Honeywell Home](#)
- [H Honeywell | Total Connect Comfort](#)
- [WiFi Thermostats | Honeywell Home](#)
- [WiFi Thermostats | Honeywell Home](#)
- [H Honeywell | Total Connect Comfort](#)
- [Smart Home Products and Systems | Resideo](#)
- [User Manual](#)