



Honeywell T100R Thermostat with Remote Sensor Installation Guide

[Home](#) » [Honeywell](#) » Honeywell T100R Thermostat with Remote Sensor Installation Guide 

Honeywell

T100R
THERMOSTAT WITH REMOTE SENSOR

Contents

- [1 INSTALLATION INSTRUCTIONS](#)
- [2 SPECIFICATIONS](#)
- [3 INSTALLATION AND ADJUSTMENTS](#)
- [4 TEMPERATURE REFERENCE GUIDE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

INSTALLATION INSTRUCTIONS

CONSTRUCTION

The Resideo T100R thermostatic control with the remote sensor is designed for hydronic heating systems where remote sensing is required. The T100R is equipped with a 6' 8" (2 meters) long capillary with the sensor attached at the end. A strap clamp is provided for attaching the sensor externally to the heating system pipe.

The control head is equipped with a knurled ring for attachment to the control valve. The control head is calibrated with a scale setting from 0 to 12. Two temperature ranges are available for covering the adjustment ranges from 44 to 122 °F (10 to 50 °C), and 86 to 158 °F (30 to 70 °C). The T100R is normally used with the V135 for diverting or mixing, or with the V100 valves for straight-through fluid flow applications. It is suitable for mounting on V100 or V135 valves from 3/4" to 1-1/4" sizes.

CONSTRUCTION

The thermostat housing is made from high-quality engineering plastic with low heat conductivity for maximum efficiency.

The sensor is liquid filled and its internal parts are designed for sensitive temperature regulation.

SPECIFICATIONS

Attachment ring nut thread size: M30 x 1.5

Hysteresis: 0.7 °F (0.3 °C)

Time constant (sensor reaction time): T=10 sec.

Capillary length: 6' 8" (2 meters)

Max. temp. (at valve attachment ring):

248 °F (120 °C)

Max. temp. (at sensing bulb):

Set point 104 °F (+40 °C)

T100R adjustment ranges:


50 – 122 °F (10 – 50 °C)

86 – 158 °F (30 – 70 °C)

INSTALLATION AND ADJUSTMENTS

1. When installing the T100R controls, make sure that the knurled ring is tightened firmly to the valve body.

Improper mounting of the control will cause inaccurate functioning of the control. For proper installation, see Fig. 1.

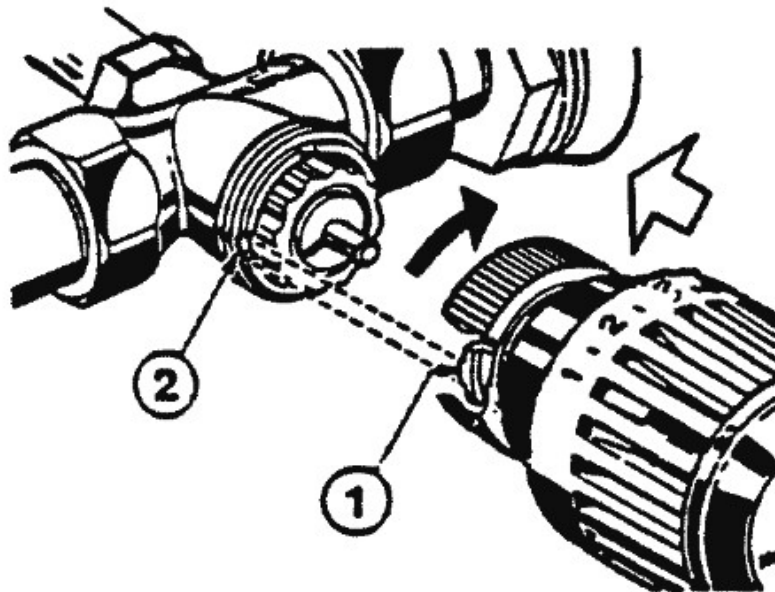


Scerw on the thermostatic unit, the came 1 catching into the groves 2



33-00559-01

2. For accurate temperature regulation, make sure that the strap clamp is firmly tightened and good contact is made between the pipe and the sensor. For proper sensor attachment, see Fig. 2.

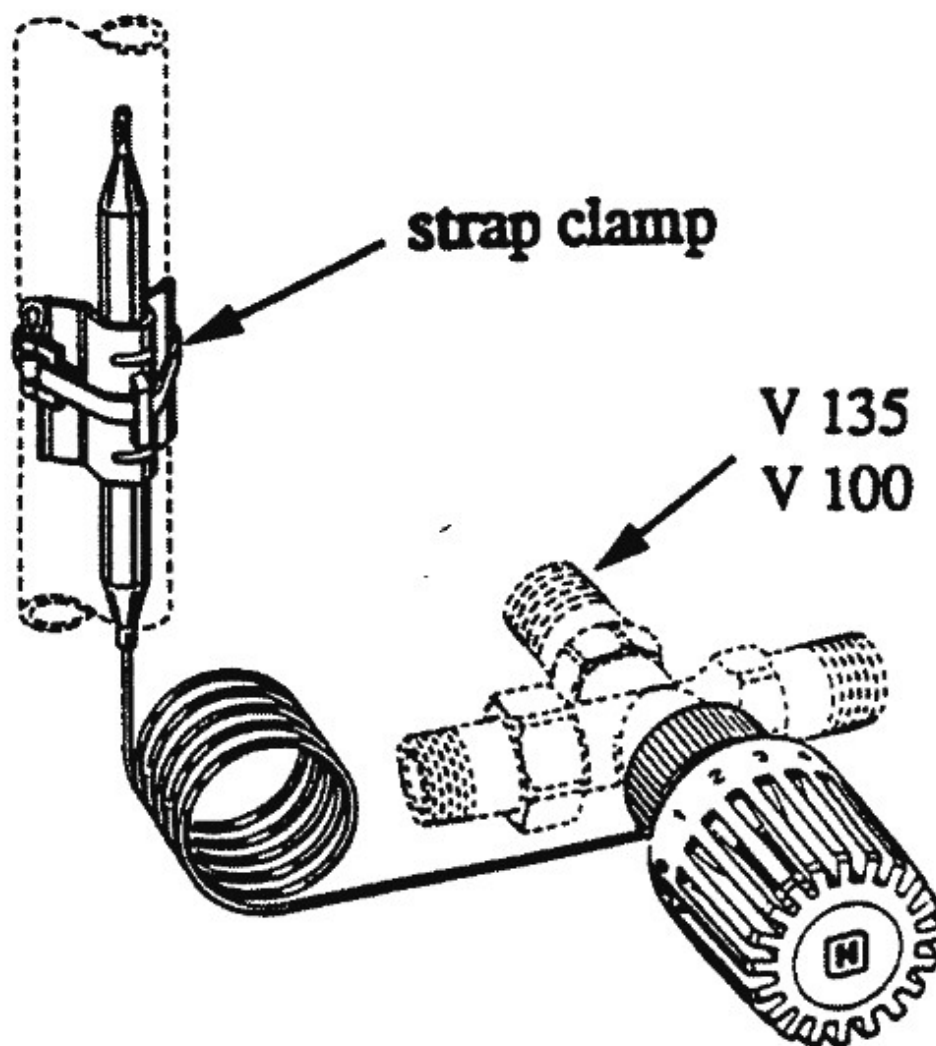

3. Excess capillary tubing should be coiled and stored away from any heat source. Care must be taken not to break, kink, or sharply bent the capillary tubing.

TEMPERATURE REFERENCE GUIDE

Table 1. T100R: 50 – 122 °F (10 – 50 °C).

Scale Setting	0	1	2	3	4	5	6
Degree F	50	55	63	68	73	81	86
Degree C	10	13	17	20	23	27	30
Scale							
Setting							
	7	8	9	10	11	12	
Degree F	91	99	104	109	117	122	
Degree C	33	37	40	43	47	50	

Table 2. T100R: 30 – 70 °C (86 – 158 °F).

Scale Setting	0	1	2	3	4	5	6
Degree F	86	91	99	104	109	117	122
Degree C	30	33	37	40	43	47	50
Scale Setting	7	8	9	10	11	12	
Degree F	127	135	140	145	153	158	
Degree C	53	57	60	63	67	70	




www.resideo.com

Resideo Technologies, Inc.
 1985 Douglas Drive North, Golden Valley, MN 55422
 1-800-468-1502
 33-00559—01 M.S. Rev. 08-20 | Printed in United States

© 2020 Resideo Technologies, Inc. All rights reserved.
 The Honeywell Home trademark is used under license from Honeywell International, Inc. This product is manufactured by Resideo Technologies, Inc. and its affiliates.

Documents / Resources

	<p>Honeywell T10OR Thermostat with Remote Sensor [pdf] Installation Guide T10OR, Thermostat with Remote Sensor</p>
---	---

References

- [Smart Home Products and Systems | Resideo](#)