 


Honeywell Home

TH1320U4002 Non Programmable Thermostat

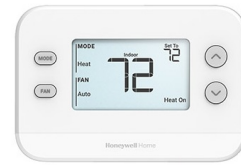

Honeywell TH1320U4002 Non Programmable Thermostat User Guide

 
[Home](#) » [Honeywell](#) » Honeywell TH1320U4002 Non Programmable Thermostat User Guide 

Contents

- [1 Honeywell TH1320U4002 Non Programmable Thermostat](#)
- [2 Specifications](#)
- [3 Thermostat Controls](#)
- [4 Alerts and Reminders](#)
- [5 System Operation Settings](#)
- [6 Fan Operation Settings](#)
- [7 Replace Batteries](#)
- [8 Built-in Compressor Protection](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

Honeywell Home

Honeywell TH1320U4002 Non Programmable Thermostat

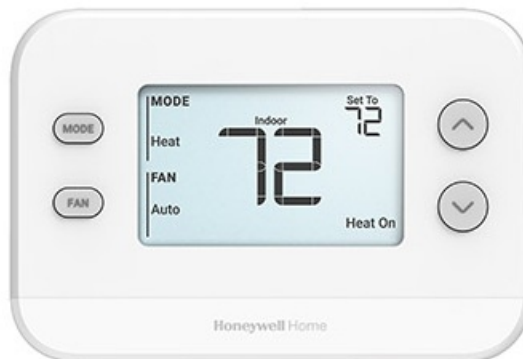

Product Information

 
Specifications

- **Model:** FocusPRO N100 Series Thermostat
- **Models Available:** TH1110U4000, TH1320U4002
- **System Modes:** Heat/Off/Cool/Auto/EM Heat (emergency heat)
- **Fan Modes:** Auto/On/Circulate
- **Power Source:** AA Batteries

Product Usage Instructions


Thermostat Controls

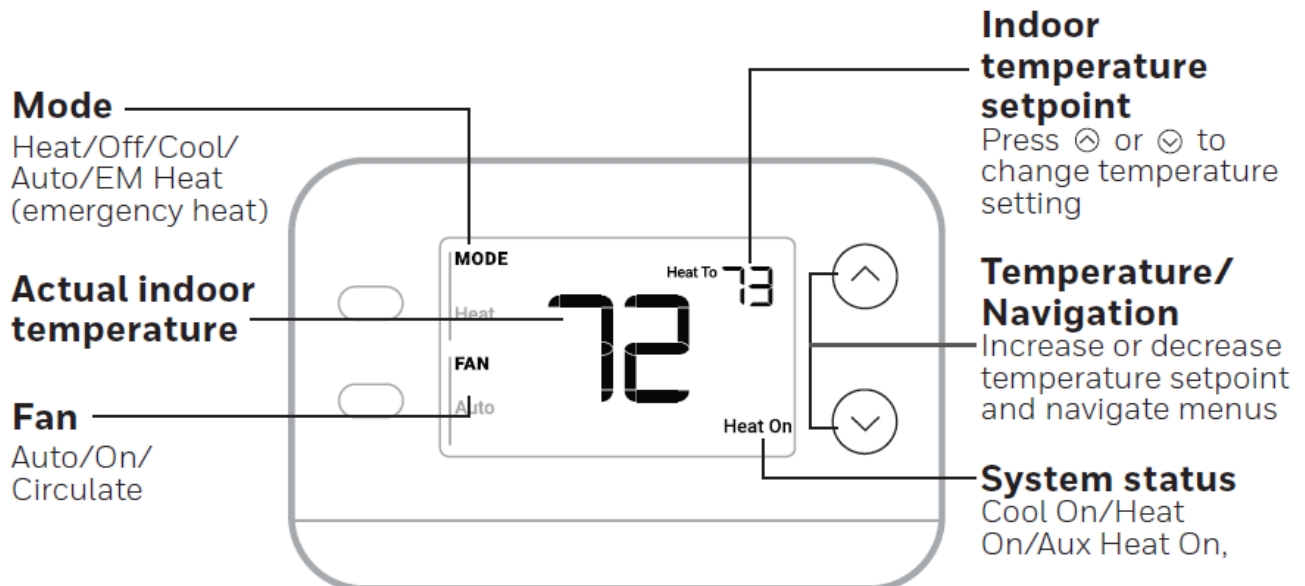

- **Mode:** Heat/Off/Cool/Auto/EM Heat (emergency heat)
- **Fan:** Auto/On/Circulate
- **Indoor Temperature Setpoint:** Press \odot or \ominus to change the temperature setting
- **Temperature/Navigation:** Increase or decrease temperature setpoint and navigate menus
- **System Status:** Cool On/Heat On/Aux Heat On



 Alerts and Reminders

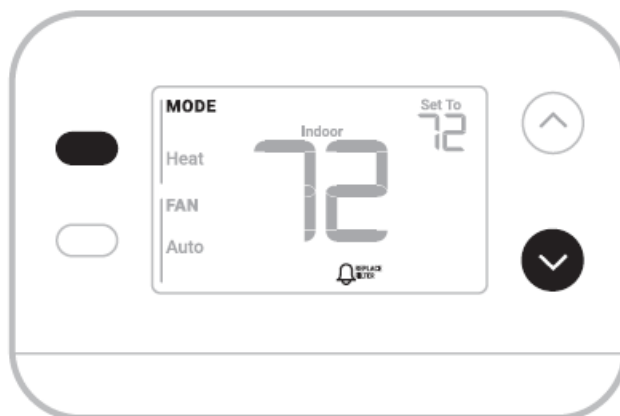
- **405 Low batteries:** Replace batteries soon.
- **407 Critically low batteries:** Replace batteries immediately.
- **164 Heat pump has detected a fault:** Contact service for assistance.
- **170 Thermostat memory failure:** Reset thermostat if issue persists.
- **173 Internal sensor error:** Check for sensor issues.
- **178 Wired outdoor sensor error:** Verify outdoor sensor connections.
- **181 Replace filter:** Reset timer after replacing furnace filter by pressing/holding specific buttons for 5 seconds.



- When an alert is active, the  icon appears in the lower part of the display as well as the alert #.
- When the filter Reminder is active, the  icon appears as well as 181.

System Operation Settings

 
1. Press the Mode button to cycle through available System modes (e.g., Heat, Off, Cool).
2. Select the required System mode by cycling through and leave it to activate.

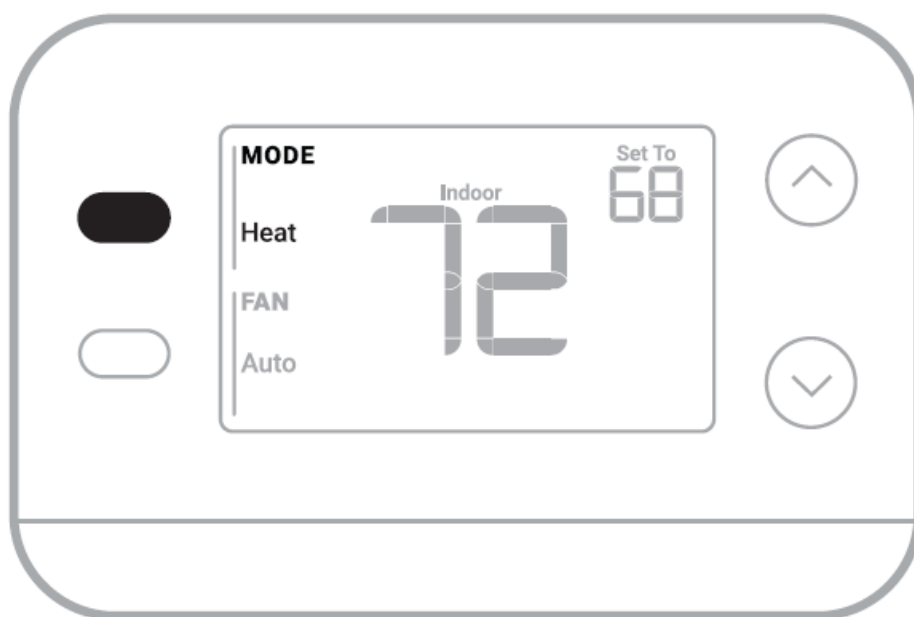

M39548



Fan Operation Settings

 1. Press/release the Fan button to cycle through available Fan modes.
2. Stop pressing the fan button when the desired Fan mode is displayed.
3. Fan Modes:
 - Auto: Fan runs only when the heating or cooling system is on.
 - On: Fan is always on.
 - Circ: Fan runs about 33% of the time to circulate air.

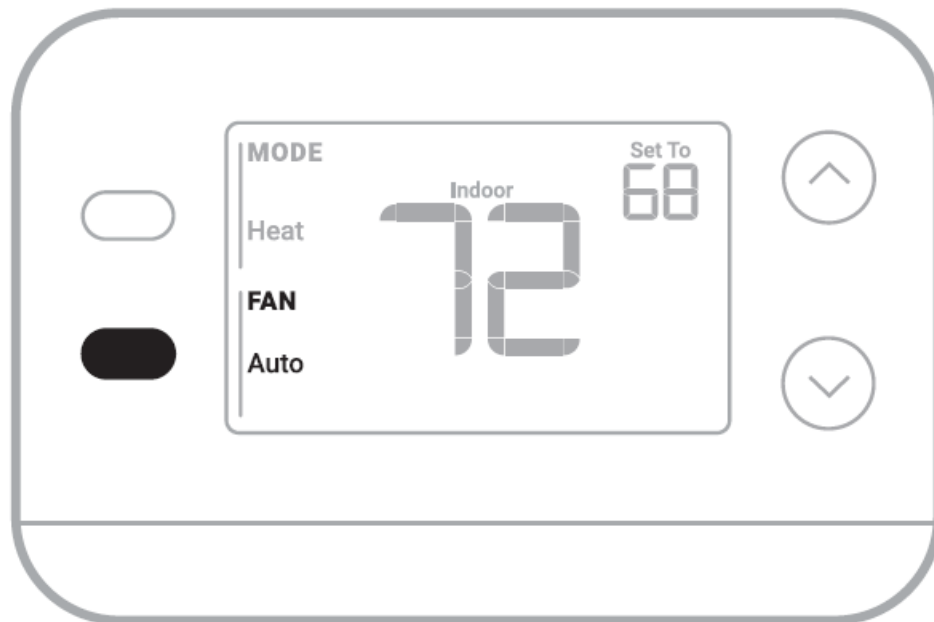

Replace Batteries

  
Pull to remove the thermostat from the UWP and insert AA batteries for primary or backup power.

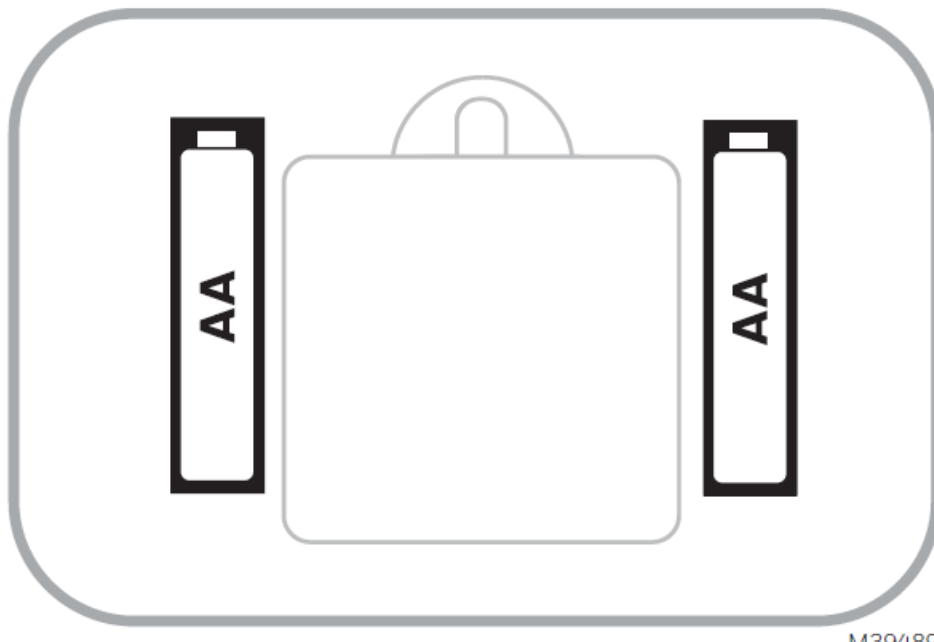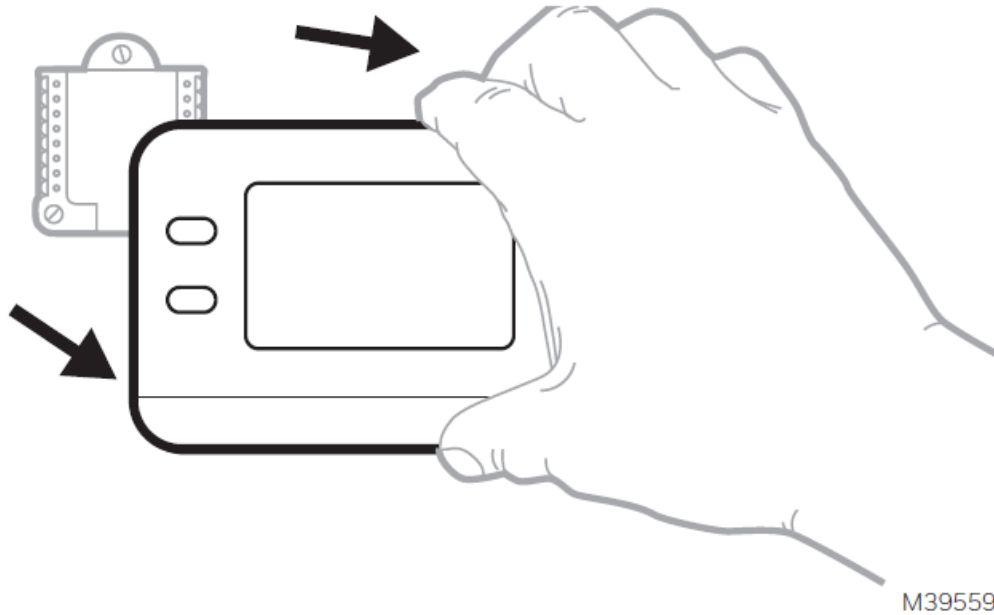

Built-in Compressor Protection


Damage can occur if your system's compressor is restarted too soon after shutdown. This feature forces the compressor to wait for a few minutes before restarting. During the wait time, the display will show the message Waiting For Equipment under the room temperature reading.

 When the safe wait time has elapsed, the message disappears, and the thermostat will show "Heat on" or "Cool on".

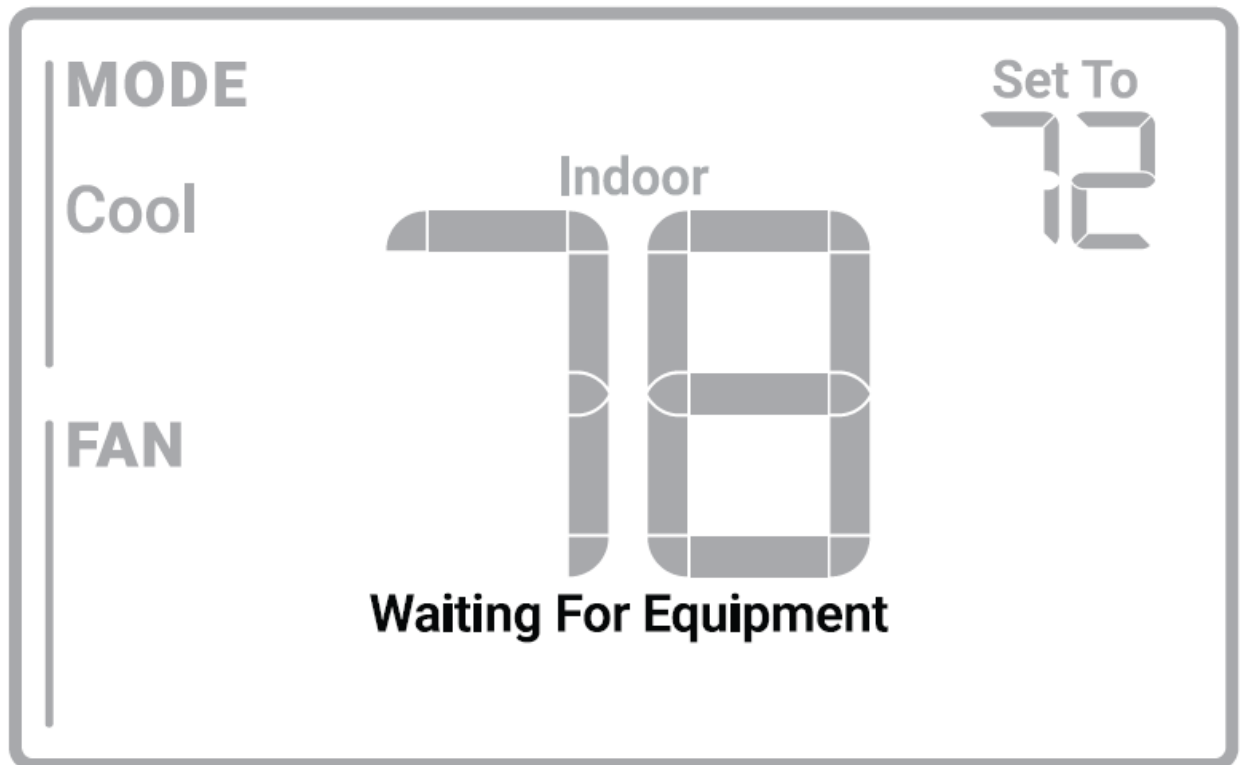

M39564

 Documents / Resources

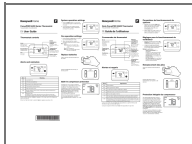

[Honeywell TH1320U4002 Non Programmable Thermostat](#) [pdf] User Guide
TH1320U4002, TH1110U4000, TH1320U4002 Non Programmable Thermostat, TH1320U4002,
Non Programmable Thermostat, Programmable Thermostat, Thermostat

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.