Honeywell Vista 20SE 5530M Series Cellular Communicators and Programming the Panel





Honeywell Vista 20SE 5530M Series Cellular Communicators and Programming the Panel Owner's Manual

Home » Honeywell vista 20SE 5530M Series Cellular Communicators and Programming the Panel Owner's Manual

Contents

- 1 Honeywell Vista 20SE 5530M Series Cellular Communicators and Programming the Panel
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 FAG
- **5 Enable Contact ID reporting**
- 6 Documents / Resources
 - **6.1 References**

Honeywell

Honeywell Vista 20SE 5530M Series Cellular Communicators and Programming the Panel



Product Information

Specifications:

- Product: Honeywell Vista 20SE
- Model: 5530M Series Cellular Communicators
- Compatibility: Honeywell Vista 20SE Alarm Panel

Product Usage Instructions

Wiring the 5530M Communicators to Honeywell Vista 20SE:

- 1. Ensure power to the alarm panel is turned off before starting the wiring process.
- 2. Locate the communication terminals on both the 5530M communicator and the Vista 20SE panel.
- 3. Connect the appropriate wires between the communicator and the panel following the wiring diagram provided in the manual.
- 4. Securely tighten all connections to ensure proper communication.

Programming Uplink Communicators to Honeywell Vista 20SE:

- 1. Access the programming mode on the Vista 20SE alarm panel via the keypad.
- 2. Follow the on-screen prompts to access the communicator programming menu.
- 3. Enter the required settings for communication protocols, reporting formats, and contact IDs as per your service provider's instructions.
- 4. Save and exit the programming mode once all settings are configured correctly.

Programming the Honeywell Vista 20SE Alarm Panel via the Keypad:

- 1. To enable Contact ID reporting, follow these steps:
- 2. Access the installer code menu on the keypad by entering the appropriate sequence.
- 3. Navigate to the Contact ID reporting section and configure the primary and secondary subscriber IDs.
- 4. Set up phone system fields, reporting formats, open report fields, and other necessary parameters as required.

FAQ

Q: How do I troubleshoot communication issues between the communicator and the alarm panel?

A: If you encounter communication problems, first check all wiring connections for looseness or damage. Ensure that the communicator settings match those of the alarm panel. You can also refer to the troubleshooting section of the user manual for further guidance.

Q: Can I use third-party communicators with the Honeywell Vista 20SE panel?

A: It is recommended to use compatible communicators approved by Honeywell to ensure seamless integration and reliable performance. Third-party devices may not offer full compatibility or support all features.

Honeywell Vista 20SE

Wiring Uplink's 5530M Series Cellular Communicators and Programming the Panel


CAUTION

- It is advised that an experienced alarm installer programs the panel as further programming may be required to ensure proper performance and use of the full functionality.
- Do not route any wiring over circuit board.
- Full panel testing, and signal confirmation, must be completed by the installer.

NEW FEATURE: For 5530M Communicators, the status of the panel can be retrieved not only from the status PGM but now also from the Open/Close reports from the dialler.

IMPORTANT NOTE: The Open/Close reporting needs to be enabled during the initial pairing procedure.

Wiring the 5530M communicators to Honeywell Vista 20SE

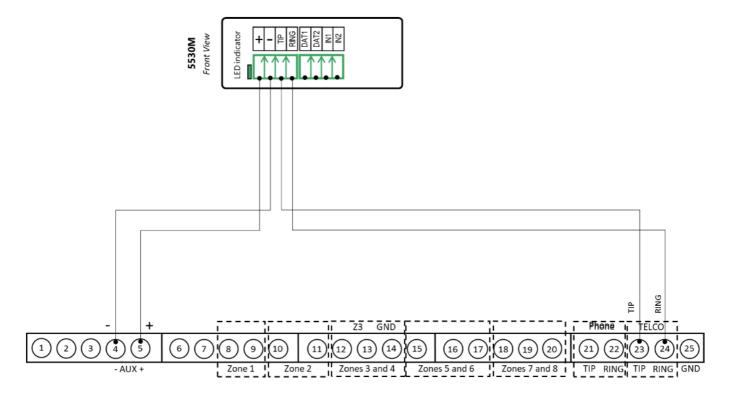

Wiring and Programming Uplink Communicators to Honeywell Vista 20SE

Programming the Honeywell Vista 20SE Alarm Panel via the Keypad

Enable Contact ID reporting

Keypad Display	Keypad Entry	Action Description
DISARMED	4112800	To enter programming menu
Installer Code	*41	To start configuring primary phone number
Pri. Phone	123456*	Enter phone number value and press * to save and go back
Field?	*43	To start configuring "Part. 1 Primary Subs. Acct. No."
Pri SubId	1234	Enter account number value
Sec SubId	*47	To enter "Phone system select" menu
Phone Sys	1	To select "Tone Dial" and go back
Field?	*48	To enter "Report format" menu
Rep Form Pri/Sec	7*	To select "Ademco Contact ID" for primary phone number
Field?	*65	To go to "Open report code" setup
Open Rpt	1*	To enable reporting for "Open" event
Field?	*66	To go to "Arm Away/Stay Report Code" menu
Awy/Sty Rp	1, 1*	To enable reporting for "Away/Stay" events
Field?	*92	To go to "TLM" menu
Telco Monitor	0*	To disable TLM and save
#Rpt/Arm	*99	To exit programming mode

Documents / Resources



Honeywell Vista 20SE 5530M Series Cellular Communicators and Programming the Panel [pdf] Owner's Manual

5530M Series, Vista 20SE 5530M Series Cellular Communicators and Programming the Panel, Vista 20SE 5530M Series Panel, Cellular Communicators and Programming the Panel, Cellular Communicators Panel, Programming Panel, Programming, Panel, Cellular Communicators, Communicators

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.