




# HOOVER UH72600W WindTunnel 3 High Performance Owner's Manual

[Home](#) » [Hoover](#) » HOOVER UH72600W WindTunnel 3 High Performance Owner's Manual 



WindTunnel 3 High Performance  
Owner's Manual

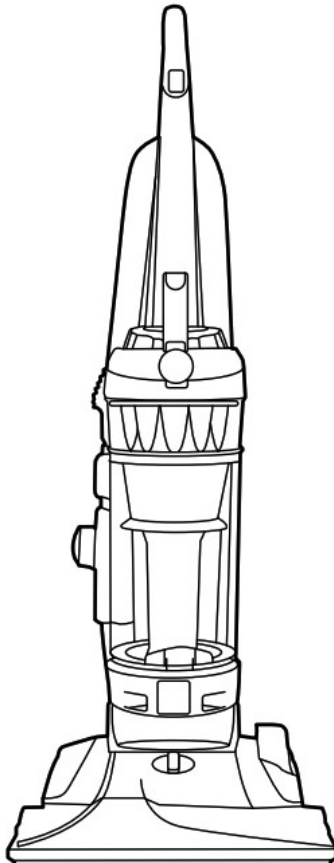

## Contents

1	UH72600W WindTunnel 3 High Performance
2	VACUUM ASSEMBLY
3	HOW TO USE
4	TOOLS
5	MAINTENANCE
6	How to Empty
7	TROUBLESHOOTING
8	SERVICE
9	WARRANTY
10	Documents / Resources
10.1	References
11	Related Posts

## UH72600W WindTunnel 3 High Performance

**IMPORTANT:** READ CAREFULLY BEFORE ASSEMBLY AND USE.

**Questions or concerns?** For assistance, please call Customer Service at 1-800-944-9200 Mon-Fri 8 am-7 pm EST. PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

**THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. IF USED COMMERCIALY WARRANTY IS VOID.**

©2018 Techtronic Floor Care Technology Limited. All Rights Reserved. #961151059-R5

**Thank you for choosing a HOOVER® product.**

Please enter the complete model and Manufacturing Code in the spaces provided.

MODEL .....

MFG.CODE.....

**Hint:** Attach your sales receipt to this owner's manual. Verification of the date of purchase may be required for warranty service of your HOOVER product. Be sure to register your product online at Hoover.com or call 1-800-944-9200 to register by phone. Visit Hoover.com for additional video instructions for assembly and maintenance. If you need assistance: authorized dealer nearest you or call 1-800-944-9200 for an automated referral of Hoover. Visit our website at hoover.com. Follow the authorized dealer locator link to find the Hoover® authorized dealer locations (the U.S. only) or to speak with a customer service representative; Mon- Fri 8 am- 7 pm EST.

**PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.**

When using an electrical appliance, basic precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.**

**WARNING:** TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Fully assemble before operating.
- Operate the cleaner only at the voltage specified on the data label on the back of the cleaner.
- Do not leave the appliance when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
- Do not use it outdoors or on wet surfaces.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used near children. To avoid injury or damage, keep children away from the product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only the manufacturer's recommended attachments and products.
- Do not use with damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.

- Do not pull or carry by cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not place the product on the cord. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle plugs or appliances with wet hands.
- Do not put any objects into openings. Do not use any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place the cleaner at bottom of the stairs on the floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings, or use in areas where they may be present.
- Unplug before connecting Turbo Tool.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without Dirt Cup and/or Filters in place.
- **WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects or reproductive harm. **WASH HANDS AFTER HANDLING.**

**CAUTION:** TO REDUCE THE RISK OF DAMAGE:


- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors in a dry place. Do not expose the machine to freezing temperatures.
- Do not use sharp objects to clean out the hose as they can cause damage.
- With brush roll on, do not allow the cleaner to sit in one location for an extended period of time, as damage to the floor can result.

**WARNING:**

- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

**VACUUM ASSEMBLY**

**CARTON CONTENTS**


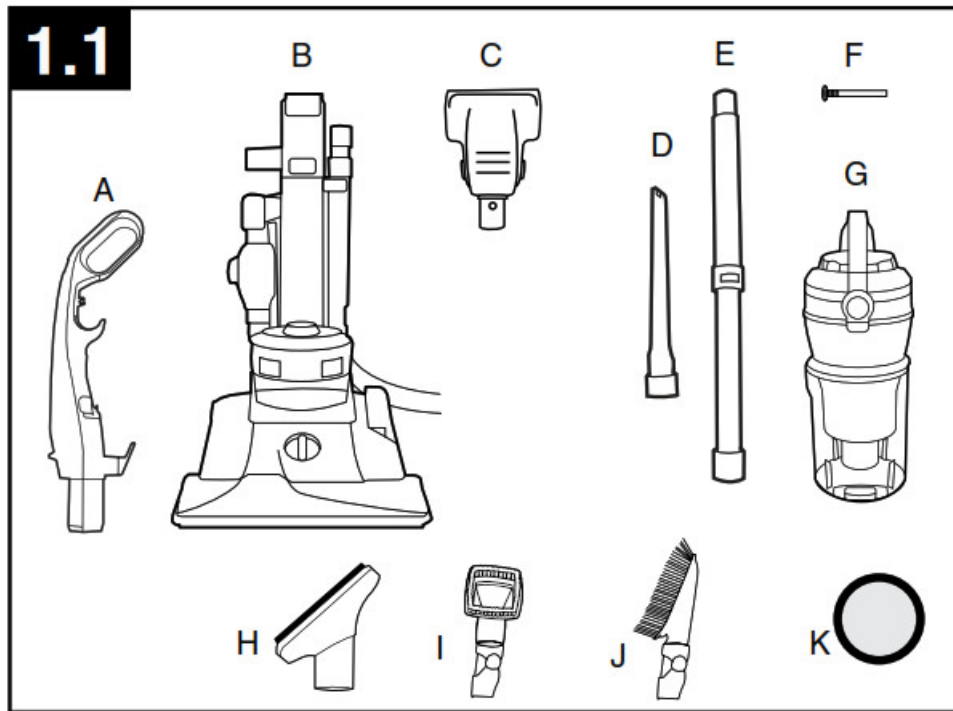


- A. Handle
- B. Vacuum Base
- C. Pet Turbo Tool/Turbo Tool\*
- D. Crevice Tool
- E. Telescoping Wand
- F. Screw (for assembly)
- G. Dirt Cup
- H. Pet Upholstery Tool\*
- I. Articulating Upholstery Tool\*
- J. Articulating Dusting Tool\*
- K. Extra Filter\*

\*Varies per model

Remove all parts from the carton and identify each item shown. Make sure all parts are located before disposing of packing materials. Additional parts may be ordered at [Hoover.com](http://Hoover.com) or call 1-800-944-9200.

## ATTACH HANDLE


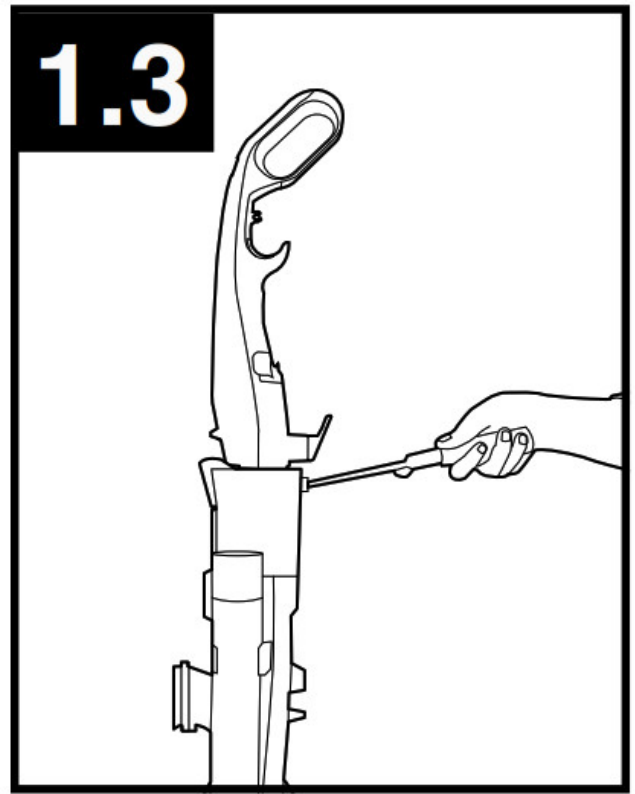
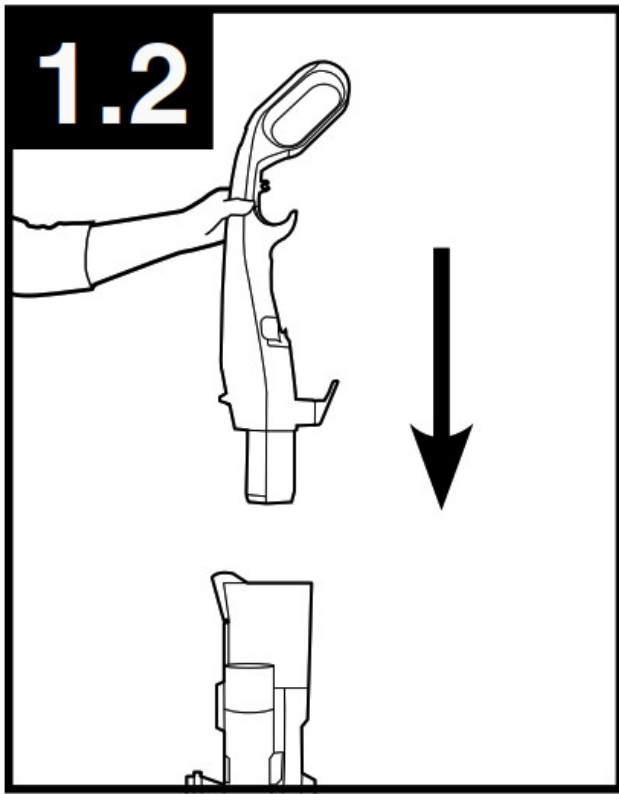


**Note:** Remove the screw located in the vacuum base and set it aside until instruction

1.2 Insert handle section into vacuum base. Push down firmly.

1.3 Using a Phillips screwdriver, fasten (1) screw behind the handle into the vacuum base.

#### ATTACH DIRT CUP

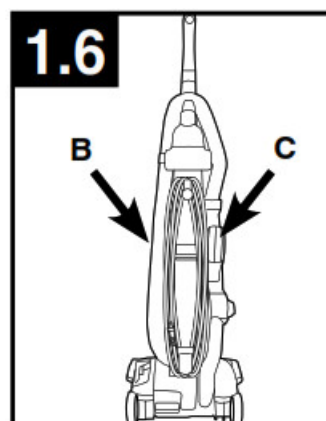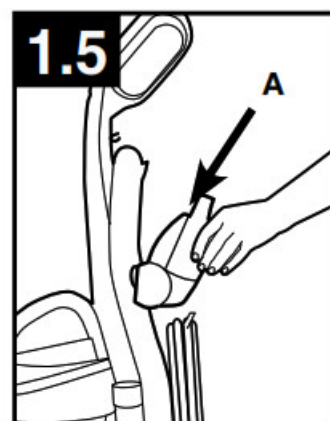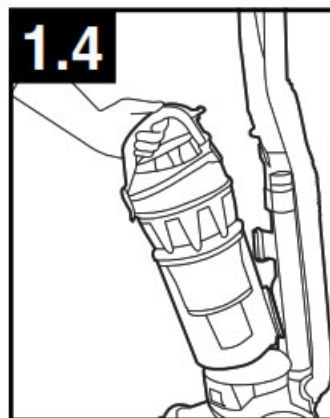

1.4 Place the bottom of dirt cup into the vacuum body first. Pivot the cup into the vacuum. The dirt cup is secure

when you hear a click.


**POSITION TOOLS** (varies per model)

1.5 Attach the bottom of Turbo Tool (A) and pivot into Air powered Tool Clip until secure.

1.6 Place the Crevice Tool into Wand and slide it into the tool storage area on the left back side (B) of the vacuum and place the Upholstery Tool or Articulating Tool on the right back side (C) of the vacuum as shown.

**HOW TO USE**



**VACUUM DESCRIPTION**

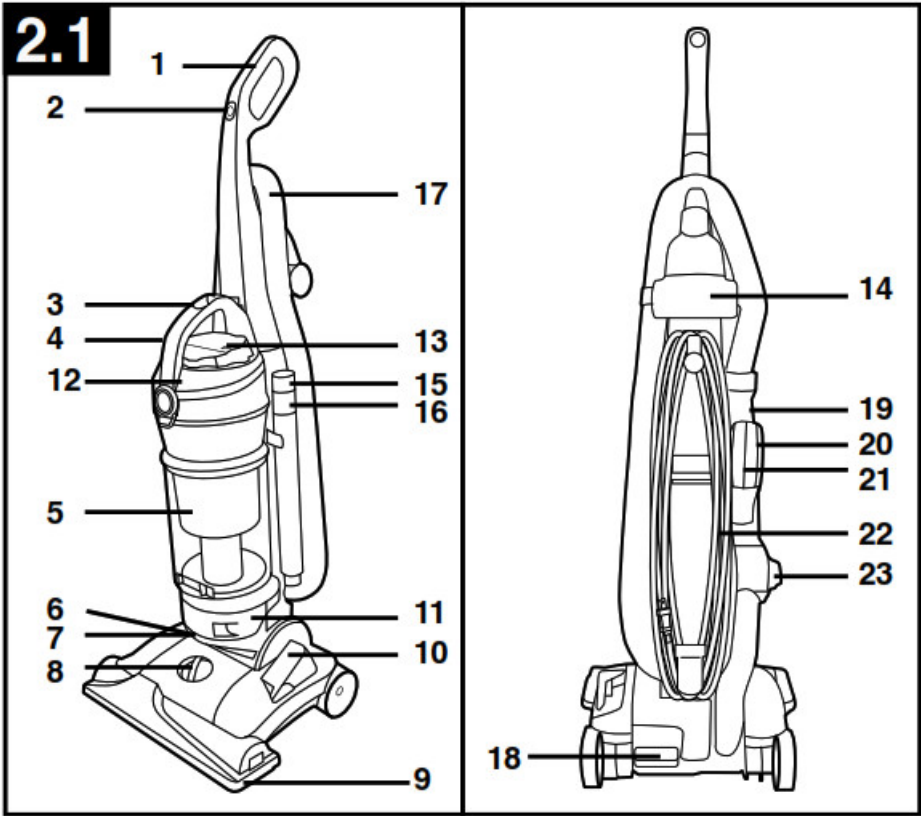

\*Available on select models only\*\*Varies per model

1. Handle	11. Filter made with
2. ON/OFF Switch	12. Rinsable Filter /
3. Dirt Cup Release Button	13. System Check I
4. Carry Handle	14. Turbo Tool **
5. Dirt Cup	15. Crevice Tool (in:
6. Stair Cleaning Handle	16. Telescoping Wa
7. Headlight*	17. Hose
8. Height Adjustment	18. Handle Release
9. Furniture Guard	19. Hose Tube
10. Brushroll On/Off Pedal (Suction Only Mode)	20. Hose Release E
	21. Dusting/ Uphols
	22. Cord
	23. Air Valve Dial

**ON-OFF SWITCH**

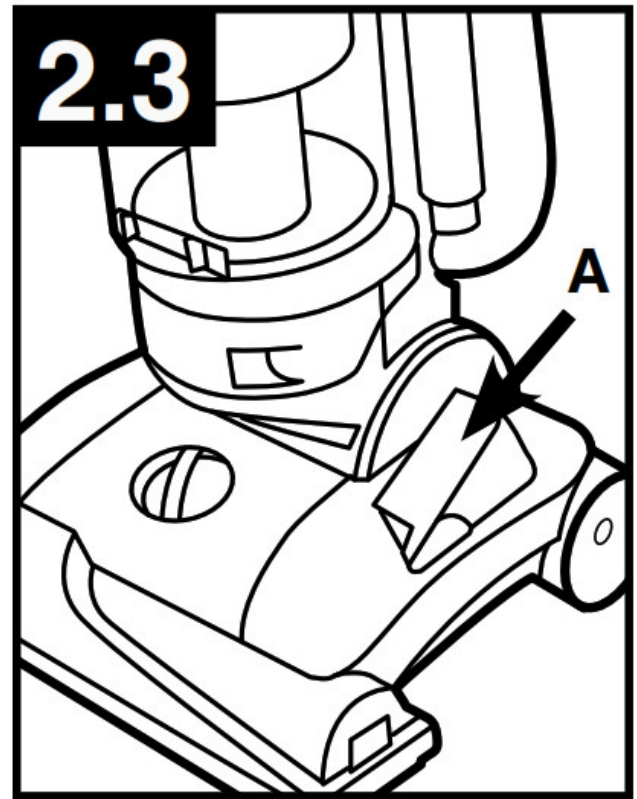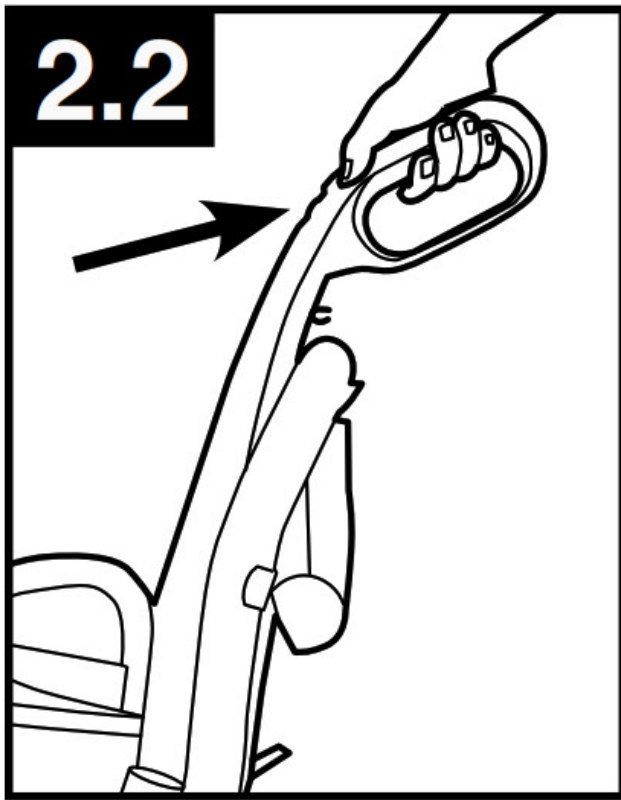

2.2 Plug the cord into an electrical outlet. To turn the vacuum ON, push the ON/OFF switch once. To turn the vacuum OFF, push the switch again.

**SUCTION-ONLY MODE/ BRUSHROLL SHUT-OFF** for bare floors and very high pile carpet


2.3 For optimal cleaning performance on bare floors and carpets with piles deeper than 1", the brush roll should be turned off. The vacuum is shipped with the brush roll in the ON position. To turn the brush roll OFF for Suction Only Mode, step on pedal (A).

**IMPORTANT** Pedal (A) is inactive when the cleaner is in the upright position.

**CAUTION !!** Brushroll should be in an off position for cleaning of high pile carpet deeper than 1".


**CAUTION !!** Not to be used for grooming a pet.

**TRANSPORTING CLEANER**

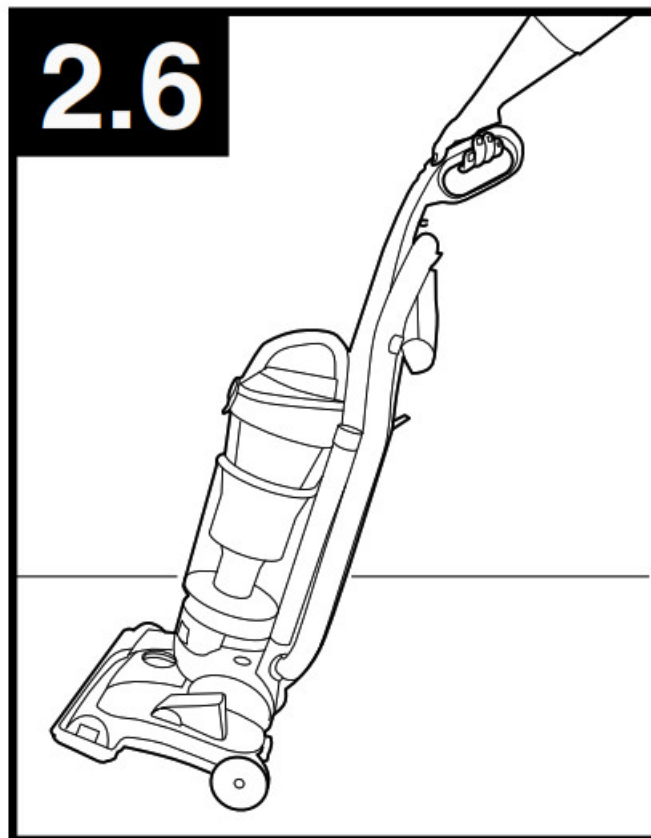

To move your cleaner from room to room, put the handle in an upright position, tilt the cleaner back on the rear wheels and push forward.

#### **HANDLE POSITIONS**

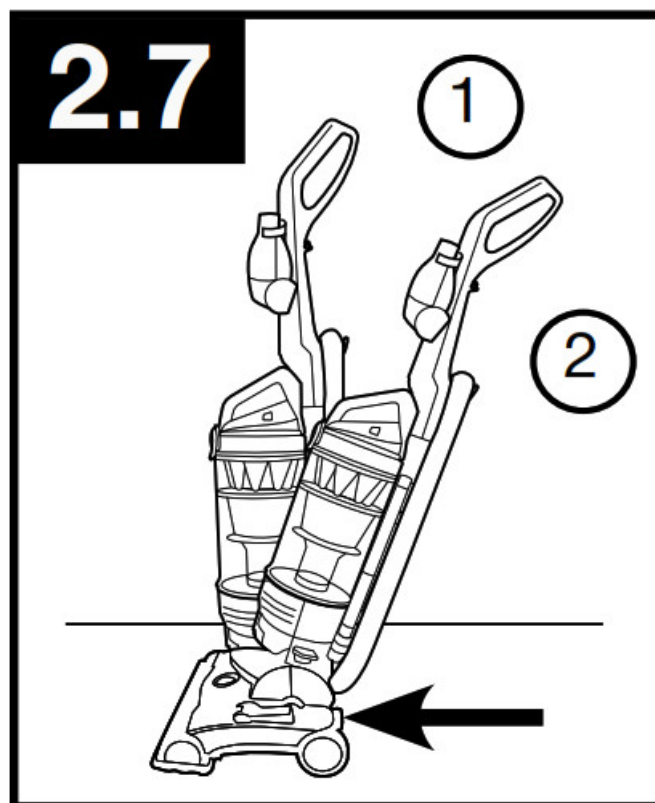


**2.7** The handle of your cleaner has two positions: 1) Upright for storage and when using cleaning tools. 2) Operating position for general operation on carpets and floors. Step on the handle and release the pedal to the lower handle.

#### **CARPET HEIGHT ADJUSTMENT**



2.8 To adjust the height setting, TURN knob (A) to desired height setting. For maximum cleaning performance, the following carpet height settings are recommended:

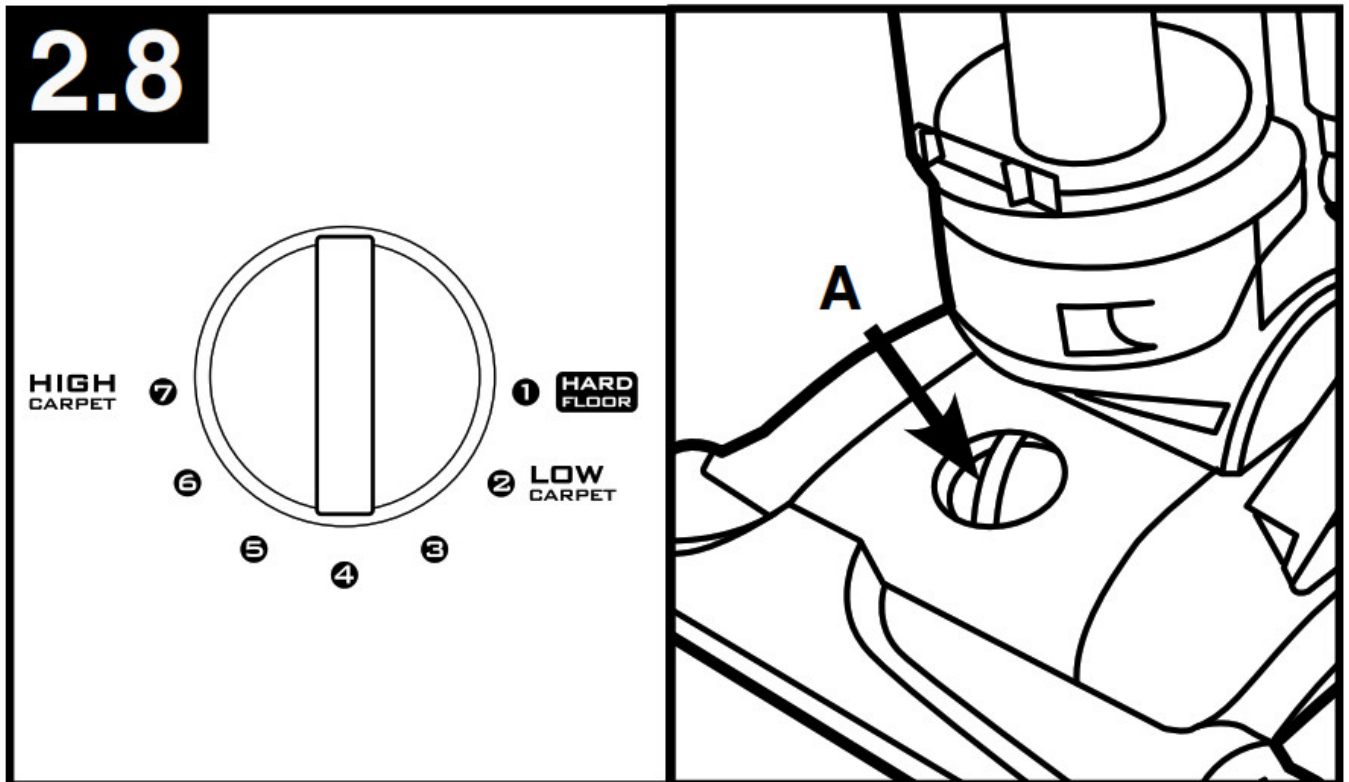


- Bare floor setting (1): for bare floors.
- A low setting (2): for all types of carpet.
- Higher settings: for very deep pile carpet, where easier pushing effort is desired while maintaining good cleaning performance.

#### **IMPORTANT**

If the vacuum is difficult to push turn the knob to the next higher setting.

#### **AIR VALVE DIAL**

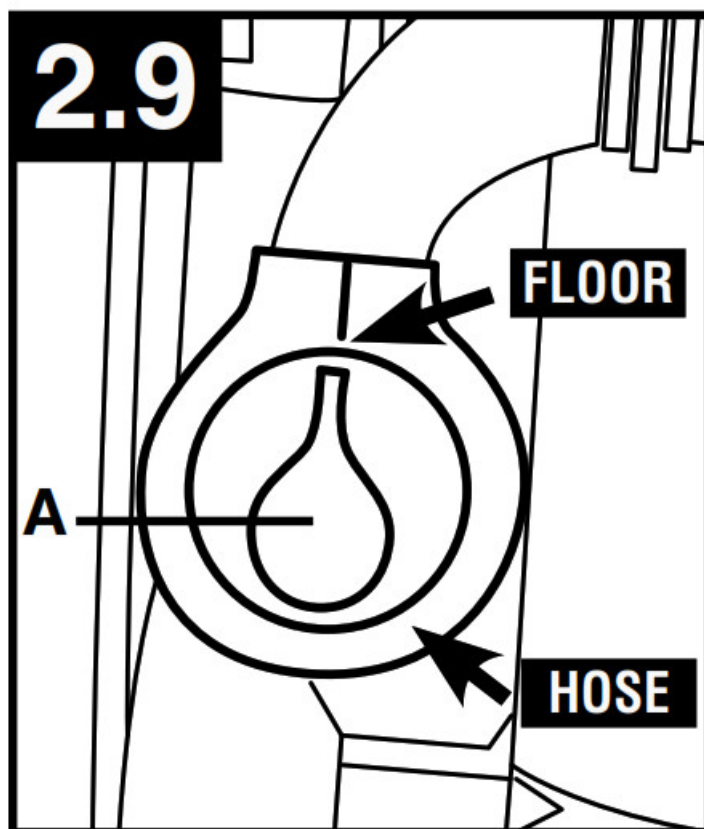


2.9 To operate the dial, TURN dial (A) to the desired position until it clicks. The HOSE position is for cleaning with a hose and/or tools. The FLOOR position is for general floor cleaning thru the nozzle.

**IMPORTANT** A Vacuum will only pick up debris by the Hose/ Tools when the valve dial is placed into the “HOSE” position. The valve dial must be returned to the “FLOOR” position in order to pick up debris thru the floor Nozzle.

## TOOLS


Tools allow for cleaning surfaces above the floor and for reaching hard-to-clean areas. The vacuum is ready for tool use when the handle is in an upright position.

**SELECT PROPER TOOL (Tools may vary per model)**

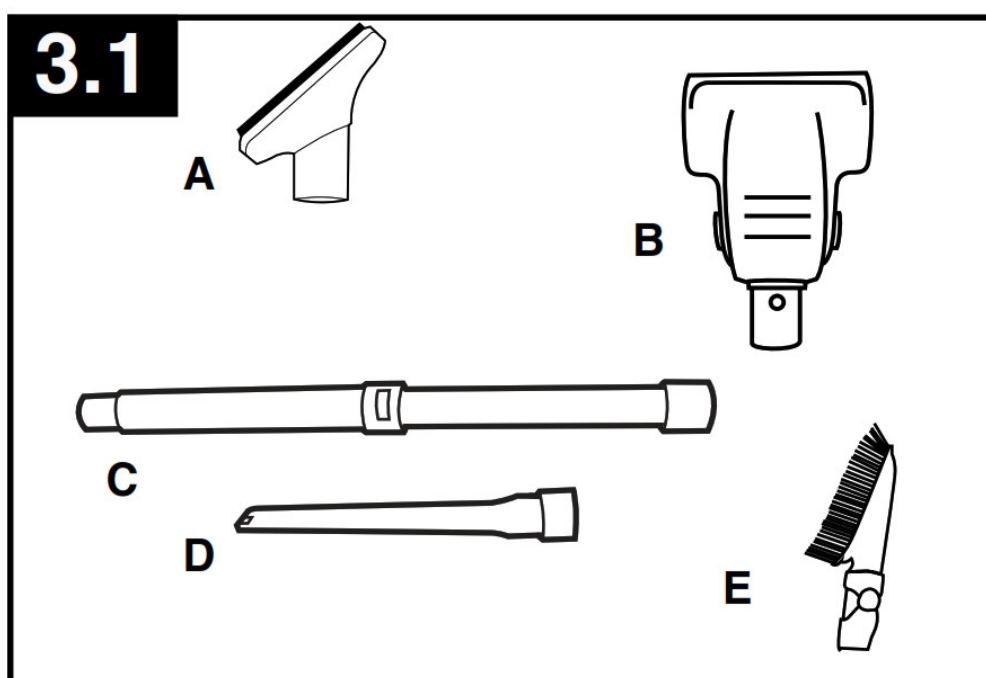

- A. Use the Upholstery Tool to clean upholstered furniture and carpeted stairs.
- B. Turbo Tool may be used for upholstered furniture and carpeted stairs.
- C. Telescoping Wand is used to giving extra length to your hose.
- D. Crevice Tool may be used in tight spaces, corners, and along edges.
- E. Articulating Tool may be used to clean hard-to-reach areas such as ceiling fans and bookshelves.

## REMOVING HOSE

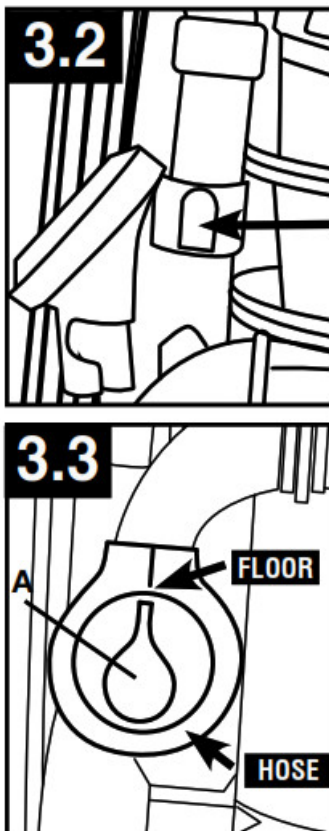

When using cleaning tools, place the cleaner handle in the upright position. The agitator brush roll will not rotate when the cleaner is in the upright position. To remove the hose for tool use, press the hose release button and pull the hose end out. To lock it back into place, push the hose into the hose tube until you hear a click.

**3.3 FLOOR A** 3.3 Set air valve for the desired use. Hose Floor. Turn the valve back counterclockwise to the FLOOR position until it clicks (A).

## ATTACH WAND AND TOOLS


(Tools may vary per model)



**WARNING**



Unplug before connecting the Air-Powered Hand Tool.

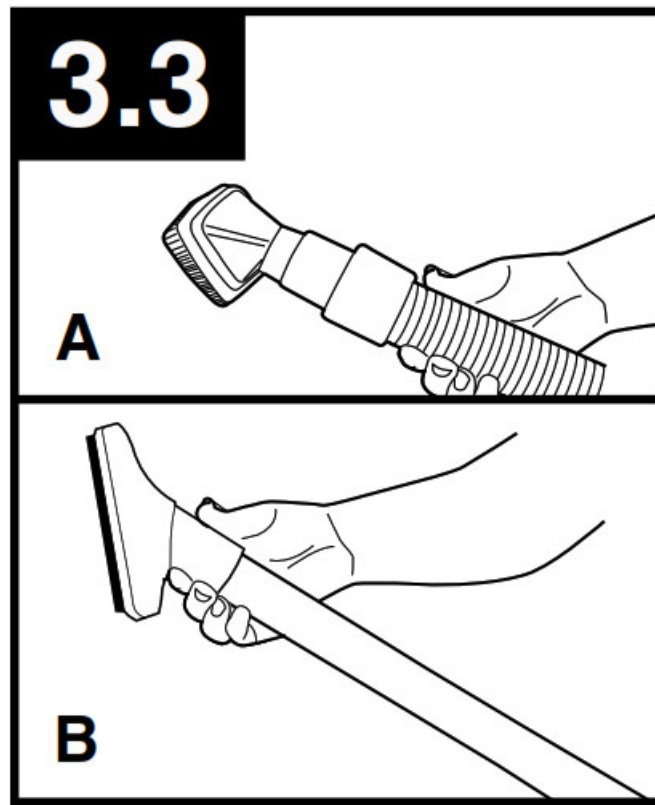

**3.3** Attach the tool or wand to the hose (A). Attach the tool to a wand (B) by pushing it firmly onto the wand. Twist the wand or tool slightly to tighten or loosen the connection. To extend the wand, twist counter-clockwise to the unlocked position, extend the wand & twist clockwise until tight. Reverse to collapse.





Not to be used for grooming a pet.

#### **HOW TO CLEAN TOOLS**

To clean Hose and Turbo Tool, wipe with a damp cloth. DO NOT submerge in water. Other cleaning tools may be washed in warm water with mild detergent. Rinse and air dry 24 hours before using. The actual model may vary from the images shown.

#### **STAIR CLEANING**

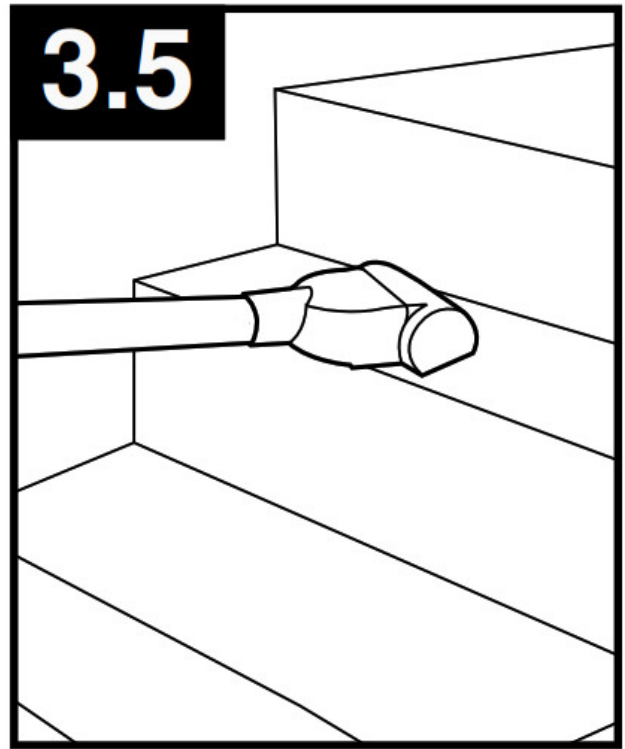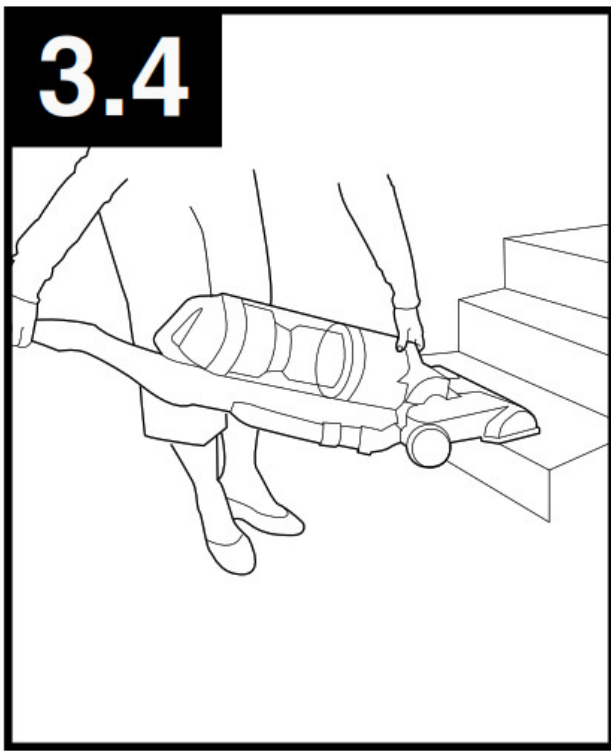

3.4 Lift vacuum by Stair Cleaning Handle and position on stairs. Clean forward to back. Never leave the vacuum standing on the stairs when not cleaning.


3.5 Use the Hose and Turbo Tool (Tool varies per model) for stair cleaning. When using tools, always ensure the handle is in an upright position.

#### **! CAUTION !**

Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place the cleaner at bottom of the stairs on the floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage. When using tools, always ensure the handle is in an upright position.

#### **CORD STORAGE**

3.6 Wrap cord around hooks for convenient storage. Attach the plug end to the cord.

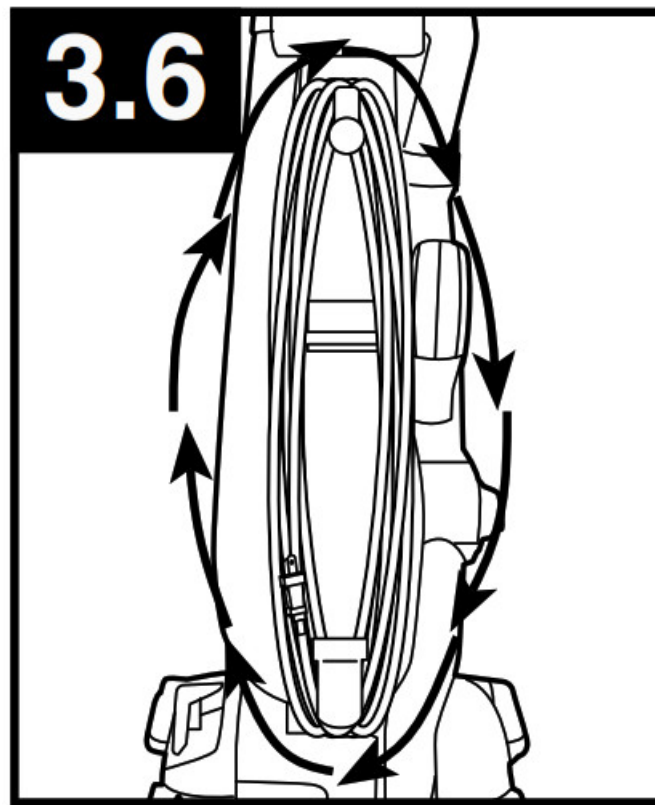

## MAINTENANCE

Familiarize yourself with these home maintenance tasks as proper use and care of your vacuum will ensure continued cleaning effectiveness. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.

4.1 The System Check Indicator located at (A), alerts you to possible system performance issues.


PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
If System Check Indicator is red:	1. Rinsable filter and/or filter made with HEPA media is dirty.	1. Clean rinsable filter and/or filter made with HEP A media – reference pg. 11
	2. Dirt cup is full and/or clogged.	2. Empty dirt cup – reference pg. 11
	3. Brushroll and/or hose is clogged.	3. Check the hose for clogging – reference pg 13. Check brush roll for clogging – reference pg. 12.
	4. Valve dial may be partially turned and not in the proper mode.	4. Turn the valve dial to HOSE or FLOOR mode. – reference pg. 7

Any other servicing should be done by an authorized service representative.



### NOTICE!

A Thermal Protector has been designed for your cleaner to protect it from overheating. When the thermal protector activates the cleaner will stop running. If this happens proceed as follows:

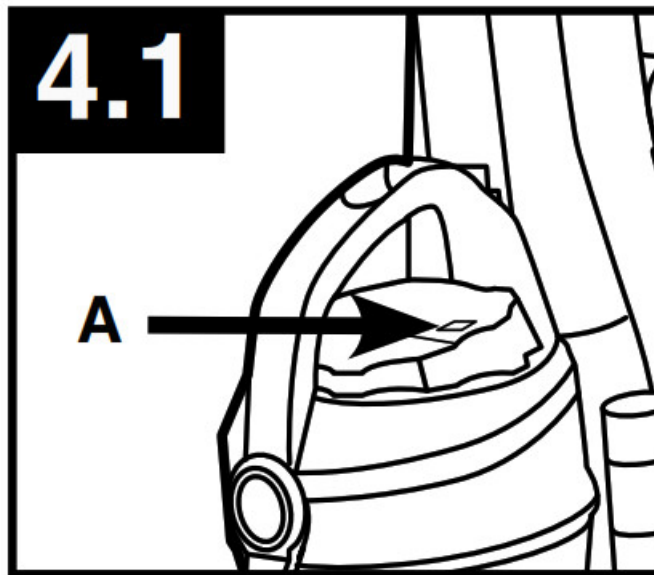


1. Turn the cleaner OFF and unplug it from the electrical outlet.
2. Empty dirt cup.
3. Inspect the nozzle inlet, hose connector, hose, dirt cup inlet, cyclonic filter, rinsable filter, and HEPA filter for any obstructions. Clear obstructions if present. When the cleaner is unplugged and the motor has cooled for 30 minutes, the thermal protector will deactivate and cleaning may continue. If the thermal protector continues to activate after following the above steps, your cleaner needs servicing.

#### **DIRT CUP**




When to Empty

4.2 To maintain optimal performance, empty the dirt cup before the dirt cup reaches the max line (A). Place the vacuum in the upright position before removing the dirt cup.

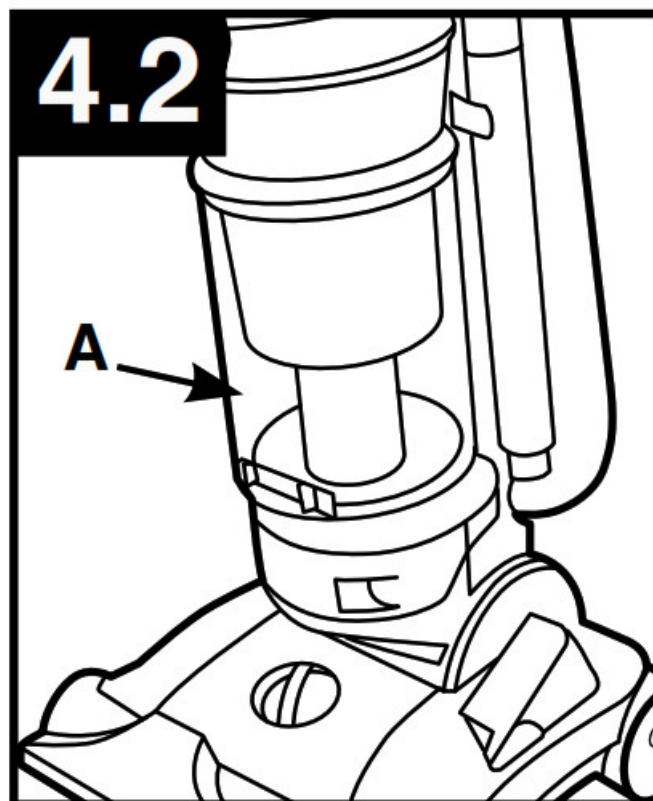

To reduce the risk of personal injury – Unplug before cleaning or servicing. Do not use a vacuum without a dirt cup or filters in place. Very fine materials, such as face powder or cornstarch, may seal the filter and cause a reduction in performance. When using the vacuum for this type of dust, empty the cup and clean the filters often.

## How to Empty

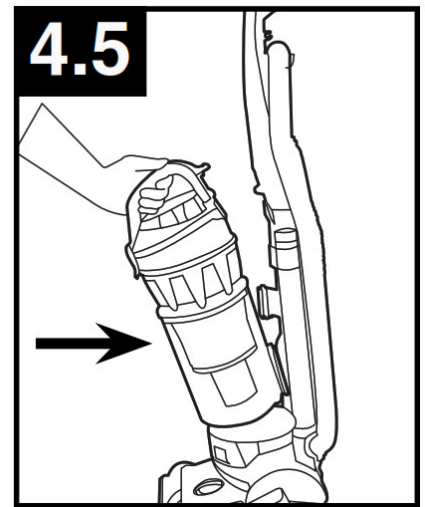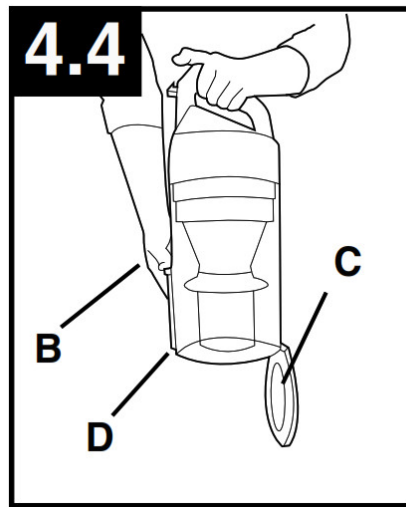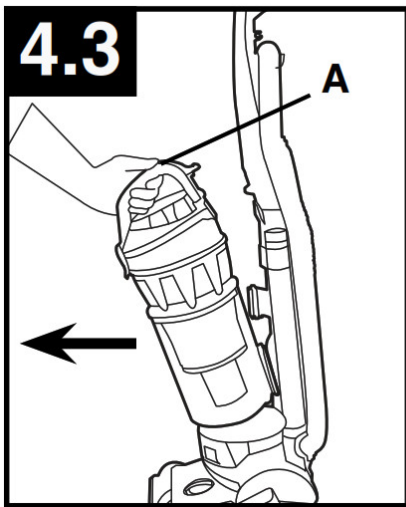

4.3 . Press the dirt cup release button (A) and pivot the cup out.

4.4 Hold the dirt cup over the trash receptacle, and push the dirt cup door release lever (B) to open the dirt cup door (C). B Close dirt cup door (C). Press firmly to secure at the front (D). D

4.5 Place the bottom of the dirt cup into the vacuum body first. Pivot the dirt cup into the vacuum body and press firmly until it locks into place.

**FILTERS:** When to Clean To maintain optimal performance, filters should be cleaned at least every two months under normal use.

**Rinse Filter:** How to Clean Remove dirt cup as described in Fig.



4.3 Pull up on the dirt cup latch to open.

4.7 Pull on the filter by the pocket to remove the rinsable filter. Hold the filter under running water for at least two minutes to remove dirt and debris. Squeeze the filter twice while underwater. Remove from water and squeeze a final time to remove excess water.

**IMPORTANT** Allow the filter to dry completely before replacing it. Dry the filter on the edge so air circulates on both sides of the filter. This may take up to 48 hours.

Replace the filter with a pocket and graphics facing up. Close the lid securely by pushing until it clicks. Replace the dirt cup as described in Fig 4.5.



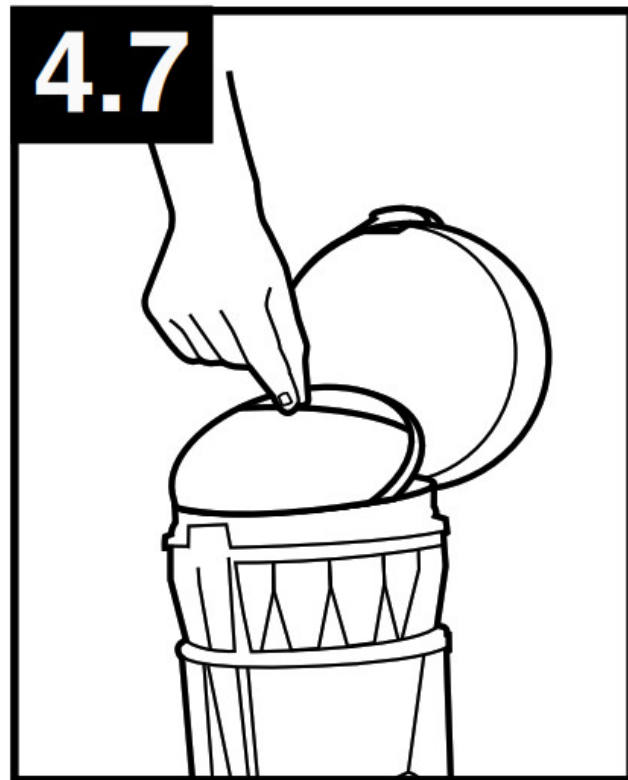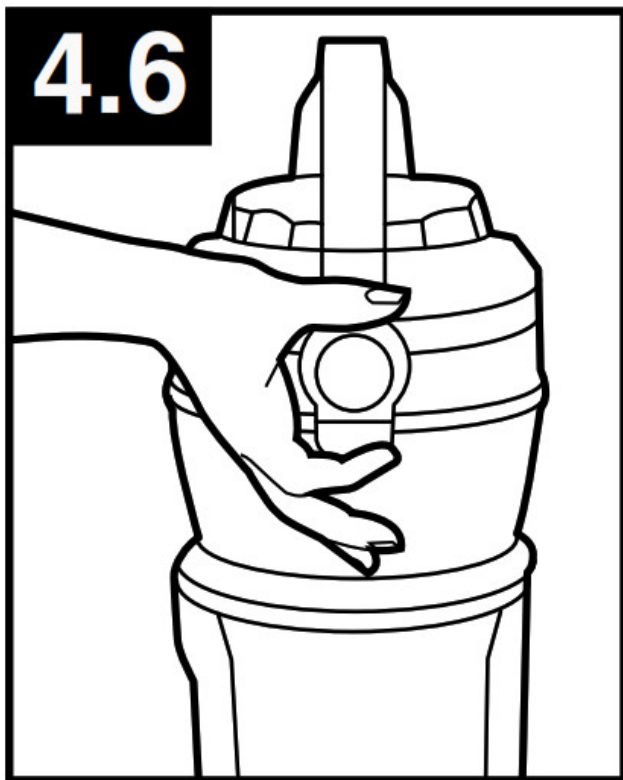


**What to Buy:** Rinsable Filter When used and maintained properly, your Rinsable Filter should not need replacement within the warranty period. If desired, an additional filter is available at [Hoover.com](http://Hoover.com) or call 1-800-944-9200. Ask for Hoover ® Part No. 304087001

**Filter Made With HEPA Media: How to Clean**

4.8 With fingers in slots, pull filter frame (A) straight out. Hold the filter over a trash receptacle and tap out dirt and debris. Slide back into position on the vacuum.

**IMPORTANT**

DO NOT RINSE OR WASH THE FILTER MADE WITH HEPA MEDIA.

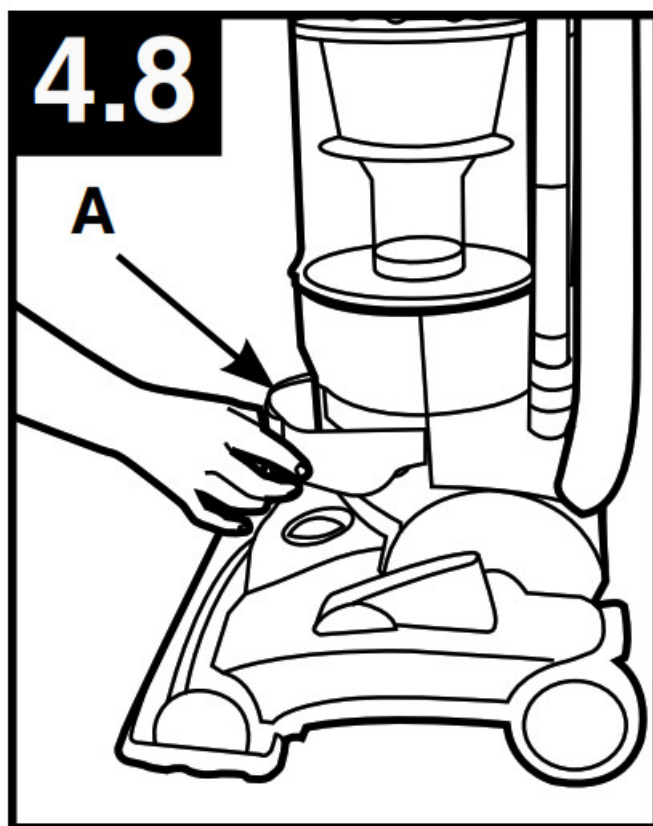

The actual model may vary from the images shown.

What to Buy: Filter Made With HEPA Media When used and maintained properly, your Filter should not need replacement within the warranty period. If desired, an additional filter is available at Hoover.com or call 1-800-944-9200. Ask for Hoover ® Part No. 305687001.





**Carbon Filter:** How to Clean (Available on select models only).

Your Carbon Filter is located on the underside of the Filter made with HEPA media.

**IMPORTANT**

DO NOT RINSE OR WASH the Carbon Filter.




**Cyclonic Filter Assembly: How to Clean**

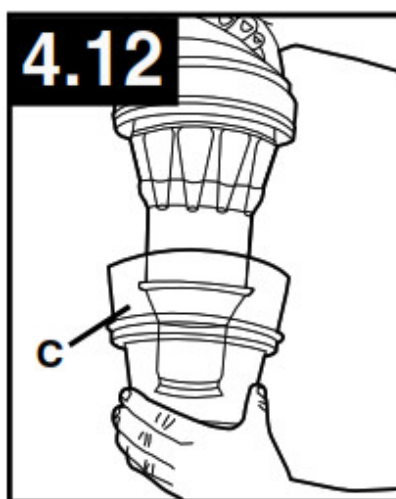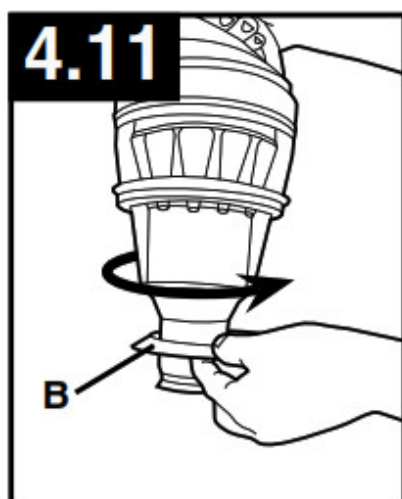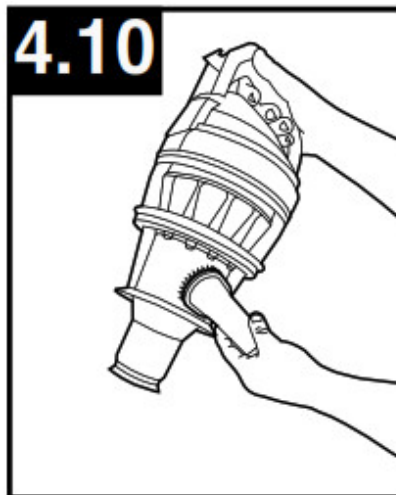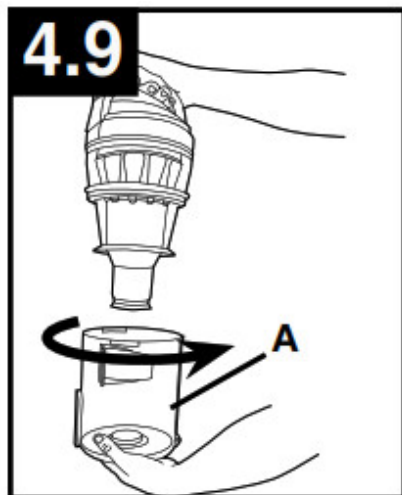

**What to Buy:**

Carbon Filter Carbon Filter may need to be replaced more often to maintain optimal odor-absorbing effectiveness. An additional filter is available at Hoover.com or calls 1-800-944-9200. Ask for Hoover ® Part 902404001.

**Brush roll:** How to Clean

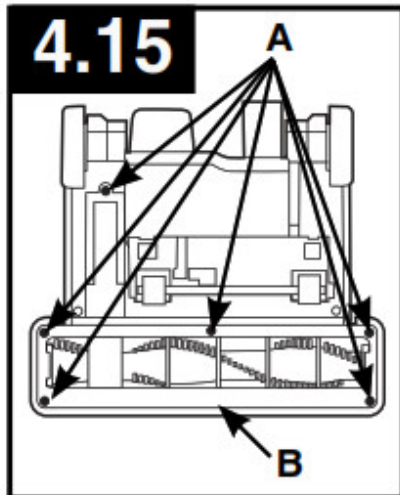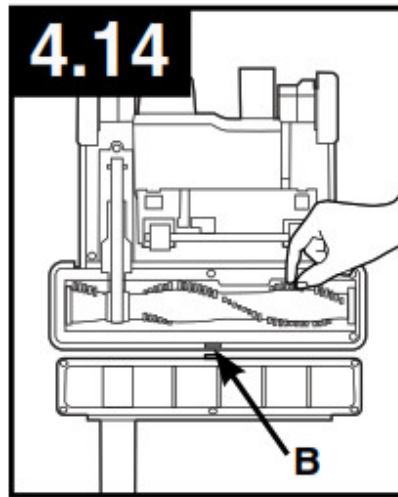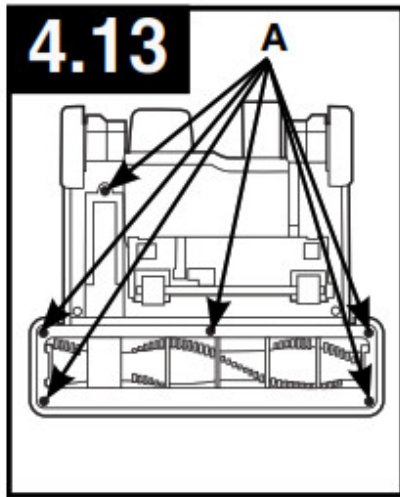

### ⚠ CAUTION ⚠

To reduce the risk of injury from moving parts Unplug before servicing.

4.13 Turn the vacuum over so the bottom side is facing up and remove the (6) screws (A).

4.14 Pivot out the bottom plate away from the hidden latch (B) and remove any debris and/or hair from the brush roll.


4.15 Reposition the bottom plate, aligning latch (B) and fastening all (6) screws (A). Press firmly at latch (B) area to ensure that it is properly latched.

**The actual model may vary from the images shown.**

**HOSE:** How to Clean




### ⚠ WARNING ⚠

To reduce the risk of personal injury – Unplug before cleaning or servicing.

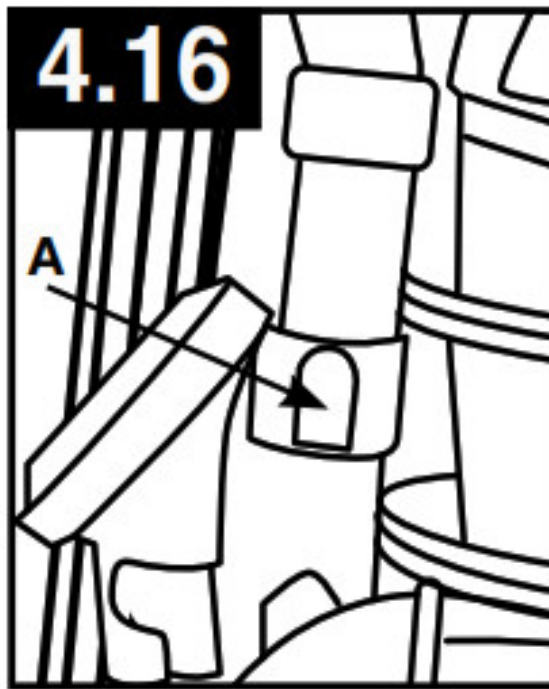

4.16 To remove the hose for tool use, press the hose release button (A) and pull the hose end out. Clear away debris or obstructions from the hose. Do not use sharp objects to clean out the hose as they can cause damage. To lock it back into place, push the hose into the hose tube until you hear a click.

**TURBO TOOL: How to Clean**  
(Tool varies per model)

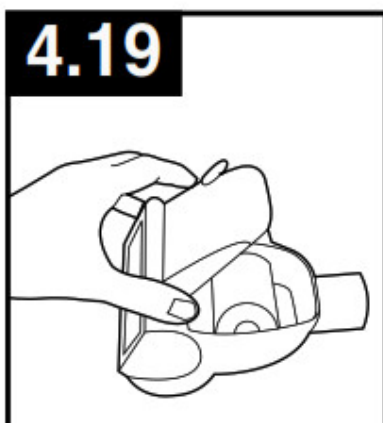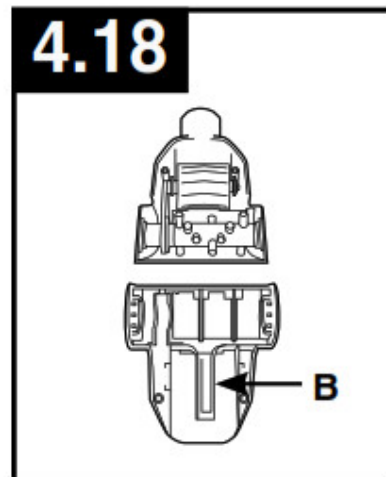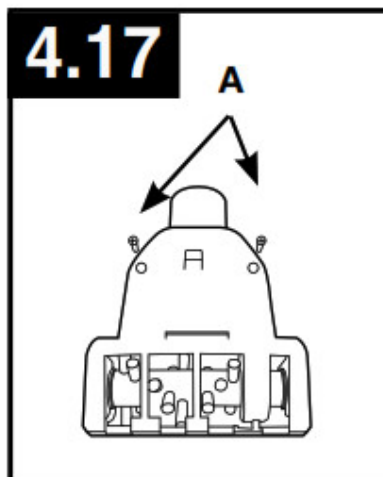

## ⚠ CAUTION ⚠

To reduce the risk of injury from moving parts




– Unplug the vacuum before servicing.

4.17 Clean the Turbo Tool by removing the two screws (A), located on the bottom cover, with a Phillips head screwdriver.

4.18 Remove the bottom cover (B). Clean out any debris or hair from the brush roll and turbine fan.

4.19 Replace the bottom cover, insert and tighten the (2) screws.

**HEADLIGHT:** How to Replace (available on select models only)

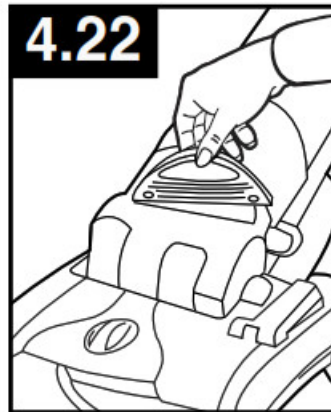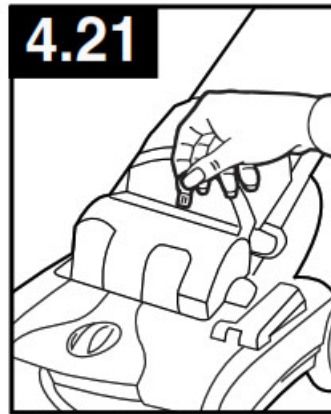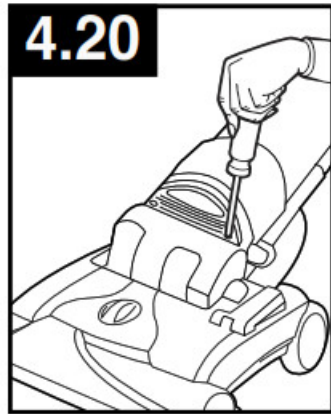

### What to Buy: Headlight

Additional bulbs may be ordered at Hoover.com or call 1-800944-9200. Ask for Hoover® Part No.7313-107.

## ⚠ WARNING ⚠

To reduce the risk of electric shock – Unplug before cleaning or servicing.

Removing Lens Press Handle Release Pedal and placing the handle in a low position.

4.20 Using a Phillips screwdriver, remove (2) screws as shown and lift off the lens. Installing Bulb

4.21 Pull the old bulb straight out of the socket. Push the new bulb straight into the socket until locked in place. Do not use excessive force when installing bulbs. Do not twist or turn the bulb when installing the bulb.

### BELT

## ⚠ CAUTION ⚠

To reduce the risk of injury from moving parts -Unplug before servicing.







The belt is located under the bottom plate of the vacuum and should be checked from time to time to be sure it is in good condition. When To Replace Replace the belt if it is stretched, cut, or broken. To check the belt, refer to Fig. 4.26 – 4.28.

### How To Replace

4.23 Turn the vacuum over so the bottom side is facing up and remove the (6) screws (A). 4.24 Pivot out the bottom plate away from the hidden latch (B). 4.25

Remove the used belt from brushroll (C) then from the motor shaft (metal rod) (D) and discard.

**What to Buy:** Belt

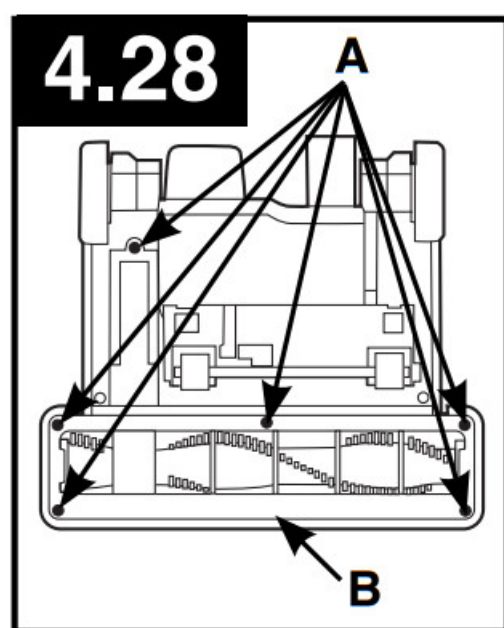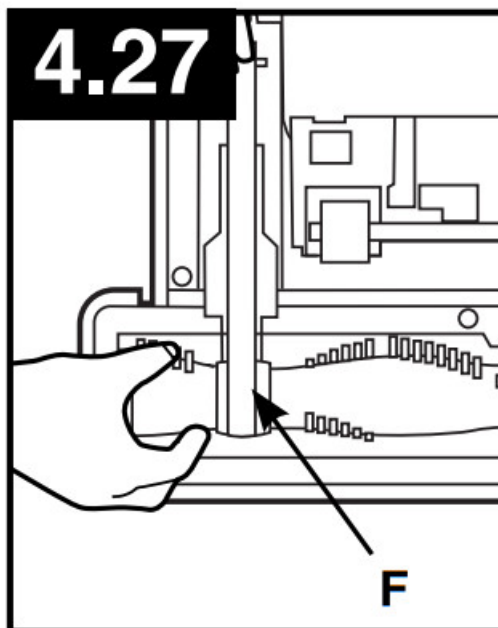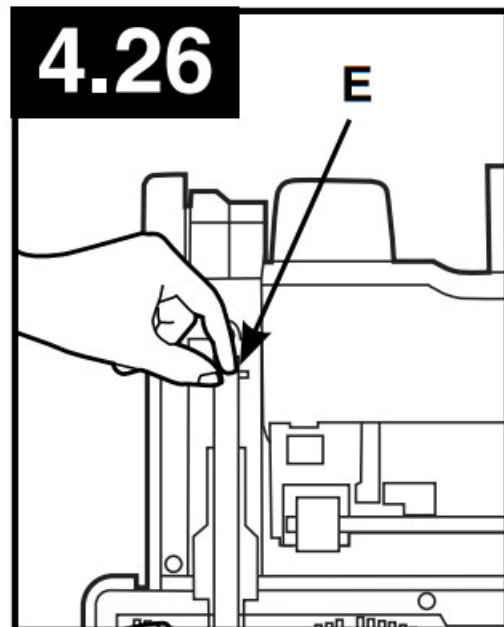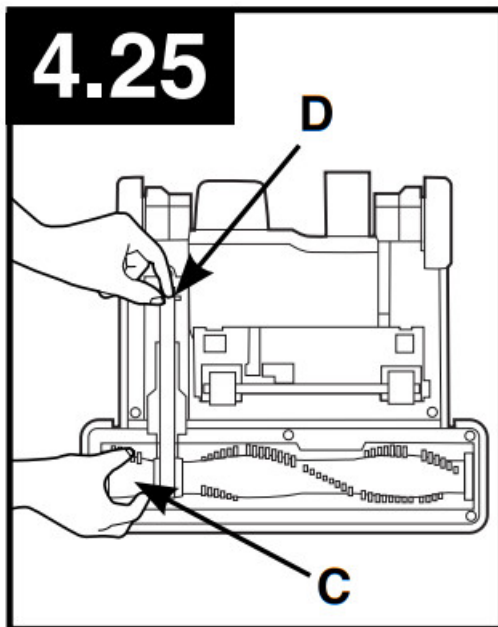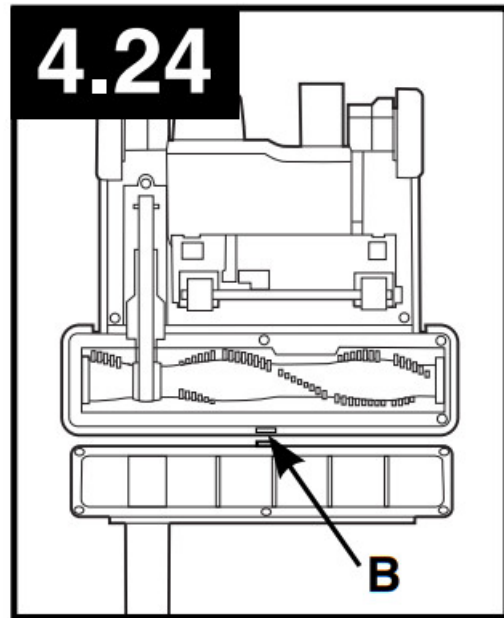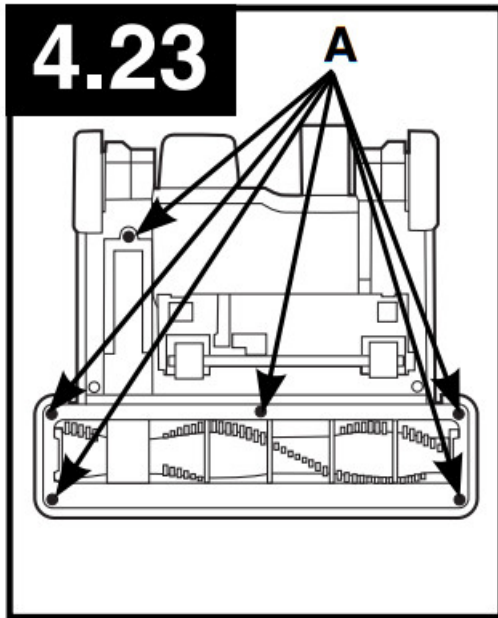



## IMPORTANT

Rotate the brush roll manually to make sure the belt is not twisted.

Use only genuine HOOVER® belts with your vacuum.

When purchasing a new belt for models with Brushroll On/Off (Suction Only Mode), ask for Flat Belt – HOOVER® part No. 562289001 or AH20065.

If desired, additional belts can be purchased at Hoover.com or 1-800-944-9200

## TROUBLESHOOTING

If a minor problem occurs, it usually can be solved quite easily when the cause is found by using the checklist below. Any other servicing should be done by an authorized service representative. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.



### WARNING

To reduce the risk of personal injury – Unplug before cleaning or servicing.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
<b>The vacuum won't run</b>	1. Power cord not firmly plugged into outlet.	1. Plug the unit in firmly.
	2. Blown fuse or tripped breaker.	2. Check the fuse or breaker in the home. Replace fuse/reset breaker in home.
	3. Thermal Protector activated.	3. Unplug and allow the vacuum to cool for 30min. (This will reset the thermal protector)
<b>The system Check Indicator has turned red re The vacuum won't pick up Low suction.</b>	1. Rinsable Filter and/ or Filter made with HEPA media is dirty.	1. Clean Rinsable Filter and or Filter made with HEPA media – Pg. 11.
	2. Dirt cup full and/ or clogged.	2. Empty dirt cup – Pg. 10.
	3. Broken or worn belt.	3. Replace belt – Pg. 14.
	4. Brushroll and/ or Hose clogged.	4. Check Hose – Pg. 13. Check Brushroll – Pg. 12.
	5. Carpet height setting is incorrect.	5. Set Carpet Height Adjustment to appropriate setting for carpet being cleaned – Pg. 7
	6. Suction Only Mode is ON.	6. Step on Brushroll ON/OFF Pedal to turn Suction Only Mode OFF – Pg. 6.
	7. Valve dial may be partially turned and/or not in the proper mode.	7. Turn the valve dial to FLOOR or HOSE mode. – Pg. 7
<b>Dust escaping from the vacuum.</b>	1. Dirt cup full.	1. Empty dirt cup – Pg. 10.
	2. Dirt cup not installed correctly.	2. Review Dirt Cup removal & replacement – Pg. 11.
	3. Hose not installed correctly.	3. Review Hose installation – Pg. 8.
	4. Rinsable and/ or Filter made with HEPA media not installed completely.	4. Review Filter Removal and Cleaning – Pg. 11.
<b>Headlight not working.</b>	1. Bulb burnt out.	1. Replace bulb – Pg. 13.
	2. Loose electrical wires.	2. Call 1-800-944-9200 for the nearest authorized Hoover® dealer.

<b>The vacuum is difficult to push or won't move forward.</b>	1. Carpet height setting is incorrect.	1a. Set the Carpet Height Adjustment knob to the appropriate setting for the carpet being cleaned – Pg. 7.
	2. Brushroll is activated.	2. For very high pile carpet deeper than 1", turn brush roll off.
<b>Turbo Tool brush roll won't turn</b>	1. Too much pressure being applied to tool.	1. Continue using tool and applying light pressure.
	2. Blockage.	2. Remove blockage.
	3. Low vacuum suction.	3. Check items under "Vacuum won't pick up or Low suction."
	4. Valve dial may be partially turned and/or not in the proper mode.	4. Turn the valve dial to FLOOR or HOSE mode. – Pg. 7
<b>A smoky/burning smell detected.</b>	1. Belt broken or stretched.	1. Replace brush roll belt – Pg. 14.
	2. Brushroll is clogged.	2. Clear/ remove debris from brush roll – Pg. 12.

## SERVICE

To obtain approved Hoover ® service and genuine Hoover ® parts, locate the nearest Authorized Hoover ® Warranty Service Dealer (Depot) by:

- Checking the Yellow Pages under "Vacuum Cleaners" or "Household".
- Visit our website at [hoover.com](http://hoover.com) (U.S. Customers) or [hoover.ca](http://hoover.ca) (Canadian customers). Follow the service center link to find the service outlet nearest you.
- For an automated referral of authorized service outlet locations call 1-800-944-9200.

Do not send your vacuum to Hoover ®, Inc., Company in Glenwillow for service. This will only result in delay.

### **If you need further assistance:**

To speak with a customer service representative call 1-800-944-9200; Mon-Fri 8 am-7 pm EST. Always identify your vacuum by the complete model number when requesting information or ordering parts. (The model number appears on the bottom of the vacuum.) PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

## WARRANTY

### **LIMITED FIVE-YEAR WARRANTY** (Domestic Use)

#### **WHAT THIS WARRANTY COVERS:**

When used and maintained in normal household use and in accordance with the Owner's Manual, your HOOVER product is warranted against original defects in material and workmanship for a full five years from the date of purchase (the "Warranty Period"). During the Warranty Period, Hoover ® will provide labor and parts, at no cost to you, to correct any such defect in products purchased in the United States, U.S. Military Exchanges and Canada. ®

#### **HOW TO MAKE A WARRANTY CLAIM**

If this product is not as warranted, take or send the product to either a Hoover Authorized Warranty Service Dealer along with proof of purchase. For an automated referral to authorized service outlets in the U.S.A., phone: 1-800-944-9200 OR visit Hoover ® online at [www.hoover.com](http://www.hoover.com). For additional assistance or information concerning this Warranty or the availability of warranty service outlets, phone the Hoover ® Consumer Response Center, Phone 1-800-944-9200, Mon-Fri 8 am-7 pm EST. ® WHAT THIS



## WARRANTY DOES NOT COVER:

use of the product in a commercial operation (such as maid, janitorial, and equipment rental services), brush roll, belt, improper maintenance of the product, damage due to misuse, acts of God, nature, vandalism or other acts beyond the control of Hoover, owner's acts or omissions, use outside the country in which the product was initially purchased and resales of the product by the original owner. This warranty does not cover pick-up, delivery, ® transportation or house calls. However, if you mail your product to a Hoover ® Authorized Warranty Service Dealer, cost of shipping will be paid one way.

This warranty does not apply to products purchased outside the United States, including its territories and possessions, outside a U.S. Military Exchange and outside of Canada. This warranty does not cover products purchased from a party that is not an authorized retailer, dealer, or distributor of Hoover ® products.


## OTHER IMPORTANT TERMS

This Warranty is not transferable and may not be assigned. This Warranty shall be governed and construed under the laws of the state of Ohio. The Warranty Period will not be extended by any replacement or repair performed under this Warranty.



THIS WARRANTY IS THE EXCLUSIVE WARRANTY AND REMEDY PROVIDED BY HOOVER ®. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE DISCLAIMED. IN NO EVENT WILL HOOVER BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE TO OWNER OR ANY PARTY CLAIMING THROUGH THE OWNER, WHETHER BASED IN CONTRACT, NEGLIGENCE, TORT OR STRICT PRODUCTS LIABILITY OR ARISING FROM ANY CAUSE WHATSOEVER. Some states do not allow the exclusion of consequential damages, so the above exclusion may not apply to you. This warranty gives you specific rights; you may also have others that vary from state to state.

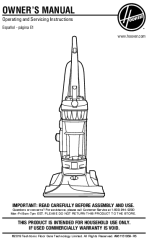

## Documents / Resources

	<p><a href="#">HOOVER UH72600W WindTunnel 3 High Performance</a> [pdf] Owner's Manual UH72600W WindTunnel 3 High Performance, UH72600W, WindTunnel 3 High Performance, 3 High Performance, Performance</p>
---	--

## References

-  [Hoover Canada](#)
-  [Vacuum Cleaners | Carpet Cleaners | Hard Floor Cleaners | Hoover](#)
-  [Vacuum Cleaners | Carpet Cleaners | Hard Floor Cleaners | Hoover](#)