



HORI Device Manager for Xbox Series X Instruction Manual

[Home](#) » [HORI](#) » HORI Device Manager for Xbox Series X Instruction Manual 



Instruction Manual

Thank you for purchasing this product.
Before using this product please read the instructions carefully.
After reading the instruction manual, please keep it for reference.

Caution



Caution

Parents/Guardians:

Please read the following information carefully.

- This product contains small parts. Keep away from children under 3 years old.
- Keep this product away from small children or infants. Seek medical attention immediately if any small parts are swallowed.
- Long cord. Strangulation hazard.
- Keep the product away from dusty or humid areas.
- Do not use this product if it has been damaged or modified.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not place this product near heat sources or leave it under direct sunlight for an extended period. Overheating may cause malfunction.
- Do not touch the metal parts of the USB plug.
- Do not apply strong impact or weight on the product.
- Do not pull roughly or bend the cable of the product.
- Do not disassemble, modify or attempt to repair this product.
- If the product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or

 
thinner.

- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.


Contents

- [1 Included](#)
- [2 Platform](#)
- [3 Layout](#)
- [4 How to attach Clamp](#)
- [5 How to Connect](#)
- [6 Quick Release](#)
- [7 Download App](#)
- [8 Main Features](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)


Included

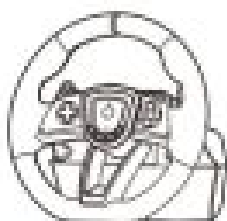

Steering unit

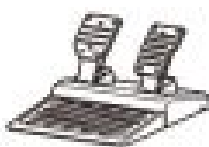 

Foot pedals

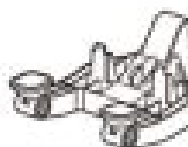 

Clamp



Screw

Platform

Xbox Series X|S / Xbox One / Windows 10

System requirements	USB Port, Internet Connection
---------------------	-------------------------------

* Functions as PC controller through XInput.

This product does not support DirectInput.

Important


Before using this product with the Xbox Series X|S / Xbox One system, please read the included instructions carefully.

Please check that your Xbox Series X|S / Xbox One is updated to the latest system firmware.

This product is designed for the Xbox Series X|S, but it can also be used with the Xbox One and Windows 10 by following the instructions in this manual.

Layout

 Steering unit

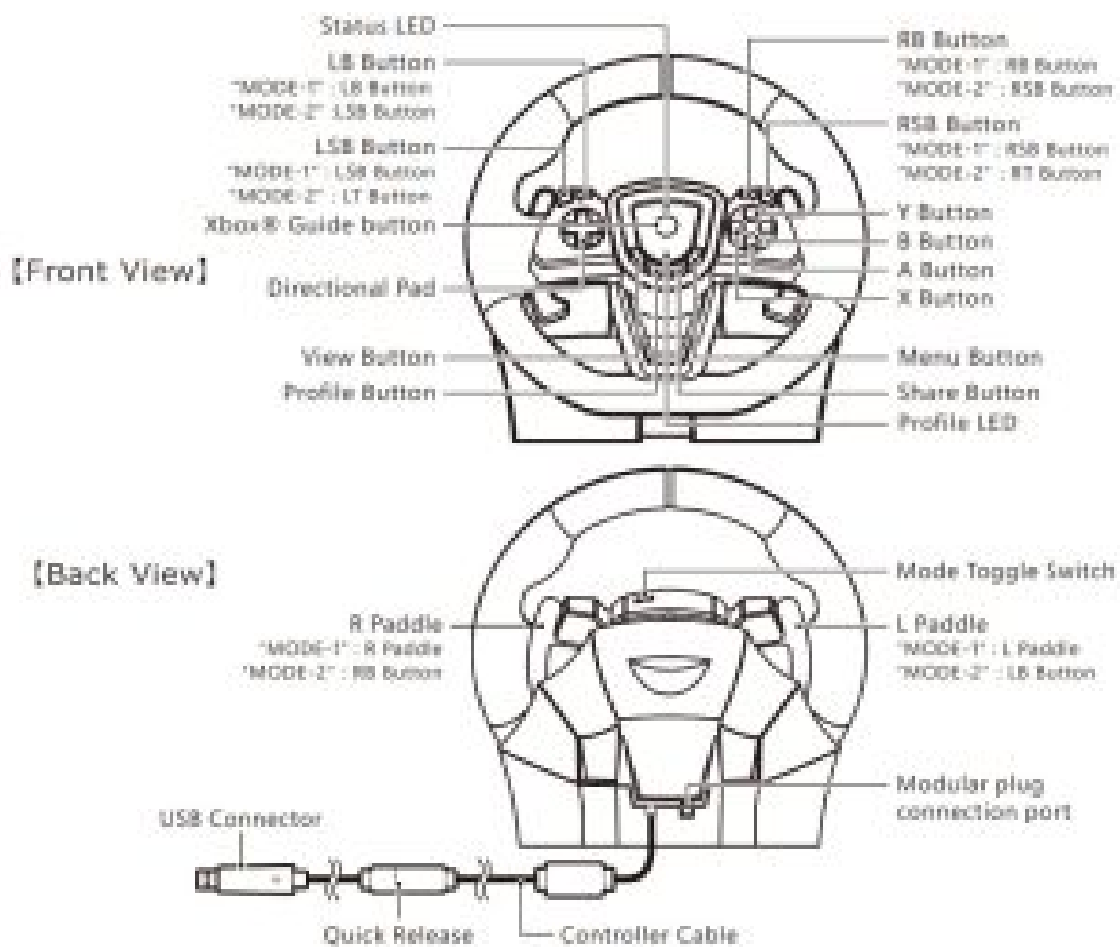


Foot pedals




How to attach Clamp

 1. Tighten the clamp into the steering unit base with the clamp screw.

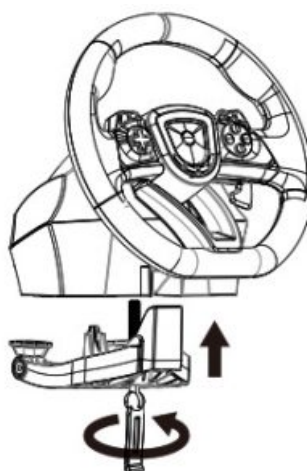

 2. Use the clamp to secure the steering unit to a flat, hard surface (i.e. table).

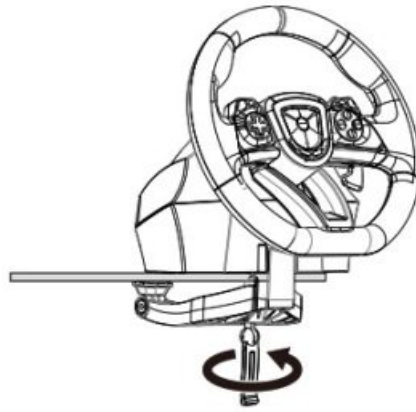

- * Do not attach to furniture made from glass or other fragile materials.
- * Carefully detach from furniture to prevent damage to furniture or product.

3. Assemble the foot pedal as shown in the image below.



How to Connect

1. Connect the foot pedal unit modular connector to the steering unit modular connection port.



* This product can be used without the foot pedals (Except "MODE-1").

2. Set the Mode Toggle Switch to the appropriate setting then connect the USB cable.

- * Do not press on any buttons when connecting the USB cable.
- * Check the connector direction before inserting.

"MODE-1" (For Xbox Series X|S)

* "MODE-1" may not function depending on the software. If that happens, please toggle to "MODE-2".



Connect the steering unit USB to the Xbox Series X|S or Windows 10 PC's USB port.

"MODE-2" (If "MODE-1" does not function correctly for Xbox Series X|S or when connecting to a Windows 10 PC)



Connect to the USB port of the Xbox Series X|S console.



Do not turn the steering wheel while you are connecting or turning on the Xbox Series X|S. It is calibrating the center position of the steering wheel when connecting.

Quick Release

Your controller cord has a quick release. This is a safety feature designed to reduce the chance of the Xbox Series X|S / Xbox One console or computer falling when the cord is pulled. If the console or computer falls and hits someone, especially a small child, it could cause a serious injury.

To reduce the risk of injuries or damage to the console or computer, it is important to use the controller and the quick release properly. Use the controller connector, not the quick release, to routinely connect and disconnect the controller. If the quick release disconnects, simply reconnect it by aligning the grooved indentations and pressing the two parts completely together.

The controller will not work unless the quick release is connected properly. Never tape, glue, or otherwise prevent the quick release from pulling apart.

The quick-release reduces but does not eliminate, the risk of the computer or console being pulled off its surface. To further reduce the risk:

- Do not allow anyone to pull on the controller or controller cord in a way that causes the computer or console to move.
- Do not allow controller cords to become crossed or tangled with one another.



Download App

HORI Device Manager for Xbox Series X
<How to Download>

1. Search for "HORI" on the Microsoft Store.
2. Install the "HORI Device Manager for Xbox Series X" App.

About Profile

The Profile Button is used to toggle between profiles (profiles are adjusted via the HORI Device Manager for Xbox Series X).



Profiles will switch when the Profile Button is pressed.
The following features can be adjusted in the app:

- Quick Handling Mode
- Dead Zone Adjustment
- Sensitivity Adjustment
- Assign Mode
- Profile
- D-Pad/Analog Stick Toggle Switch

The Profile LED will change based on the Profile setting.

Profile Set	Profile LED
1	Green
2	Red
3	Blue
4	White

Main Features

Steering unit	
External Dimensions	280×243×268mm
Steering Diameter	280mm
Angle of Rotation	270°
Weight	1.4kg
Cable Length	3.0m
Foot pedals	
External Dimensions	225×300×148mm
Weight	0.9kg
Cable Length	1.5m

THE FCC WANTS YOU TO KNOW

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of

the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The normal function of the product may be disturbed by strong electromagnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual (How to connect). In case the function does not resume, please relocate to an area that does not have electromagnetic interference to use the product.

The wires are not to be inserted into socket outlets.

The packaging must be retained since it contains important information.

PRODUCT DISPOSAL INFORMATION



EU and Turkey only

Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for the disposal of electrical equipment batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in the treatment and disposal of electrical waste.

Applicable to EU countries and Turkey only.

US

Warranty

HORI warrants to the original purchaser that the product purchased new in its original packaging shall be free of any defects in material and workmanship for a period of 90 days from the original date of purchase. If the warranty claim cannot be processed through the original retailer please contact HORI customer support directly at infous@hori.jp. Please visit <http://stores.horiusa.com/policies/> for warranty details.

EU

Warranty

For all warranty claims made within the first 30 days after purchase, please check with the retailer where the original purchase was made for details. If the warranty claim cannot be processed through the original retailer or for any other inquiries pertaining to our products, please contact HORI customer support directly at infoeu@hori.jp.


- The image on the package may differ from the actual product.
- The manufacturer reserves the right to change the product design or specifications without notice.
- Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X|S, Xbox One, Windows are trademarks of the Microsoft group of companies.
- HORI & HORI logo are registered trademarks of HORI.



MADE IN CHINA

Ages 6+

 Documents / Resources

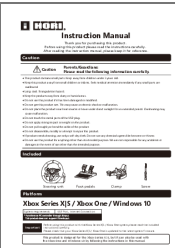	<p>HORI HORI Device Manager for Xbox Series X [pdf] Instruction Manual HORI, Device Manager, for, Xbox, Series X</p>
---	--