

HORI SPF-023 Fighting Commander Instruction Manual

Home » HORI SPF-023 Fighting Commander Instruction Manual





Contents

- 1 Instruction
- 2 Included
- 3 Platform
- **4 How to Connect**
- 5 Layout
- 6 Assign Mode
- 7 [Returning One Button to Default]
- 8 Directional Pad Sensitivity

Adjustment

- 9 LOCK Function
- 10 Download App
- 11 Main Features
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

Instruction

Thank you for purchasing this product.

Before using this product, please read the instructions carefully. After reading the instruction manual, please keep it for reference

Caution




Caution Parents/Guardians: Please read the following information carefully.


- · Long cord. Strangulation hazard.
- Keep the product away from dusty or humid areas.
- Do not use this product if it has been damaged or modified.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not place this product near heat sources or leave under direct sunlight for an extended period. Overheating may cause malfunction.
- Do not touch the metal parts of the USB plug.
- Do not apply strong impact or weight on the product.
- Do not pull roughly or bend the cable of the product.
- Do not disassemble, modify or attempt to repair this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.

Included

Controller ×1×1

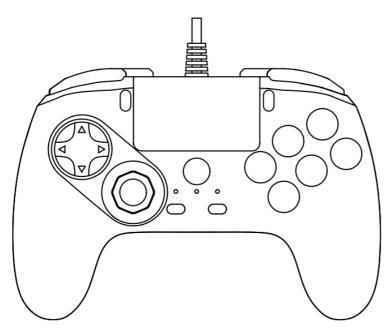

• Instruction Manual ×1

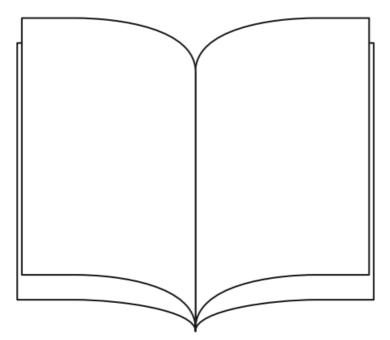

Platform

PlayStation®5 console, PlayStation®4 console, PC*

* PC compatibility not endorsed by Sony Interactive Entertainment.

System requirements: USB Port, Internet Connection

* Functions as PC controller through XInput. This product does not support DirectInput.


Important

Before using this product with your PlayStation®5 console or PlayStation®4 console, please read the included instructions carefully.


Please check that your PlayStation®5 console or PlayStation®4 console is updated to the latest system software.

How to Connect


1. Set the Hardware Toggle Switch to the desired platform and plug in the USB cable.

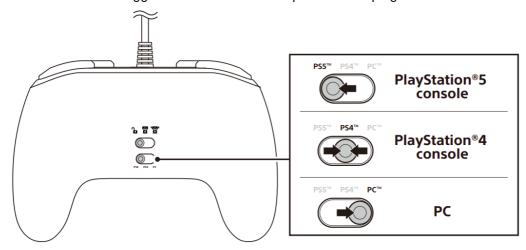

2. Plug the USB cable to PlayStation®5 console / PlayStation®4 console / PC USB port.

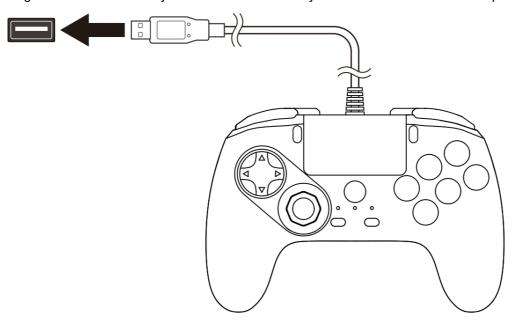


3. Press the PS Button to finish pairing.

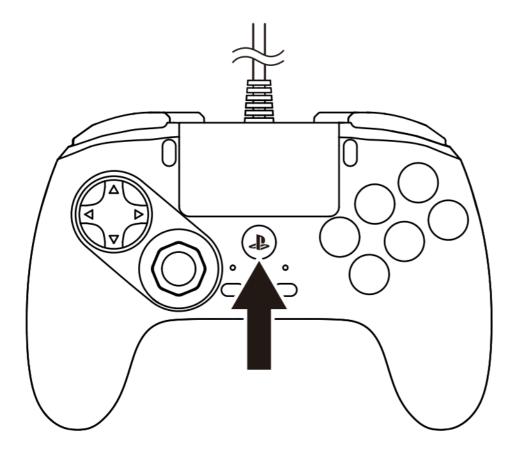


Layout

Caution

- The PS5™ console and PS4™ console cannot be turned on with the PS Button.
- The PS Button cannot be used to return from PlayStation®5 Rest Mode or PlayStation®4 Standby Mode.
- Do not press any buttons, switches or the joystick when returning from PlayStation®5 Rest Mode or PlayStation®4 Standby Mode.
- The headset jack is not compatible with PC.
- The Touchpad and Touchpad Button are not compatible with PC

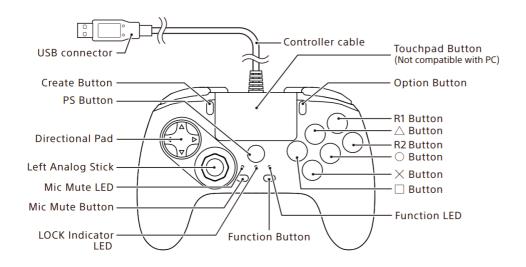

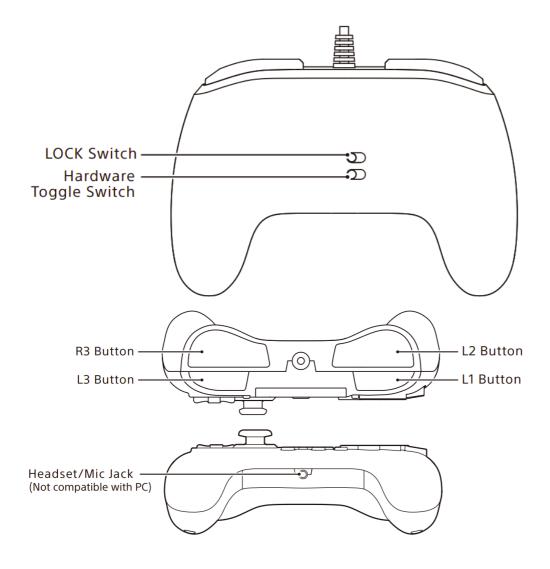

Assign Mode

Assignable Functions can be assigned to any of the Assignable Buttons listed below

Assignable Buttons

- Button /
- Button / IButton / Button / Directional Pad / L1 Button /
- Button / L2 Button / R2 Button / L3 Button / R3 Button

Assignable Functions

- Button /
- Button / IButton /
- Button / Directional Pad /
- Button / R1 Button / L2 Button / R2 Button / L3 Button / R3 Button / NC (Button stops responding)

	Operation	LED Status	Settings
①	Push and hold for 3 secon ds	Function LED (Red) Slow Blinking	Assign Mode activated – When in Assign Mode, bu tton inputs will be non-res ponsive.
2	Press the button that you want to assign the function to.	Function LED (Red) Blink s rapidly	The button you want to as sign is selected.
3	After the button is selecte d in 2, press the button th at has the function you wa nt to assign. or Hold the C reate Button for 3 seconds when disabling a button	Function LED (Red) LED On	Setting is complete when the function is assigned to the button pressed in ②, o r when set to NC (button s tops responding).

- The Function LED (Red) will stay on while button functions are changed from default.
- If no buttons are pressed for more than 4 seconds at ① or ②, the Function LED (Red) will automatically turn off and Assign Mode will turn o.
- If multiple buttons were pressed in ③, the function of the last button pressed will be assigned.
- Settings will be saved even if the controller is unplugged.

[Returning One Button to Default]

	Operation	LED Status	Settings
1	Push and hold for 3 secon ds	Function LED (Red) Slow Blinking	When in Setting mode, all buttons on the controller will not respond.
2	Press the button you would like to return to default twice.	Off	The button function is set to default and Assign Mod e will turn off.

The Function LED (Red) will remain lit if there are buttons that are assigned with functions dierent from the default settings.

[Return all Buttons to Default]

	Operation	LED Status	Settings
1	Push and hold for 3 secon ds	Function LED (Red) Slow Blinking	When in Setting mode, all buttons on the controller will not respond.
2	Press	Off	All button functions are se t to default and Assign Mo de will turn off.

- If no buttons are pressed for more than 4 seconds at ①, the Function LED (Red) will automatically turn off and Assign Mode will turn off.
- Settings will be saved even if the controller is unplugged.

Directional Pad Sensitivity Adjustment

	Operation	LED Status	Settings
1	Push and hold for 3 secon ds	Function LED (Red) Slow Blinking	When in Setting mode, all buttons on the controller will not respond.
②	High sensitivity Or Tilt the Left Analog Stick up or down. Low sensitivity	The sensitivity level will increase or decrease by one I evel each time the Left Analog Stick is tilted up or dow n.	
		1 Blink Slow Blinking	Input sensitivity level 1
		2 Blink Slow Blinking	Input sensitivity level 2
		3 Blink Slow Blinking	Input sensitivity level 3
		4 Blink Slow Blinking	Input sensitivity level 4
		5 Blink Slow Blinking	Input sensitivity level 5
		6 Blink Slow Blinking	Input sensitivity level 6
3	Press	Off	Settings complete
	1 1699		

If no buttons are pressed for more than 4 seconds during ② or the Left Analog Stick is not tilted up/down during ②, the Function LED (Red) will automatically turn o and the Directional Pad Sensitivity function will turn Off.

LOCK Function

Some inputs can be disabled by using the LOCK Switch. In LOCK Mode, the functions listed in the table below are disabled.

7 6 '6'	LOCK Indicator LED Off	LOCK Function Off
₽ 6 '6' 	LOCK Indicator LED On	PS Button / Touchpad Button Off
₽ 8 '8'	LOCK Indicator LED On	PS Button / Touchpad Button / Create Button / Option Button Off

Download App

HORI Device Manager

Please download and install the "HORI Device Manager" from this product's website using your PC. URL: https://hori.jp/manual/p5/spf-023/

The following features can be adjusted in the app:

- D-Pad Input Settings
- Profile
- Assign Mode

Main Features

• External Dimensions: 170mm × 90mm × 48mm

• Weight: 250

• Cable Length: 3.0

Simplified Declaration of Conformity

Hereby, HORI declares that this product is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: https://hori.co.uk/consumer-information/

For UK: Hereby, HORI declares that this product is in compliance with the relevant statutory requirements.

The full text of the declaration of conformity is available at the following internet address: https://hori.co.uk/consumer-information/

THE FCC WANTS YOU TO KNOW

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit dierent from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The normal function of the product may be disturbed by strong electro-magnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual (How to connect). In case the function does not resume, please relocate to an area which does not have electro-magnetic interference to use the product.

The wires are not to be inserted into socket-outlets.

The packaging must be retained since it contains important information

PRODUCT DISPOSAL INFORMATION

Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste. Applicable to EU countries and Turkey only.



EU and Turkey only

Warranty

HORI warrants to the original purchaser that the product purchased new in its original packaging shall be free of any defects in material and workmanship for a period of 1 year from the original date of purchase. If the warranty claim cannot be processed through the original retailer please contact HORI customer support directly at info@horiusa.com. Please visit http://stores.horiusa.com/policies/ for warranty details.

Warranty

For all warranty claims made within the first 30 days after purchase, please check with the retailer where the original purchase was made for details. If the warranty claim cannot be processed through the original retailer or for any other inquiries pertaining to our products, please contact HORI customer support directly at

info@horiuk.com

"PlayStation", "PS5" and "PS4" are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

All other trademarks are the property of their respective owners.

Manufactured and distributed under license from Sony Interactive Entertainment.



Documents / Resources



HORI SPF-023 Fighting Commander [pdf] Instruction Manual SPF-023 Fighting Commander, SPF-023, Fighting Commander, Commander

References

- Policies
- Consumer Information
- I HORI | Download Complete Instruction Manual [SPF-023] APP download

Manuals+,