 


# **HORMANN FIT 2-1 BiSecur Radio Internal Push Button Instruction Manual**

[Home](#) » [HORMANN](#) » **HORMANN FIT 2-1 BiSecur Radio Internal Push Button Instruction Manual** 

**HORMANN FIT 2-1 BiSecur Radio Internal Push Button**

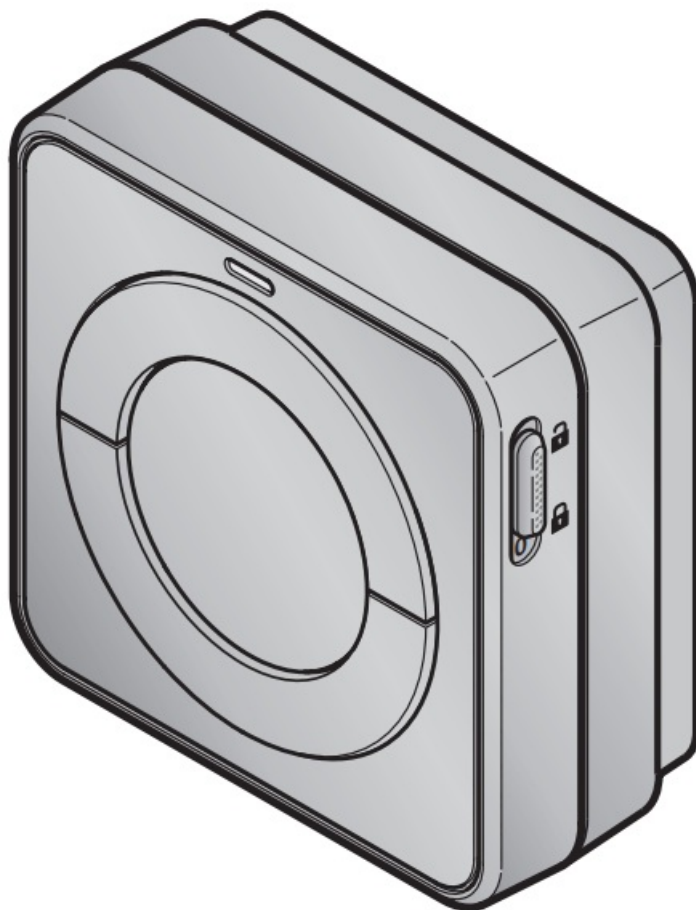





## Contents

- 1 About these instructions
  - 1.1 Definitions used
  - 1.2 Symbols used
- 2 Safety instructions
  - 2.1 Intended use
  - 2.2 Safety instructions for teach-in and operation
- 3 Scope of delivery
- 4 Product description (see Figure 1 )
- 5 Fitting
  - 5.1 Screwing on the radio internal push button (see Figure 2 )
- 6 Connection of control elements (see Figure 3 )
  - 6.1 Key switches
- 7 Initial start-up
  - 7.1 Inserting / changing the battery (see Figure 4 )
- 8 Operation
- 9 Learning and inheriting /transmitting a radio code
  - 9.1 Teaching in a radio code (see Figure 5 )
  - 9.2 Mixed operation / BiSecur and fixed code 868 MHz
- 10 Reset
  - 10.1 Setting the fixed code 868 MHz
- 11 LED display
- 12 Cleaning
- 13 Dismantling and disposal
- 14 Technical data
- 15 EU and UK Declaration of Conformity
- 16 Documents / Resources
  - 16.1 References

## About these instructions

These instructions are divided into a text section and an illustrated section. They contain important information on the product, and especially safety instructions and warnings.

- Read through the instructions carefully.
- Keep these instructions in a safe place.

Dissemination as well as duplication of this document and the use and communication of its content are prohibited unless explicitly permitted. Noncompliance will result in damage compensation obligations. All rights reserved in the event of patent, utility model or design model registration.

### Definitions used

#### System

A door with the associated operator.

#### Equipment/ system

A product with radio receiver, e.g. relay receiver, radio socket receiver.

#### Status

The current position of a door or the current status of an equipment/ system

### Symbols used



Important note for avoiding material damage and personnel injury





High exertion of force

## Safety instructions

### Intended use

The radio internal push button FIT 2-1 BiSecur is a unidirectional transmitter for operators and their accessories. It can be operated via BiSecur radio and the fixed code 868 MHz.

Other applications are not permitted. The manufacturer is not liable for damages caused by improper use or incorrect operation.

### Safety instructions for teach-in and operation



#### WARNING

#### Risk of injury during intended or unintended door travel

- ▶ Make sure that the radio internal push buttons are kept away from children and can only be used by people who have been instructed on how the remotecontrol system functions!
- ▶ If the door has only one safety equipment, only operate the radio internal push button if you are within sight of the door!
- ▶ Drive or walk through the door openings of remote-controlled systems only when the door is in the Open end-of-travel position!
- ▶ Never stand in the door's area of travel.
- ▶ Note that accidentally pressing a button on the hand transmitter can result in door travel.
- ▶ Achten sie darauf, dass sich beim Einlernen des Funk-Systems keine Personen oder Gegenstände im Bewegungsbereich von Tor/ Tür befinden.



#### CAUTION

#### Danger through unintended activation of equipment

The remote-controlled operation of equipment can result in unintended activation, for example, machines can be actuated.

- ▶ Ensure that the remote-controlled operation of equipment does not result in danger to persons or objects or that these risks are covered by safety equipment.
- ▶ Observe the manufacturer information for the remote-controlled devices.
- ▶ The unintentional activation of machines must not be possible.

### NOTES

- If there is no separate entrance, perform changes and extensions of radio systems while standing in the facility.
- After programming or extending the radio system, you have to perform a function check.
- Local conditions may affect the range of the radio system

 
### Scope of delivery

- Radio internal push button FIT 2-1 BiSecur
- 2 × 1.5 V battery, type: AAA (LR03), alkali-manganese



- Fixing material
- Operating instructions

## Product description (see Figure 1 )

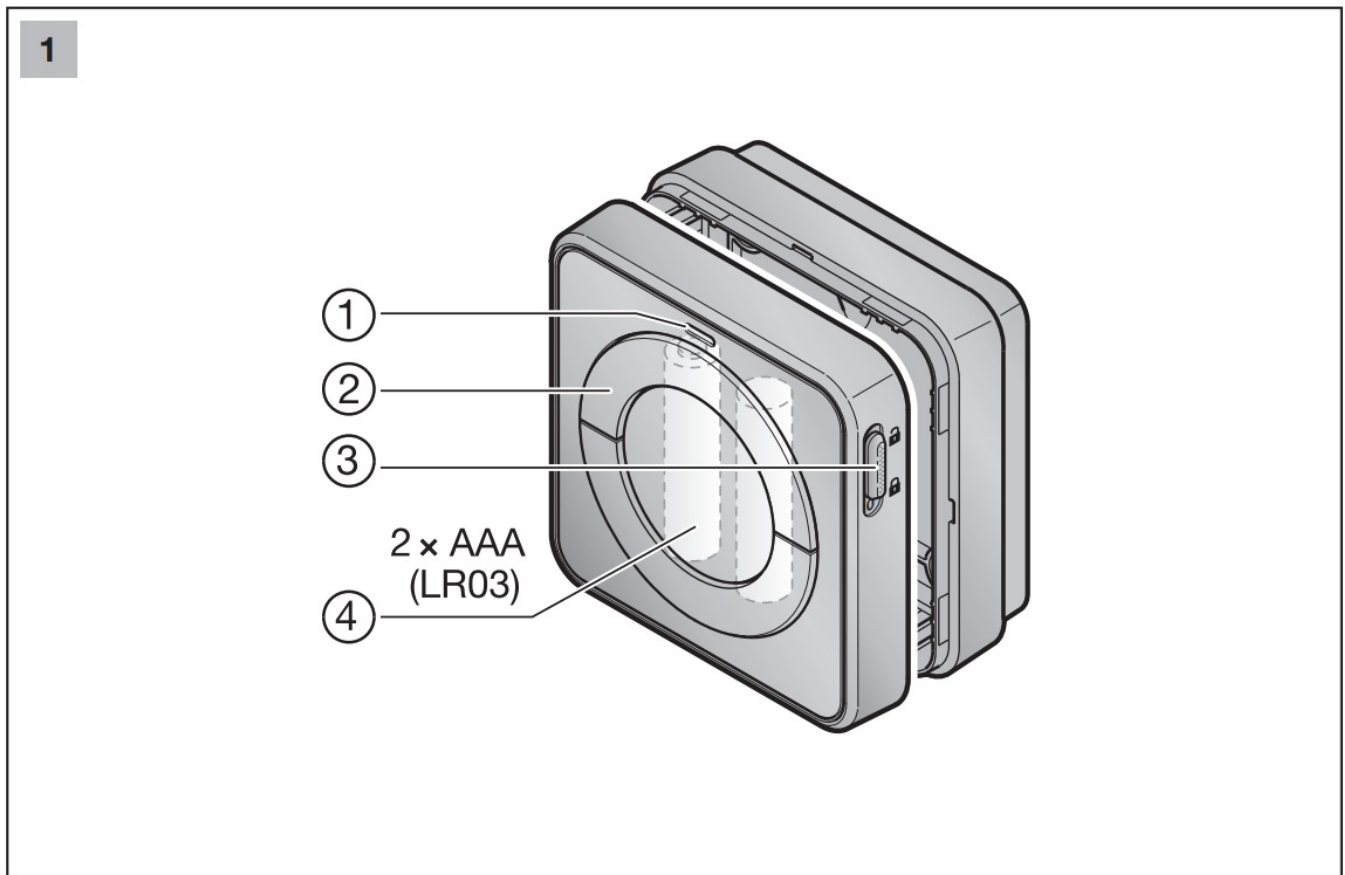

1. LED, bi-colour
2. Transmitter buttons
3. On / off switch for connected control elements
4. Battery

## Fitting

 
The choice of the fitting location affects the range.

- Prior to fitting, verify that the radio signal can reach the system or the equipment at the selected fitting site.
  - Determine the best orientation, by trial and error, if required.
- Direct fitting on metal will affect the range.
  - Fit at a distance of 2 – 3 cm.

## Screwing on the radio internal push button (see Figure 2 )





2

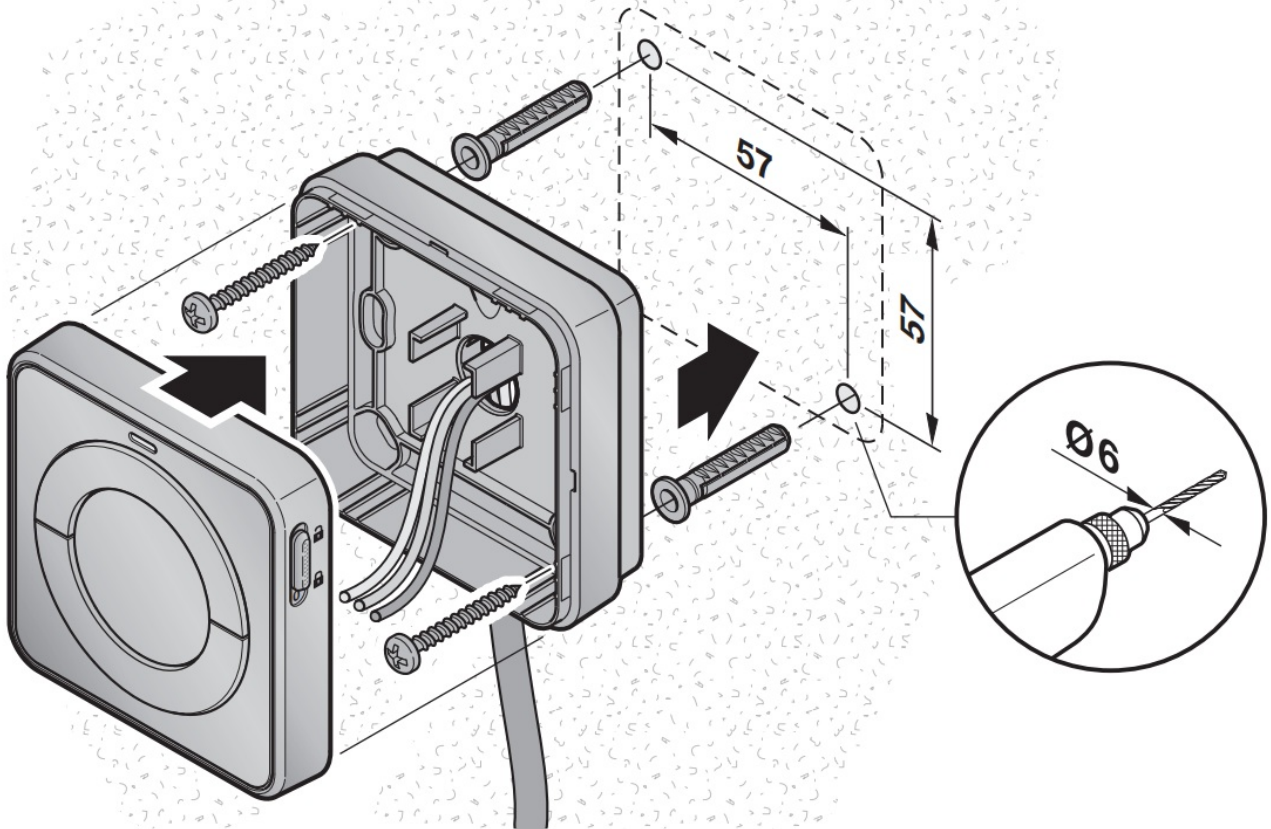

**Connection of control elements (see Figure 3 )**



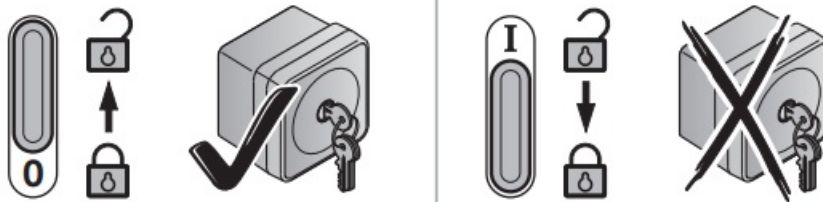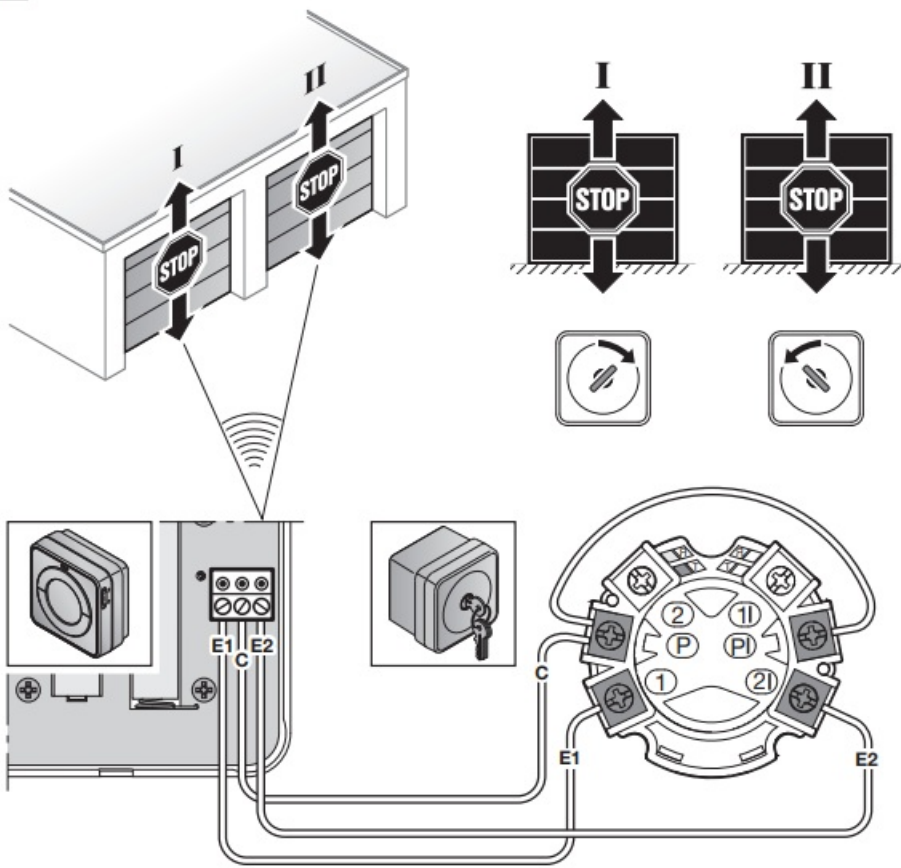  

### Key switches

 
A key switch can be connected as shown in Figure. Here, input E1 corresponds to the top transmitter button and input E2 to the bottom transmitter button. This makes it possible to open and close two garage doors in impulse operation. This function can be turned off using the on / off switch.

### Initial start-up

After inserting the battery, the radio internal push button is ready for operation.

Inserting / changing the battery (see Figure 4 )



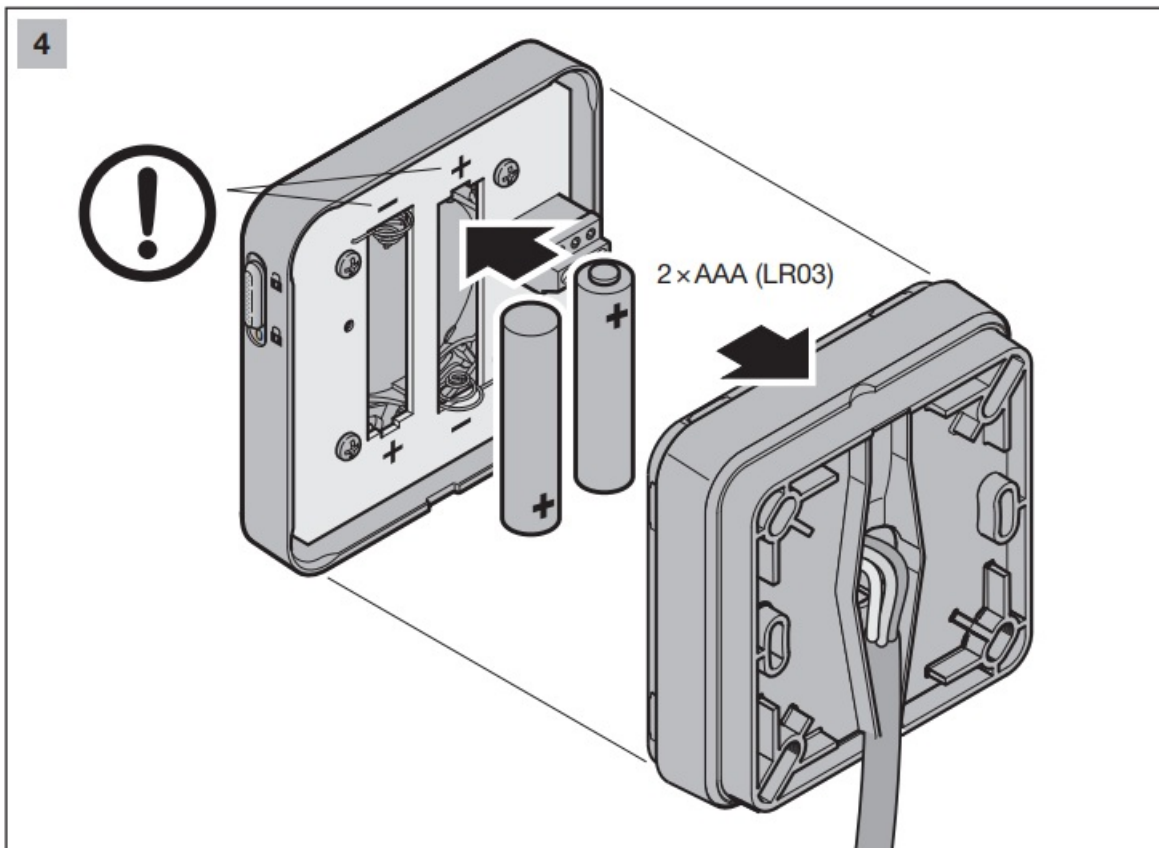

## WARNING

### **Risk of explosion due to incorrect battery type**

- ▶ Use only this battery type: 2 × 1.5 V, type: AAA (LR03), alkali-manganese
- ▶ Remove the battery from the radio internal push button if it is out of use for a long period of time.

**Proper disposal: See section 13**

## **Operation**

Each transmitter button is assigned to a radio code.

- ▶ Press the transmitter button whose radio code you want to transmit.
  - The LED is illuminated blue for 2 seconds.
  - The radio code is transmitted.

### **Learning behaviour of inherited radio codes**

If the radio code for the transmitter button has been inherited from a hand transmitter and is being used for the first time, proceed as follows depending on the product:

#### **Garage door operator series 4, roller garage door operator series 2, receiver ESE BS HCP**

- ▶ Press and hold the transmitter button until the LED flashes alternately in red and blue and the desired function is performed.

#### **All other products**

- ▶ Press the transmitter button a second time.

## **Learning and inheriting /transmitting a radio code**

 
## WARNING

Risk of injury during intended or unintended door travel



► See warning in section 2.2.

#### Teaching in a radio code (see Figure 5 )

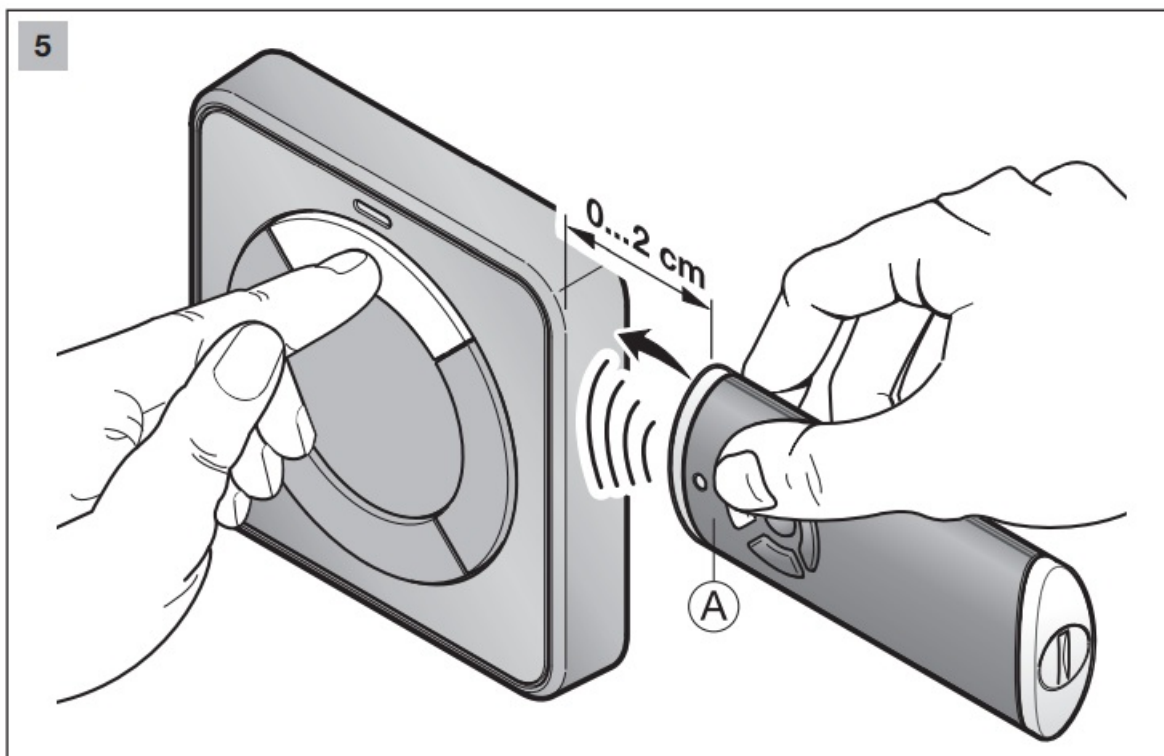

1. Hold the hand transmitter A to the right of the radio internal push button.
2. Press and hold the hand transmitter button whose radio code is to be inherited.
  - The LED is illuminated blue for 2 seconds and then goes out.
  - After 5 seconds, the LED alternates flashing in red and blue.
  - The hand transmitter sends the radio code.
3. Press and hold the transmitter button that should learn the radio code.
  - The LED is illuminated blue for 2 seconds and then goes out.
  - The LED will flash slowly in blue.
  - If the radio code is recognised, the LED flashes quickly in blue.
  - After 2 seconds, the LED goes out.
4. Release the hand transmitter button and the transmitter button. The radio code of the hand transmitter button has been taught in to the transmitter button.

#### NOTE

You have 15 seconds to inherit / transmit the radio code. If inheriting / transmitting the code was not successful within this period of time, repeat the process.

#### Mixed operation / BiSecur and fixed code 868 MHz

If BiSecur radio is configured, mixed operation (BiSecur and fixed code 868 MHz) is possible. The radio internal push button can learn radio codes from older hand transmitters (grey hand transmitter with blue buttons or device designation HSD2- 868) with fixed code 868 MHz.



## Reset

Each transmitter button is assigned to a new radio code by means of the following steps.

1. Open the radio internal push button housing.
2. Remove the battery for 10 seconds.
3. Press a transmitter button and keep it pressed.
4. Insert the battery.
  - The LED slowly flashes in blue for 4 seconds.
  - The LED flashes rapidly in blue for 2 seconds.
  - The LED is illuminated blue for a long time.
5. Release the transmitter button.

All radio codes are newly assigned.
6. Close the radio internal push button housing.

### NOTE

If you release the transmitter button prematurely, no new radio code is allocated.

### Setting the fixed code 868 MHz

1. Carry out steps 1 – 4 of the device reset
2. Continue to keep the transmitter button pressed.
  - The LED slowly flashes in red for 4 seconds.
  - The LED flashes rapidly in red for 2 seconds.
  - The LED is illuminated red for a long time.
3. Release the transmitter button.

**The fixed code 868 MHz has been set.**
4. Close the radio internal push button housing.

### NOTE

If you release the transmitter button prematurely, no new radio code is allocated.  
For more information, visit [www.hoermann.com](http://www.hoermann.com).

## LED display

### Blue (BU)

Status	Function
Is illuminated for 2 seconds	A radio code is being transmitted
Flashes slowly	Radio internal push button is in the learn mode
Flashes quickly after slow flashing	A valid radio code was detected during learning
Flashes slowly for 4 seconds, flashes quickly for 2 seconds, is illuminated long	Reset is being performed and completed



## Red (RD)

Status	Function
Flashes twice; following this, the radio code continues to be transmitted	The battery should be replaced soon
Flashes twice; following this, the radio code is no longer transmitted	The battery must be replaced immediately

## Blue (BU) and Red (RD)

Status	Function
Flashing alternately	The radio internal push button is in inherit / transmit mode

## Cleaning

### ATTENTION

Damaging the radio internal push button by faulty cleaning

► Only clean the radio internal push button with a clean, soft cloth.

### NOTE

Regular use of disinfectants can cause damage to the radio internal push button

## Dismantling and disposal

If the radio internal push button is glued, heat the adhesive strips to dismantle it, for example with a hair dryer



Dispose of the packaging sorted by materials



Electrical and electronic devices must be returned to the appropriate recycling facilities.



Dispose of the batteries separately. Each consumer is legally required to leave batteries with a collection point in their community, their district, or with a trader.

## Technical data

### Radio internal push button FIT 2-1 BiSecur

**Model** FIT2-1-868-BS

**Frequency** 868 MHz

**Transmitting power** Max. 20 mW (EIRP)

**Power supply** 2 × 1.5 V battery, type: AAA (LR03), alkali-manganese

**Perm. ambient temperature** -20 °C to +50 °C

**Max. humidity** Max. humidity

**Protection category** IP 20

**Dimensions (W × H × D)** 80 × 80 × 36 mm



## EU and UK Declaration of Conformity

Hörmann KG Verkaufsgesellschaft and Hörmann UK Ltd. herewith declares that the radio equipment type radio internal push button FIT 2-1 BiSecur complies with the EU Directive 2014/53/EU and the UK Regulations 2017 No. 1206.

The complete text of the EU Declaration of Conformity and of the UK Declaration of Conformity can be found on the following website:



[www.hoermann-docs.com/277130](http://www.hoermann-docs.com/277130)



4553883 B1

 
Hörmann KG Verkaufsgesellschaft  
Upheider Weg 94 – 98  
33803 Steinhagen  
Deutschland



# HÖRMANN

Documents / Resources





1	Einleitung
2	Einbauanleitung
3	Bedienung
4	Wartung
5	Technische Daten
6	Wichtige Hinweise
7	Garantie
8	Wichtige Hinweise
9	Wichtige Hinweise
10	Wichtige Hinweise
11	Wichtige Hinweise
12	Wichtige Hinweise
13	Wichtige Hinweise
14	Wichtige Hinweise
15	Wichtige Hinweise
16	Wichtige Hinweise
17	Wichtige Hinweise
18	Wichtige Hinweise
19	Wichtige Hinweise
20	Wichtige Hinweise
21	Wichtige Hinweise
22	Wichtige Hinweise
23	Wichtige Hinweise
24	Wichtige Hinweise
25	Wichtige Hinweise
26	Wichtige Hinweise
27	Wichtige Hinweise
28	Wichtige Hinweise
29	Wichtige Hinweise
30	Wichtige Hinweise
31	Wichtige Hinweise
32	Wichtige Hinweise
33	Wichtige Hinweise
34	Wichtige Hinweise
35	Wichtige Hinweise
36	Wichtige Hinweise
37	Wichtige Hinweise
38	Wichtige Hinweise
39	Wichtige Hinweise
40	Wichtige Hinweise
41	Wichtige Hinweise
42	Wichtige Hinweise
43	Wichtige Hinweise
44	Wichtige Hinweise
45	Wichtige Hinweise
46	Wichtige Hinweise
47	Wichtige Hinweise
48	Wichtige Hinweise
49	Wichtige Hinweise
50	Wichtige Hinweise
51	Wichtige Hinweise
52	Wichtige Hinweise
53	Wichtige Hinweise
54	Wichtige Hinweise
55	Wichtige Hinweise
56	Wichtige Hinweise
57	Wichtige Hinweise
58	Wichtige Hinweise
59	Wichtige Hinweise
60	Wichtige Hinweise
61	Wichtige Hinweise
62	Wichtige Hinweise
63	Wichtige Hinweise
64	Wichtige Hinweise
65	Wichtige Hinweise
66	Wichtige Hinweise
67	Wichtige Hinweise
68	Wichtige Hinweise
69	Wichtige Hinweise
70	Wichtige Hinweise
71	Wichtige Hinweise
72	Wichtige Hinweise
73	Wichtige Hinweise
74	Wichtige Hinweise
75	Wichtige Hinweise
76	Wichtige Hinweise
77	Wichtige Hinweise
78	Wichtige Hinweise
79	Wichtige Hinweise
80	Wichtige Hinweise
81	Wichtige Hinweise
82	Wichtige Hinweise
83	Wichtige Hinweise
84	Wichtige Hinweise
85	Wichtige Hinweise
86	Wichtige Hinweise
87	Wichtige Hinweise
88	Wichtige Hinweise
89	Wichtige Hinweise
90	Wichtige Hinweise
91	Wichtige Hinweise
92	Wichtige Hinweise
93	Wichtige Hinweise
94	Wichtige Hinweise
95	Wichtige Hinweise
96	Wichtige Hinweise
97	Wichtige Hinweise
98	Wichtige Hinweise
99	Wichtige Hinweise
100	Wichtige Hinweise

HORMANN

**HORMANN FIT 2-1 BiSecur Radio Internal Push Button** [pdf] Instruction Manual  
FIT 2-1 BiSecur Radio Internal Push Button, FIT 2-1 BiSecur, Radio Internal Push Button, Internal Push Button, Push Button, Button

References

-  [hoermann-docs.com/277130](https://hoermann-docs.com/277130)