



HORMANN UFR3 Remote Control Compatible with Bisecur Transmitters User Manual

[Home](#) » [HORMANN](#) » HORMANN UFR3 Remote Control Compatible with Bisecur Transmitters User Manual 

HORMANN UFR3 Remote Control Compatible with Bisecur Transmitters



Contents

1 METHOD OF PROGRAMMING

2 RESET:

3 Documents / Resources

4 Related Posts

METHOD OF PROGRAMMING

Important! Before proceeding with programming, reset the remote with the procedure given below

1. Press the button on the UFR3 you want to write the code from the original remote control, keep it pressed, and press any of the other buttons 3 times until the LED turns red for 10s, then release all buttons.
2. Place the original remote to the left of the UFR3, as close as possible.
3. Press and hold the button you want to copy from on the original remote until the LED starts flashing red and blue alternately, check if the UFR3's LED is flashing blue, if not, try moving it closer to the original remote
4. The programming procedure will be completed when the UFR3 starts flashing blue rapidly, release all buttons.
5. Do the same procedure for the remaining buttons.

RESET:

1. Each button on the UFR3 is assigned a new RF code using the following steps.
2. Remove the battery for 10 seconds
3. Press a button on the remote control and hold it 3. Insert the battery LED flashes blue slowly for 4 sec., LED flashes blue fast for 2 sec., LED lights blue for a long time
4. When releasing the remote control button, all codes are replaced with new ones


Note: If the remote button is released prematurely, no new codes will be assigned.

868MHZ FIXED CODE REMOTE SETUP:

If you continue to press the remote button after the reset step, the 868Mhz fixed code will be activated. LED flashes red slowly for 4s LED flashes red fast for 2s LED lights red for a long time All new RF codes have been assigned.

If the remote control button is released prematurely, the BiSecur radio code will remain active.

Documents / Resources

 <p>UFR3 remote control compatible with Hormann BiSecur Transmitters</p> <p>METHOD OF PROGRAMMING:</p> <p>Important! Before proceeding with programming, reset the remote with the procedure given below</p> <ol style="list-style-type: none">1. Press the button on the UFR3 you want to write the code from the original remote control, keep it pressed, and press any of the other buttons 3 times until the LED turns red for 10s, then release all buttons.2. Place the original remote to the left of the UFR3, as close as possible.3. Press and hold the button you want to copy from on the original remote until the LED starts flashing red and blue alternately, check if the UFR3's LED is flashing blue, if not, try moving it closer to the original remote4. The programming procedure will be completed when the UFR3 starts flashing blue rapidly, release all buttons.5. Do the same procedure for the remaining buttons.	<p>HORMANN UFR3 Remote Control Compatible with Bisecur Transmitters [pdf] User Manual</p> <p>UFR3 Remote Control Compatible with Bisecur Transmitters, UFR3, Remote Control Compatible with Bisecur Transmitters, Remote Control, Control, Remote, Bisecur Transmitters, Transmitters, Bisecur</p>
---	--